

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Wilton](#) /
- › [Wilton Rugrats Cake Pan Instruction Manual](#)

Wilton B087YTHTGL

Wilton Rugrats Cake Pan Instruction Manual

PRODUCT OVERVIEW

This manual provides essential instructions for the safe and effective use of your Wilton Rugrats Cake Pan. Designed for creating themed cakes, this durable metal pan is suitable for various baking needs.



Image: The Wilton Rugrats Cake Pan, showcasing the distinct character molds for baking themed cakes.

INITIAL SETUP AND PREPARATION

Before first use, and after each subsequent use, proper preparation ensures optimal baking results and pan longevity.

- Cleaning:** Wash the cake pan thoroughly with warm, soapy water. Rinse completely and dry immediately to prevent water spots or rust.
- Greasing and Flour:** For best results and to prevent sticking, generously grease the interior of the pan with shortening or butter. Then, lightly flour the greased surface, tapping out any excess flour. Alternatively, use a non-stick baking spray.
- Placement:** Ensure the pan is placed on a level surface in the oven to promote even baking.

BAKING INSTRUCTIONS

Follow these guidelines for baking with your Wilton Rugrats Cake Pan.

- **Oven Temperature:** This cake pan is oven safe up to 400°F (200°C). Always preheat your oven to the temperature specified in your recipe.
- **Filling the Pan:** Pour your cake batter into the prepared pan. Avoid overfilling; typically, fill the pan about two-thirds full to allow for rising.
- **Baking Time:** Refer to your specific cake recipe for recommended baking times. Baking times may vary based on oven calibration and recipe.
- **Doneness Test:** To check if the cake is done, insert a toothpick into the center. If it comes out clean, the cake is ready.
- **Cooling:** Once baked, remove the pan from the oven and let it cool on a wire rack for 10-15 minutes before inverting to release the cake. Allow the cake to cool completely before decorating.

CARE AND CLEANING

Proper care extends the life of your cake pan and maintains its non-stick properties.

- **Hand Wash Only:** This cake pan is designed for hand washing. It is **not** dishwasher safe.
- **Washing:** Wash with warm, soapy water using a soft sponge or cloth. Avoid abrasive cleaners, scouring pads, or metal utensils, as these can damage the finish.
- **Drying:** Dry the pan immediately and thoroughly after washing to prevent water spots and potential rust.
- **Storage:** Store in a dry place to prevent moisture buildup.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Cake Sticking to Pan:** Ensure the pan was thoroughly greased and floured (or sprayed with non-stick spray) before adding batter. Allow the cake to cool slightly in the pan before attempting to invert it.
- **Uneven Baking:** Verify your oven temperature with an oven thermometer. Ensure the pan is placed centrally on the oven rack and not too close to heating elements. Avoid opening the oven door frequently during baking.
- **Cake Edges are Too Brown:** Your oven may be too hot, or the pan might be too close to a heating element. Try reducing the oven temperature slightly or moving the pan to a different rack.

PRODUCT SPECIFICATIONS

Brand	Wilton
Model Number (ASIN)	B087YTHTGL
Material	Metal
Shape	Novelty (Rugrats character designs)
Special Feature	Decorative
Oven Safe	Yes, up to 400°F (200°C)
Dishwasher Safe	No
Product Care Instructions	Hand Wash
Item Weight	270 g
Approximate Parcel Dimensions	34 x 32.3 x 6.3 cm

WARRANTY INFORMATION

For specific warranty details regarding your Wilton Rugrats Cake Pan, please refer to the product packaging or contact Wilton customer support directly. Warranty terms and conditions may vary.

CUSTOMER SUPPORT

Should you require further assistance, have questions about your product, or need to report an issue, please visit the official Wilton website or contact their customer service department.

Official Wilton Website: www.wilton.com

