

OPPO Oppo Reno3 Pro

OPPO Reno3 Pro User Manual

Model: OPPO Reno3 Pro

INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient use of your OPPO Reno3 Pro smartphone. Please read this manual thoroughly before operating the device to ensure proper functionality and to avoid damage.

PRODUCT OVERVIEW

The OPPO Reno3 Pro is a high-performance smartphone featuring a 6.4-inch Super AMOLED display, 256GB of internal storage, 12GB of RAM, and a powerful Octa-core processor. It supports Dual-SIM functionality and operates on Android 10.



Figure 1: Front view of the OPPO Reno3 Pro, showing the display.



Figure 2: Back view of the OPPO Reno3 Pro, highlighting the camera array and brand logo.



Figure 3: Angled view of the OPPO Reno3 Pro, illustrating its design.



Figure 4: Side view of the OPPO Reno3 Pro, detailing button placement.

SETUP

1. SIM Card Installation

The OPPO Reno3 Pro supports Dual-SIM functionality. Use the provided SIM ejector tool to open the SIM tray located on the side of the device. Insert your Nano-SIM cards into the designated slots. Ensure the gold contacts face downwards. Reinsert the tray firmly until it clicks into place.

Important: This device is compatible with GSM networks only. It will NOT work with CDMA networks such as Verizon, Sprint, or US Cellular. Please verify network compatibility with your service provider before use.

2. Initial Power On

Press and hold the Power button (located on the right side) until the OPPO logo appears. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account sign-in.

OPERATING INSTRUCTIONS

1. Basic Navigation

- **Touchscreen Gestures:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Swipe left or right to access different home screens.
- **Notification Panel:** Swipe down from the top of the screen to access notifications and quick settings.

2. Dual SIM Management

Navigate to *Settings > SIM card & mobile data* to manage your two SIM cards. You can set a default SIM for calls, messages, and internet data, or choose to be prompted each time.

3. Camera Usage

Open the Camera application from the home screen. Tap the shutter button to take a photo. Swipe left or right on the screen to switch between different modes (e.g., Photo, Video, Portrait, Night). Tap the camera icon to switch between front and rear cameras.

4. Battery Management

The device is equipped with a 4025mAh non-removable battery. To optimize battery life:

- Reduce screen brightness.
- Disable Wi-Fi, Bluetooth, and GPS when not in use.
- Close background applications.
- Utilize Battery Saver mode in *Settings > Battery*.

Use the provided USB cable for charging. Avoid using non-original chargers to prevent damage.

MAINTENANCE

1. Cleaning

Gently wipe the screen and body of the phone with a soft, lint-free cloth. Avoid using harsh chemicals or abrasive materials. Do not expose the device to excessive moisture.

2. Software Updates

Regularly check for system updates to ensure optimal performance and security. Go to *Settings > Software Update* to check for and install available updates.

3. Storage Management

The device has 256GB of internal storage, expandable via microSDXC (dedicated slot). To manage storage, go to *Settings > Storage*. Regularly clear cache, delete unnecessary files, and uninstall unused applications to free up space.

TROUBLESHOOTING

Problem	Possible Solution
Device not powering on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds to force restart.

Problem	Possible Solution
Poor network signal	Check SIM card insertion. Ensure you are within GSM network coverage. Restart the device.
Applications crashing	Clear app cache (<i>Settings > Apps > [App Name] > Storage > Clear Cache</i>). Update the app or reinstall it.
Battery drains quickly	Refer to the Battery Management section. Reduce screen brightness, disable unused features, and close background apps.

If issues persist, contact customer support or visit an authorized service center.

SPECIFICATIONS

- Model:** OPPO Reno3 Pro
- Operating System:** Android 10, ColorOS 7
- Processor:** Mediatek MT6779V Helio P95 (12 nm), Octa-core (2x2.2 GHz Cortex-A75 & 6x2.0 GHz Cortex-A55)
- RAM:** 12GB
- Internal Storage:** 256GB (expandable via microSDXC dedicated slot)
- Display:** 6.4 inches Super AMOLED, 1080 x 2400 pixels, Corning Gorilla Glass 5
- Battery:** 4025mAh non-removable
- SIM:** Dual-SIM (Nano-SIM, dual stand-by)
- Network Compatibility:** GSM Only (2G, 3G, 4G/LTE FDD/TDD bands as specified in product description)
- Dimensions:** Approximately 59.06 x 1.97 x 1.97 inches
- Weight:** Approximately 1.1 pounds
- Color:** Midnight Black
- In the Box:** USB Cable

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official OPPO website. Keep your proof of purchase for warranty claims.

For further assistance, you may contact OPPO customer service.

© 2024 OPPO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B087YX32KP>

More documents and user manuals: **<https://manuals.plus/>**