

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Coby](#) /
- > [Coby TruFit Lightweight True Wireless Earbuds with Charging Case \(Black\) Instruction Manual](#)

### Coby CETW554

# Coby TruFit Lightweight True Wireless Earbuds Instruction Manual

Model: CETW554

## PRODUCT OVERVIEW

The Coby TruFit Lightweight True Wireless Earbuds (Model CETW554) offer a cable-free audio experience with Bluetooth 5.0 connectivity. Designed for comfort and a secure fit, these earbuds include a portable charging case for extended battery life, integrated music controls, and call functions. They are suitable for various activities, including sports and exercise.



## PACKAGE CONTENTS

---

- Coby TruFit Lightweight True Wireless Earbuds (Left and Right)
- Charging Case
- Multiple sizes of silicone eartips for a customized fit
- USB Charging Cable
- User Manual (this document)

## SETUP

---

### 1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case. The charging case holds two extra charges, providing up to 15 hours of total battery life for the earbuds.

- Place the earbuds into the charging case. Ensure they are seated correctly to initiate charging.
- Connect the charging case to a power source using a USB cable.
- Indicator lights on the case will show charging status. Refer to the case for specific light patterns.



Image: Earbuds in their charging case, illustrating the charging function and extended battery life.

### 2. Selecting the Right Eartips

For optimal sound quality and a secure fit, choose the eartip size that best fits your ears. The earbuds come with multiple sizes of silicone eartips. Properly fitted eartips also help with noise isolation.

- Gently remove the pre-installed eartips.
- Try different sizes until you find a snug and comfortable fit that creates a good seal in your ear canal.



Image: A man wearing the earbuds, highlighting the secure and comfortable fit for active use.

### 3. Pairing with a Bluetooth Device

The earbuds utilize Bluetooth 5.0 for stable and efficient wireless connection.

1. Ensure the earbuds are charged and placed in the charging case.
2. Open the charging case. The earbuds will automatically enter pairing mode (or remove them from the case if they don't auto-pair).
3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and turn Bluetooth on.
4. Select "Coby TruFit" from the list of available devices.
5. Once paired, the earbuds will automatically connect to your device when removed from the case.

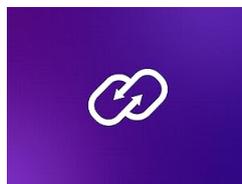


Image: Auto-pairing icon, symbolizing seamless device connection.

## OPERATING THE EARBUDS

### Music Controls

The integrated buttons on the earbuds allow for easy control of your audio playback.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up/Down:** (Specific gesture not provided, typically long press or triple tap, refer to quick start guide if

included).

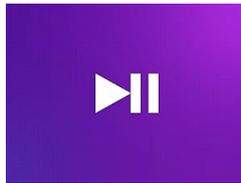


Image: Music control icon, indicating playback functionality.

## Call Functions

Manage calls with the built-in microphones and earbud controls.

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Long press on either earbud.
- **Activate Voice Assistant (Siri/Google Assistant):** (Specific gesture not provided, typically long press or triple tap, refer to quick start guide if included).

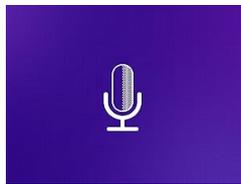


Image: Microphone icon, representing call functionality.

## Switching Between Devices

To switch between previously paired devices, disconnect the earbuds from the current device via its Bluetooth settings, then connect from the desired device.

## MAINTENANCE

---

### Cleaning the Earbuds and Eartips

Regular cleaning helps maintain sound quality and hygiene.

- Gently remove the silicone eartips from the earbuds.
- Clean the eartips with mild soap and water, then rinse thoroughly and allow them to air dry completely before reattaching.
- Wipe the earbuds with a soft, dry, lint-free cloth. Avoid using harsh chemicals or abrasive materials.
- Ensure no moisture enters the earbud openings.

### Charging Case Care

Keep the charging case clean and dry. Avoid exposing it to extreme temperatures or liquids.

## TROUBLESHOOTING

---

### Earbuds Not Pairing or Connecting

- Ensure both earbuds are charged.
- Place both earbuds back into the charging case, close the lid, wait a few seconds, then open the lid and remove them. This often resets the connection.
- Turn off Bluetooth on your device, then turn it back on.
- Forget "Coby TruFit" from your device's Bluetooth settings and attempt to pair again.

- Ensure no other Bluetooth devices are interfering with the connection.

## One Earbud Not Charging

- Check that the earbud is correctly seated in the charging case. Sometimes a slight adjustment is needed.
- Clean the charging contacts on both the earbud and inside the case with a dry cotton swab.
- Ensure the charging case itself has sufficient battery charge.

## Intermittent Connectivity or Audio Dropouts

- Maintain a close proximity between your device and the earbuds (within 10 meters/33 feet).
- Avoid placing obstacles (like walls or large objects) between your device and the earbuds.
- Minimize interference from other wireless devices (Wi-Fi routers, other Bluetooth devices).
- Ensure your device's operating system is up to date.

## Earbuds Falling Out or Uncomfortable Fit

- Experiment with all provided eartip sizes to find the most secure and comfortable fit for your ears.
- Ensure the earbuds are inserted correctly into your ear canal with a slight twist to secure them.

## SPECIFICATIONS

<b>Model Number</b>	CETW554
<b>Connectivity Technology</b>	Bluetooth 5.0
<b>Wireless Range</b>	Up to 10 meters (33 feet)
<b>Battery Life (Earbuds)</b>	Up to 7.5 hours (single charge)
<b>Total Battery Life (with Case)</b>	Up to 15 hours
<b>Included Components</b>	Charging Station (Case)
<b>Material</b>	Silicone (eartips)
<b>Item Weight</b>	1.9 ounces
<b>Product Dimensions</b>	3.5 x 1.5 x 6 inches
<b>Control Type</b>	Media Control, Remote
<b>Special Features</b>	Lightweight, Microphone Included, Sports and Exercise suitability, Wireless

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Coby website or contact their customer service directly. Details regarding product returns and replacements may also be available from your point of purchase.