

[Manuals.plus](#) /

› [Seckton](#) /

› Seckton Kids Selfie Camera Model X2 Instruction Manual

Seckton X2

Seckton Kids Selfie Camera Model X2 Instruction Manual

1. INTRODUCTION

Thank you for choosing the Seckton Kids Selfie Camera Model X2. This manual provides essential information for the safe and optimal use of your camera. Please read it thoroughly before operation and retain it for future reference.

2. WHAT'S IN THE BOX

Upon opening your package, please ensure all the following items are present:

- Seckton Kids Selfie Camera Model X2
- USB Charging Cable
- SD Card (pre-installed or separate)
- Card Reader
- Lanyard
- User Manual



Image: Contents of the Seckton Kids Selfie Camera package, including the camera, USB cable, SD card, manual, and neck sling.

3. PRODUCT FEATURES

The Seckton Kids Selfie Camera Model X2 is designed with several features to enhance a child's photography experience:

- **High-Resolution Capture:** Equipped with auto focus, 8.0 Mega pixels for photos, and 1080P video recording, ensuring clear images and videos.
- **Dual Camera Design:** Features an upgraded dual-camera configuration for easy selfie-taking.
- **Creative Modes:** Includes a 'Big head sticker shooting' function, allowing children to take photos with various frames and filters.
- **Portable and Durable:** Comes with a portable lanyard for easy carrying and features a shockproof shell made of high-quality soft plastic for enhanced durability and comfort.
- **Extended Battery Life:** The camera can continuously take photos for 1-2 hours on a full charge.
- **Additional Functions:** Integrated video recorder, voice recorder, and built-in puzzle games for diverse

Multi-functions



IPS screen



SELFIE FUNC



8.0mp



HD 1080



GAMES



Image: Overview of the camera's multi-functions, including IPS screen, selfie capability, 8.0MP resolution, HD 1080P video, and built-in games.

**This dual camera will
bring you an excellent
photographer**

**3.3*2.4*1.9 in
easy to carry**



Image: A child holding the compact Seckton Kids Camera, demonstrating its portability and dual camera feature for selfies.

4. SETUP

4.1 Charging the Camera

1. Locate the USB charging port on the side of the camera.
2. Connect the provided USB cable to the camera and the other end to a compatible USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the light may change color or turn off. Charging typically takes 1-2 hours.

4.2 Inserting the SD Card

1. Ensure the camera is powered off.
2. Locate the SD card slot on the side of the camera.
3. Gently insert the provided SD card into the slot with the metal contacts facing down until it clicks into place.

4. To remove, gently push the SD card inward until it springs out.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press and hold the power button (usually located on the top or side) for a few seconds to turn the camera on or off.

5.2 Taking Photos

1. Ensure the camera is in photo mode (indicated by an icon on the screen). Use the mode button to switch if necessary.
2. Aim the camera at your subject.
3. Press the shutter button (usually a larger button on top) to capture the photo.

5.3 Recording Videos

1. Switch the camera to video recording mode using the mode button.
2. Press the shutter button once to start recording. A timer or recording indicator will appear on the screen.
3. Press the shutter button again to stop recording.

5.4 Selfie Mode

The camera features a dual-lens design. To switch to the front-facing camera for selfies, locate the dedicated selfie button or navigate through the menu options.

5.5 Using Frames and Filters

In photo mode, use the navigation buttons to access the menu. Look for options related to 'Frames' or 'Filters' to apply creative effects to your pictures. The camera offers 28 funny frames and 6 color filters.

5.6 Playing Games

From the main menu, select the 'Games' icon to access the built-in puzzle games. Use the navigation buttons to play.

5.7 Time-Lapse Function

Access the settings menu to find the time-lapse options (2s, 5s, 10s timer). Select your desired delay before taking a photo.



Image: The camera's 8 million pixel lens and examples of creative frames that can be applied to photos.

Your browser does not support the video tag.

Video: A demonstration of the Seckton Kids Camera's menu navigation and basic functions, including taking photos and accessing features.

Your browser does not support the video tag.

Video: A review highlighting the features and ease of use of the Seckton Kids Camera, demonstrating its appeal for young children.

6. MAINTENANCE

6.1 Cleaning

To clean the camera, use a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the camera's surface or internal components.

6.2 Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the camera is powered off before storing.

6.3 Battery Care

To prolong battery life, charge the camera regularly, even if not in frequent use. Avoid fully discharging the battery for extended periods. Do not expose the battery to fire or extreme heat.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on	Low battery; Camera frozen	Charge the camera fully. If frozen, press and hold the power button for 10 seconds to force a restart.
Cannot take photos/videos	SD card full or not inserted correctly; Camera mode incorrect	Check if the SD card is inserted properly and has sufficient space. Format the SD card if necessary (this will erase all data). Ensure the camera is in the correct photo or video mode.
Poor image/video quality	Insufficient lighting; Dirty lens	Ensure adequate lighting. Clean the camera lens with a soft, dry cloth.
Screen is blank or flickering	Low battery; Software issue	Charge the camera. If the issue persists, try restarting the camera.

8. SPECIFICATIONS

Feature	Specification
Model Name	X2
Photo Sensor Resolution	8 MP
Video Resolution	1080p
Screen Size	2 Centimeters (Display Type: OLED)
Optical Zoom	8 x
Image Stabilization	Digital
Supported File Format	JPEG (Image), MP4 (Video)
Memory Storage Capacity	8 GB (Internal), supports up to 32 GB Micro SD
Battery Cell Type	Polymer (Rechargeable)
Connectivity Technology	USB
Special Feature	Shockproof
Item Weight	6.74 ounces

9. WARRANTY AND SUPPORT

The Seckton Kids Selfie Camera Model X2 comes with a standard manufacturer's warranty. For specific warranty details, claims, or technical support, please refer to the contact information provided on the product packaging or the official Seckton website. Please retain your proof of purchase for warranty services.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B087ZTH98B>

More documents and user manuals: <https://manuals.plus/>