

[Manuals.plus](#) /

› [CROWN SHADES](#) /

› CROWN SHADES 10x10 Pop Up Canopy Instruction Manual (Model: B0882V15J6)

CROWN SHADES B0882V15J6

CROWN SHADES 10x10 Pop Up Canopy Instruction Manual

Model: B0882V15J6

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your CROWN SHADES 10x10 Pop Up Canopy, designed for easy outdoor sun shade. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

SAFETY INFORMATION

Handle the steel frame with care during assembly, disassembly, and transportation. Ensure the canopy is properly secured during use and avoid overloading the canopy with more than the recommended weight limit. Always secure the canopy with stakes and guy ropes, especially in windy conditions. Do not use in severe weather conditions such as heavy rain, strong winds, or snow. Keep away from open flames and heat sources.

PACKING LIST

Before beginning assembly, verify that all components are present:

- 1x Steel Frame
- 1x Cover Bag (with integrated wheels)
- 1x Canopy Top (Red, Silver Coated)
- 4x Guy Ropes
- 4x Empty Sandbags
- 1x Repair Patch
- 8x Spikes
- 1x Hexagon Spanner

PACKING LIST



1x Steel Frame




1x Cover Bag



4x Guy Ropes



4 x Empty Sandbags

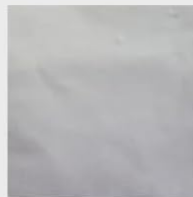

1x Repair Patch



8 x Spikes+
1 x Hexagon Spanner



1x Canopy Top

Image: Contents of the CROWN SHADES 10x10 Pop Up Canopy package, including the folded steel frame, cover bag, canopy top, guy ropes, sandbags, repair patch, spikes, and hexagon spanner.

SETUP INSTRUCTIONS

The CROWN SHADES 10x10 Pop Up Canopy features a patented one-push center lock technology for quick and easy setup.

1. Step 1: Open the Canopy Frame

With two people, grasp two opposite outer legs of the folded frame. Slowly pull the frame outwards, partially expanding it. Do not fully extend the legs yet.



Image: Visual guide for the three main setup steps: expanding the frame, placing the canopy top and engaging the center lock, and adjusting the leg height.

2. Step 2: Attach the Canopy Top and Engage Center Lock

Unfold the canopy fabric and place it over the partially expanded frame. Ensure the corners of the fabric align with the frame's corners. Locate the patented one-push center lock mechanism in the middle of the frame. Push the central hub upwards until it locks the poles in place. The new clip system allows for easy attachment of the canopy fabric to the frame, securing it in seconds.



CENTERLOK®

1 Person assembly in 1 minute or less!



STO'N GO

Make transportaion a breeze !

Image: Detailed view of the CENTERLOK mechanism, highlighting its function for quick and easy assembly.

VENTED TOP

Stay Cool Without Compromising Shelter.



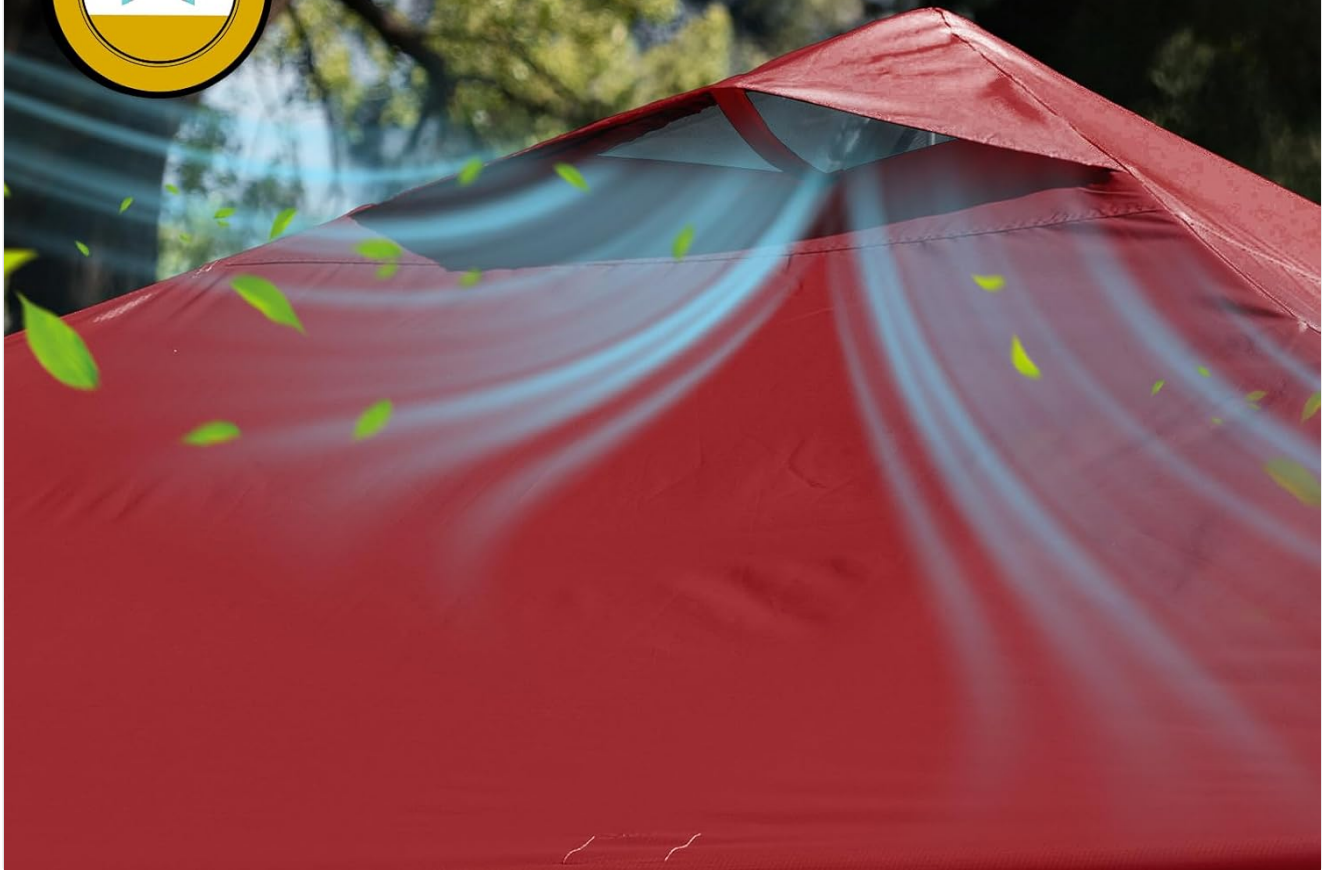


Image: Illustration of the Fast Clip system, demonstrating how to secure the canopy fabric to the frame quickly and effectively.


3. Step 3: Extend Legs and Adjust Height

Extend each leg downwards until it clicks into place. The canopy features three adjustable height settings with soft, pinch-free buttons. Press the button on each leg to select your desired height. Ensure all legs are set to the same height for stability.

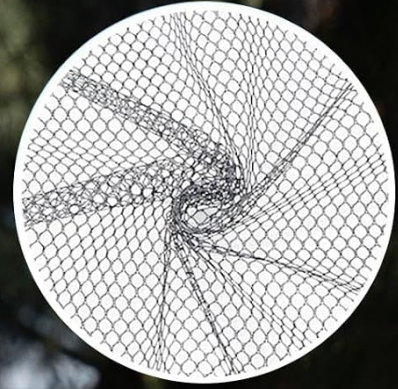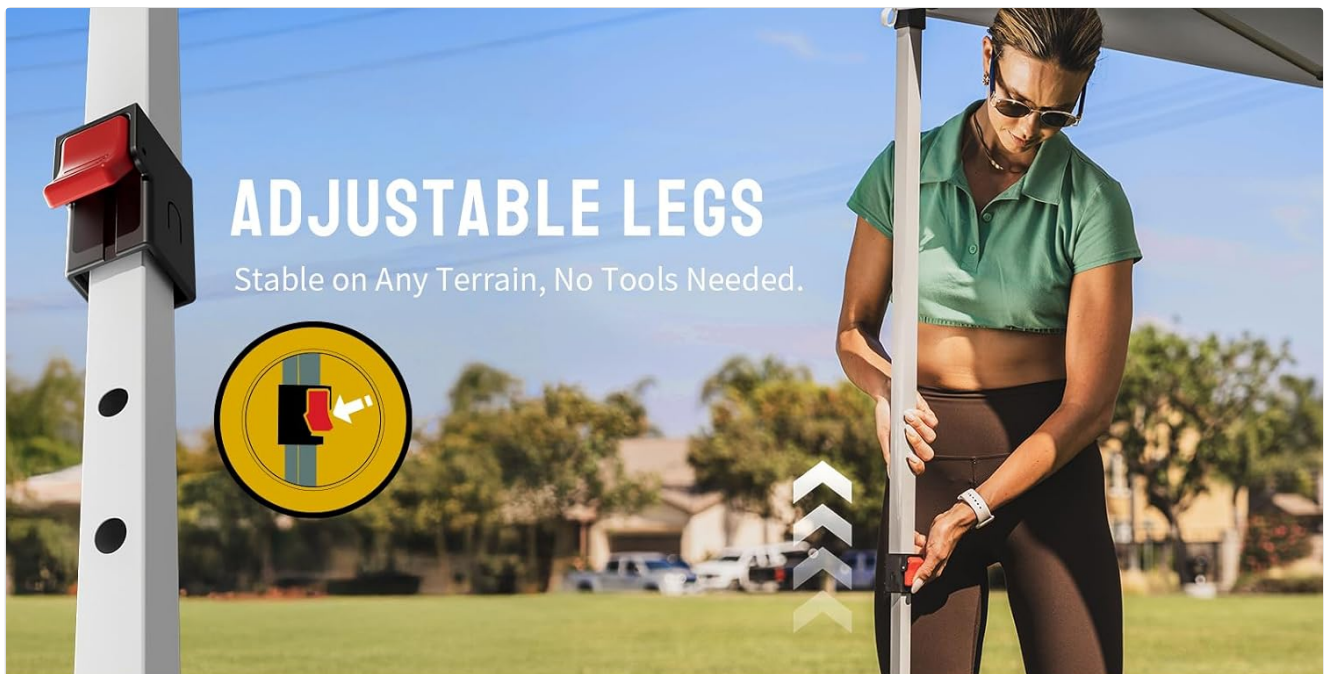

ADJUSTABLE LEGS

Stable on Any Terrain, No Tools Needed.

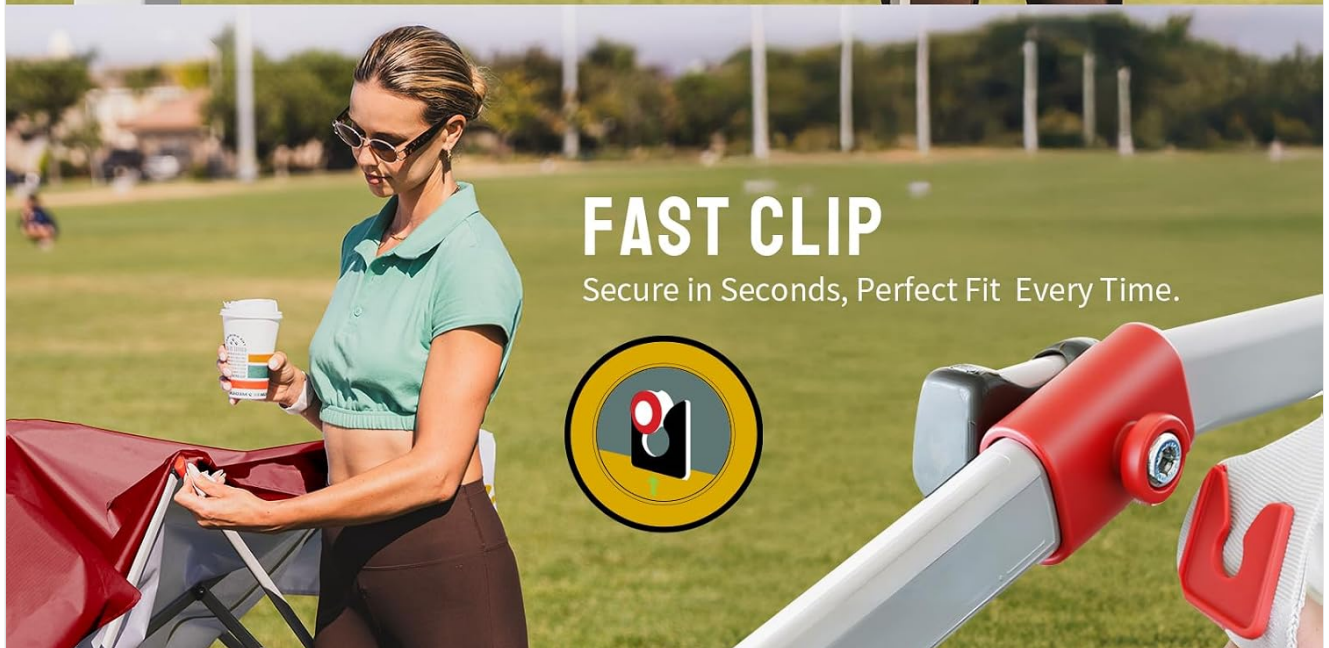

FAST CLIP

Secure in Seconds, Perfect Fit Every Time.

Image: A person adjusting the height of a canopy leg using the push-button mechanism, illustrating the adjustable leg feature.

4. Step 4: Secure the Canopy

For optimal stability, especially in outdoor conditions, utilize the included sandbags, stakes, and guy ropes. Fill the empty sandbags with sand and attach them to the canopy legs. Use the spikes to anchor the canopy feet to the ground and attach the guy ropes to the canopy corners, securing them to the ground with additional stakes. This prevents wind lift and enhances overall stability.



Image: A close-up view of an anchoring spike driven into the ground next to a tent leg, demonstrating how to secure the canopy.

OPERATING INSTRUCTIONS

Adjusting Height

To adjust the canopy height, press the pinch-free buttons on each leg and slide the inner leg to one of the three available height settings. Ensure all legs are adjusted to the same level for a stable setup.

Transporting with STO' N GO System

The STO' N GO system allows for easy collapsing, storing, and transporting. The canopy can be stored with the fabric attached. The cover bag has integrated wheels, allowing you to easily roll the folded canopy. For movement when set up, simply lift the side without wheels and roll it to the desired location.

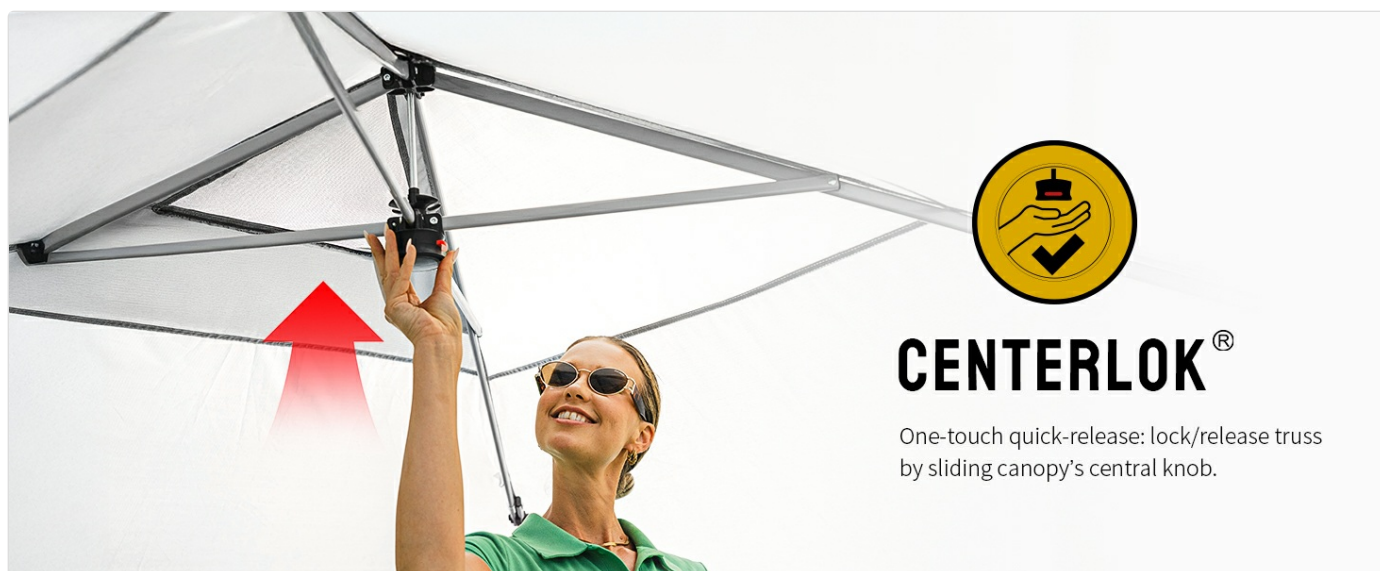 


Image: A person effortlessly transporting the folded canopy using its integrated wheeled cover bag, demonstrating the STO'N GO system.

Vented Top for Airflow

The canopy features a vented top design to ensure proper airflow and temperature control, enhancing comfort underneath the shade.

READY FOR ANY ADVENTURE



BACKYARD 



CAMPING 



BEACH 



VENDING 

Image: A detailed view of the canopy's vented top, showing the mesh opening designed for air circulation.

MAINTENANCE

Cleaning the Canopy Fabric

The canopy top is made from rugged 150D fabric with a silver-coated interior, providing UPF 50+ UV protection and water resistance. To clean, gently wipe with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Allow the fabric to air dry completely before folding and storing to prevent mildew.

Frame Care

The frame is constructed from durable, high-grade, corrosion-resistant steel. Periodically inspect the frame for any signs of damage or wear. Clean any dirt or debris from the frame using a damp cloth. Ensure all moving parts operate smoothly.

Storage

When not in use, collapse the canopy using the STO' N GO system and store it in its cover bag. Keep the canopy in a dry, cool place away from direct sunlight to prolong its lifespan.

TROUBLESHOOTING

- **Issue: Canopy is unstable or sways in light wind.**
Solution: Ensure all legs are fully extended and locked at the same height. Always use the provided sandbags, stakes, and guy ropes to secure the canopy to the ground. For gusty conditions, consider additional weights.
- **Issue: Water pooling on the canopy top during rain.**
Solution: The canopy is designed with an upgraded high peak to facilitate rainwater runoff. Ensure the canopy fabric is properly stretched and secured with the Fast Clips to prevent sagging. If pooling occurs, gently push up from underneath to release accumulated water.
- **Issue: Difficulty collapsing the frame.**
Solution: Ensure the center lock mechanism is disengaged. Press the buttons on the legs to retract them to their lowest setting before attempting to fully collapse the frame. Refer to the STO' N GO system instructions.

SPECIFICATIONS

Feature	Detail
Brand	CROWN SHADES
Material	Alloy Steel, Polyester (150D fabric)
Color	Red
Item Weight	36 Pounds
Product Dimensions (Packed)	45”L x 8.5”W x 8.5”H (approx.)
Product Dimensions (Set Up)	10'L x 10'W x up to 9'8"H
Ultraviolet Light Protection	UPF 50+ (95%)
Water Resistance Level	Water Resistant
Floor Area	100 Square Feet
Occupancy	Up to 10 people (comfortably 6)
Assembly Required	No (pre-assembled frame)

OUR PRODUCT SIZE



Image: Product dimensions for both the set-up canopy (10x10 feet with 3 height levels) and its compact packed size (45" x 8.5" x 8.5").

WARRANTY AND SUPPORT

For warranty information or customer support, please contact CROWN SHADES directly through their official website or the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question