

[Manuals.plus](#) /

› [Eboxer](#) /

› Eboxer Mini Vintage Retro Bluetooth Speaker FT 05U User Manual

Eboxer FT 05U

Eboxer Mini Vintage Retro Bluetooth Speaker FT 05U User Manual

Model: FT 05U

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Eboxer Mini Vintage Retro Bluetooth Speaker, model FT 05U. This portable speaker combines a classic aesthetic with modern Bluetooth technology, offering a unique audio experience. Please read this manual thoroughly before operating the device.



Figure 1: Eboxer Mini Vintage Retro Bluetooth Speaker (Walnut color)

2. PRODUCT OVERVIEW

2.1. Package Contents

Ensure all items are present in the package:

- Eboxer Mini Vintage Retro Bluetooth Speaker
- User Manual (this document)
- Data Cable (for charging)

2.2. Device Features

- Retro design with modern Bluetooth connectivity.
- Compact and lightweight for portability.
- Built-in rechargeable battery for extended use.
- Supports plug-in card (TF card) for direct music playback.
- Compatible with smartphones, tablets, laptops, desktops, and televisions.

2.3. Controls and Ports

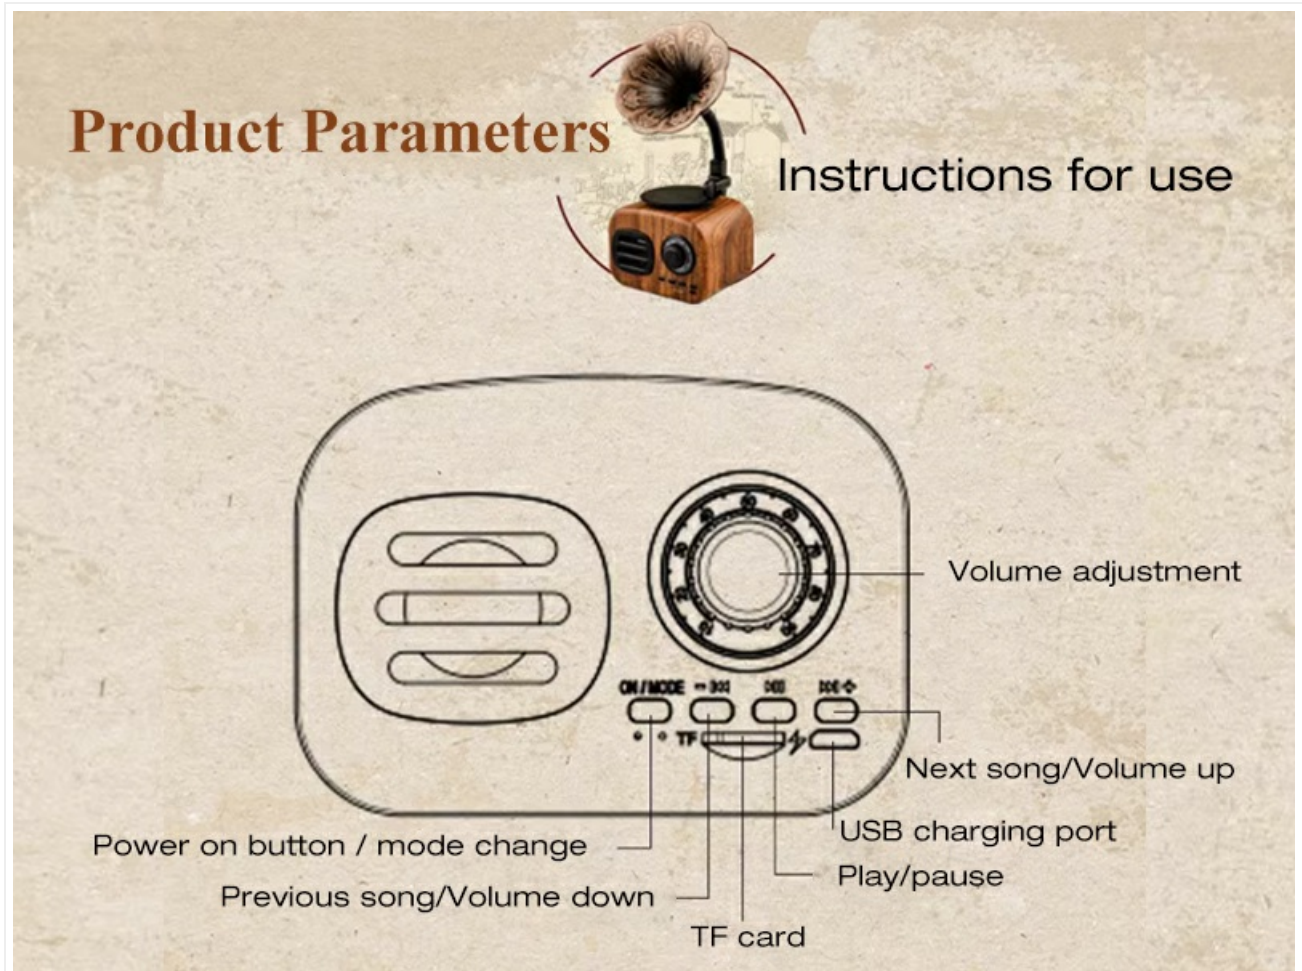


Figure 2: Control Panel and Ports Layout

Refer to Figure 2 for the location of the following controls and ports:

- **Volume Adjustment Knob:** Rotate to increase or decrease volume.
- **ON/MODE Button:** Press and hold to power on/off. Short press to switch between modes (Bluetooth, TF Card).
- **Previous Song / Volume Down Button:** Short press for previous track. Long press to decrease volume.
- **Play/Pause Button:** Short press to play or pause music.
- **Next Song / Volume Up Button:** Short press for next track. Long press to increase volume.
- **TF Card Slot:** Insert a TF (MicroSD) card for direct music playback.
- **USB Charging Port:** Connect the provided data cable for charging.
- **AUX Port:** For wired audio input (cable not included).

3. SETUP

3.1. Initial Charging

Before first use, fully charge the speaker. Connect the provided USB data cable to the speaker's USB charging port and

the other end to a 5V USB power adapter (not included) or a computer's USB port. The charging time is approximately 2.5 hours.



Figure 3: Speaker with long battery life indication

A full charge provides approximately 6 hours of playback, depending on volume level.

3.2. Powering On/Off

Press and hold the **ON/MODE** button for a few seconds to power the speaker on or off.

4. OPERATING INSTRUCTIONS

4.1. Bluetooth Pairing

1. Ensure the speaker is powered on and in Bluetooth mode. If not, short press the **ON/MODE** button to switch to Bluetooth mode. The speaker will indicate it is ready for pairing (e.g., a blinking LED or an audible prompt).
2. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "FT 05U" (or similar name) from the list of found devices.
4. Once paired, the speaker will confirm the connection (e.g., a solid LED or an audible prompt). You can now play audio from your device through the speaker.



Figure 4: Bluetooth 5.0 Connection

The Bluetooth range is approximately 10 meters (33 feet) in an open environment.

4.2. TF Card Playback

1. Insert a TF (MicroSD) card containing MP3 audio files into the TF Card Slot.
2. The speaker will automatically switch to TF Card mode and begin playing music. If it does not switch automatically, short press the **ON/MODE** button to cycle through modes until TF Card mode is active.
3. Use the **Previous Song / Volume Down** and **Next Song / Volume Up** buttons for track navigation.
4. Use the **Play/Pause** button to pause or resume playback.

Support plug-in card

Wide compatibility, supporting a variety of compatible modes.



Figure 5: TF Card Playback Feature

4.3. AUX Input

Connect an audio device directly to the speaker using a 3.5mm AUX cable (not included) via the AUX port. The speaker will automatically switch to AUX mode. If not, short press the **ON/MODE** button to switch modes.

4.4. Volume Control

Rotate the **Volume Adjustment Knob** clockwise to increase volume and counter-clockwise to decrease volume.

Alternatively, long press the **Next Song / Volume Up** button to increase volume or the **Previous Song / Volume Down** button to decrease volume.

5. MAINTENANCE

- Keep the speaker dry. Do not expose it to water or excessive moisture. The speaker is not waterproof.
- Clean the speaker with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Avoid extreme temperatures. Store the speaker in a cool, dry place.
- Do not disassemble the speaker. This will void the warranty and may cause damage.
- Charge the speaker regularly, even if not in use, to maintain battery health.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is depleted.	Charge the speaker using the provided USB cable.
No sound.	Volume is too low or muted. Incorrect mode selected. Device not paired.	Increase volume using the knob or buttons. Ensure correct mode (Bluetooth, TF Card, AUX) is selected. Re-pair Bluetooth device.
Bluetooth pairing fails.	Speaker is not in pairing mode. Device is out of range. Interference.	Ensure speaker is in Bluetooth pairing mode. Move device closer to speaker (within 10m). Turn off other Bluetooth devices.
TF card not playing.	Card inserted incorrectly. Card not supported. Files not compatible.	Reinsert TF card correctly. Ensure card is formatted correctly and contains compatible audio files (e.g., MP3).

7. SPECIFICATIONS

Feature	Detail
Model Name	FT 05U
Brand	Eboxer
Connectivity Technology	Bluetooth
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Speaker Type	Portable
Speaker Maximum Output Power	5 Watts
Audio Output Mode	Stereo
Signal-to-Noise Ratio	65 dB
Frequency Response	45 Hz
Power Source	Battery Powered

Feature	Detail
Battery Capacity	1200 mAh
Charging Time	2.5 Hours
Input Voltage	5 Volts
Material	Plastic
Product Dimensions (D x W x H)	2.4" x 3.7" x 2.8"
Item Weight	15.1 ounces
Is Waterproof	No



Figure 6: Product Dimensions

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the retailer's policy or contact Eboxer customer service directly. Keep your purchase receipt for any warranty claims.

Manufacturer: Eboxer

