

Eono CCX-W1S

Eono Eonobuds 1 Wireless Bluetooth Earbuds User Manual

Model: CCX-W1S

1. INTRODUCTION

Thank you for choosing the Eono Eonobuds 1 Wireless Bluetooth Earbuds. These in-ear headphones are designed to provide clear sound, IPX7 waterproofing, and convenient USB-C charging, making them suitable for various activities including work and home office use. This manual will guide you through the setup, operation, maintenance, and troubleshooting of your new earbuds.



Figure 1: Eono Eonobuds 1 Wireless Bluetooth Earbuds (Blue)

2. PACKAGE CONTENTS

Ensure all items are present in your package:

- 2 x Wireless Earbuds (Left and Right)
- 1 x Charging Case
- 1 x USB-C Charging Cable
- 3 x Pairs of Eartips (Sizes S/M/L)
- 1 x User Manual



Figure 2: Contents of the Eonobuds 1 package.

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your Eonobuds 1:

- **Multi-function Button:** Located on the outer surface of each earbud for controlling playback, calls, and voice assistant.
- **Charging Contacts:** Small metal pins on the earbuds that connect with the charging case.
- **LED Power Display:** On the charging case, indicates the battery level.
- **USB-C Charging Port:** Located on the charging case for power input.

CVC Noise Reduction

クリアな通話を実現

Makes the call clearer and ensures a smoother
CVCノイズキャンセリング搭載



Figure 3: Earbud components including multi-function button and charging contacts.

Handy LED battery level display

LEDバッテリー残量表示

so you always know when it's time to recharge

いつでも充電ケースのバッテリーの残量が把握可能



Figure 4: Charging case with LED battery level display.

4. SETUP AND FIRST USE

4.1 Charging the Earbuds and Case

For optimal performance, fully charge the earbuds and charging case before first use.

- Place the earbuds into the charging case.
- Connect the USB-C cable to the charging port on the case and to a power source.
- The LED display on the case will show the charging progress.
- A full charge provides up to 4.5 hours of listening time for the earbuds, and the charging case extends total usage to up to 24 hours.
- A quick 15-minute charge can provide up to 1.5 hours of listening time.

Instant connection

瞬時接続

As long as the wireless earphones are taken out of the charging case, they will automatically connect to the last paired device.

充電ケースからワイヤレスイヤホンを取り出すだけで、最後にペアリングされた機器に自動的に接続します。



Figure 5: Charging the Eonobuds 1 case via USB-C.

4.2 Pairing with Your Device

The Eonobuds 1 utilize Bluetooth 5.2 for a stable and fast connection.

1. Take both earbuds out of the charging case. They will automatically enter pairing mode. One earbud will flash a blue light, and the other will show no light, indicating successful internal pairing.
2. On your smartphone or Bluetooth-enabled device, go to the Bluetooth settings.
3. Turn on Bluetooth.
4. Search for "Eonobuds 1" in the list of available devices.
5. Select "Eonobuds 1" to connect. Once connected, the earbuds will stop flashing.

Advanced graphene drivers

高音質ステレオ

Create a wider soundstage for pitch-perfect crystal-clear music

パワフル&クリアなサウンドを楽しめ

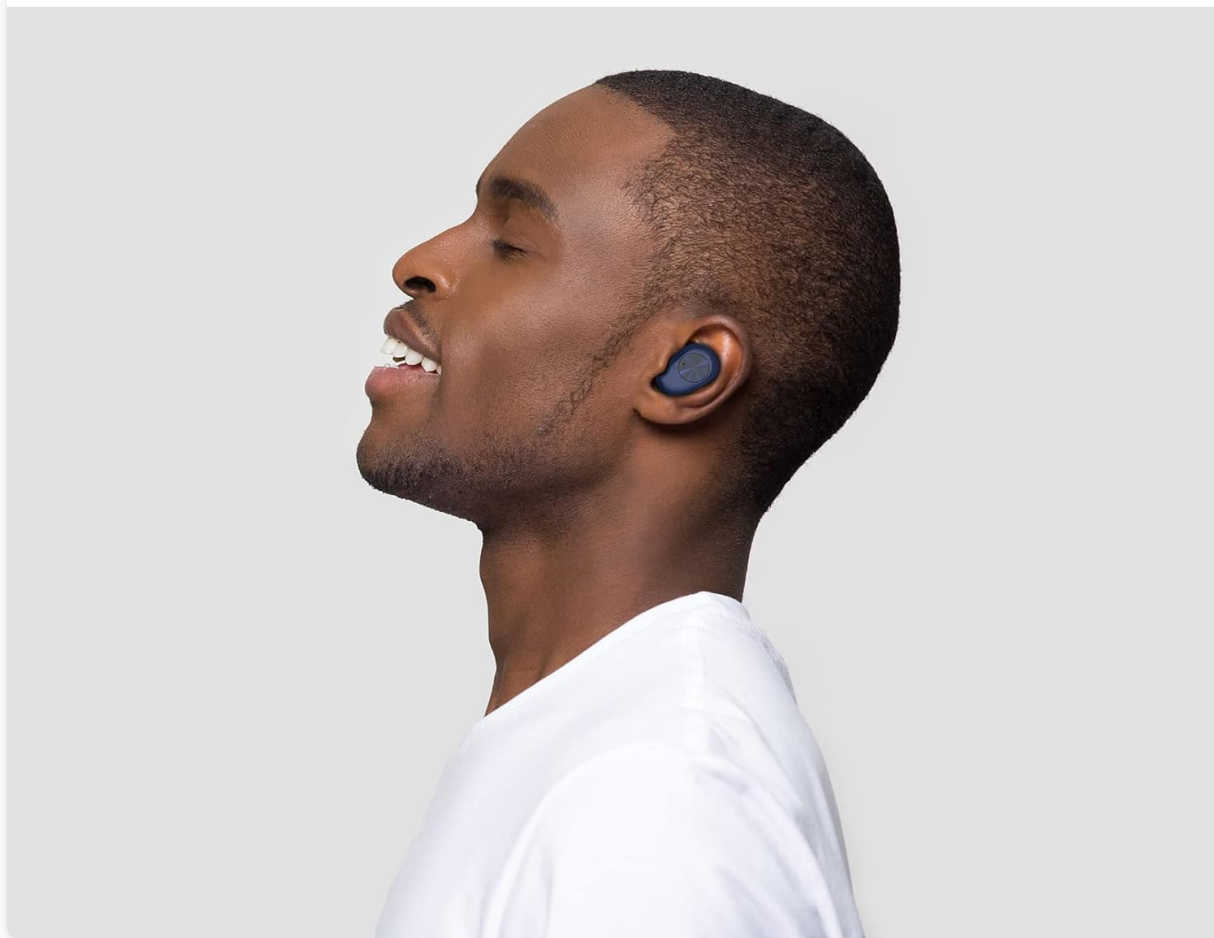


Figure 6: Earbuds in pairing mode, one flashing blue light.

5. OPERATING INSTRUCTIONS

5.1 Multi-function Button Controls

Each earbud features a multi-function button for easy control:

Function	Action
Play/Pause	Single touch on either the Left (L) or Right (R) earbud.
Volume Up	Double touch on the Left (L) earbud.
Volume Down	Double touch on the Right (R) earbud.
Activate Voice Assistant (Siri/Google Assistant)	Long-press for 2 seconds on either the Left (L) or Right (R) earbud.
Skip Forward (Next Track)	Long-press for 4 seconds on the Right (R) earbud.
Skip Back (Previous Track)	Long-press for 4 seconds on the Left (L) earbud.

Function	Action
Answer/End Call	Single touch on either the Left (L) or Right (R) earbud.
Reject Call	Long-press for 2 seconds on either the Left (L) or Right (R) earbud.

5.2 Wearing the Earbuds

The Eonobuds 1 are designed for ergonomic comfort. Choose the eartip size (S, M, L) that best fits your ear canal for a secure and comfortable fit, and optimal sound quality.

<p>Up to 4 hr.</p> <p>約 4 時間 of listening time on one charge イヤホン本体</p>	<p>More than 24 hr.</p> <p>約 24 時間 of battery life with charging case イヤホン + 充電ケース</p>	<p>Only 15 min.</p> <p>15分間の充電 約1.5時間利用可能 of charging provides up to 1.5 hours of listening time USB-C急速充電機能</p>
---	--	--



Figure 7: Proper wearing of the Eonobuds 1.

6. MAINTENANCE AND CARE

6.1 Water Resistance (IPX7)

Your Eonobuds 1 are IPX7 waterproof, meaning they can withstand immersion in water up to 1 meter for 30 minutes. They are resistant to sweat and rain, making them suitable for workouts and outdoor activities. However, the charging case is **not** waterproof. Do not put the charging case into water.

IPX7 Watherproof

IPX7 防水仕様

Enjoy without a care, even while you sweat away in the gym

汗や雨も安心に利用可能



Figure 8: Earbuds demonstrating IPX7 water resistance.

6.2 Cleaning

Regularly clean your earbuds and charging case to maintain performance and hygiene:

- Use a soft, dry, lint-free cloth to wipe the earbuds and charging case.
- Remove eartips and clean them with mild soap and water, then dry thoroughly before reattaching.
- Gently clean the charging contacts on both the earbuds and the case with a dry cotton swab to ensure proper charging.

6.3 Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Avoid extreme temperatures and direct sunlight.

7. TROUBLESHOOTING

7.1 Factory Reset

If you experience pairing issues or other malfunctions, a factory reset may resolve the problem:

1. Take both earbuds out of the charging case.

2. Long-press both earbud multi-function buttons simultaneously for 12 seconds. The earbuds will sound "power on" - "pairing mode" - "dengdeng" - "dengdeng".
3. Release the buttons and place both earbuds back into the charging case.
4. On your device, go to Bluetooth settings, find "Eonobuds 1", and select "Forget This Device" or "Ignore" to remove the previous pairing. Then turn off your device's Bluetooth.
5. Turn on your device's Bluetooth again.
6. Take both earbuds out of the charging case. They will automatically enter pairing mode.
7. Search for "Eonobuds 1" and click to connect.

7.2 Common Issues

- **Earbuds not charging:** Ensure the charging contacts on both earbuds and case are clean and dry. Check the USB-C cable and power source.
- **Only one earbud working:** Try placing both earbuds back into the case, then taking them out again. If the issue persists, perform a factory reset.
- **Connection drops:** Ensure your device is within the Bluetooth range (up to 15 meters). Avoid obstacles that may interfere with the signal.

8. SPECIFICATIONS

Feature	Detail
Brand	Eono
Model Name	Eonobuds 1
Model Number	CCX-W1S
Connectivity Technology	Wireless (Bluetooth 5.2)
Form Factor	True Wireless, In-Ear
Earbud Battery Capacity	45mAh
Charging Case Battery Capacity	500mAh
Earbud Listening Time (Single Charge)	Up to 4.5 hours
Total Listening Time (with Charging Case)	Up to 24 hours
Quick Charge	15 minutes charge for 1.5 hours playback
Charging Port	USB-C
Water Resistance Rating	IPX7 (Earbuds only)
Headset Dimensions	23 x 15.6 x 21 mm
Charging Case Dimensions	60 x 37.3 x 28 mm
Noise Reduction	CVC Technology for clearer calls

Feature	Detail
Compatible Variants	This manual applies to all CCX-W1S variants, including CCX-W1S-white .

9. WARRANTY AND SUPPORT

Your Eono Eonobuds 1 come with a manufacturer's warranty for 12 months from the date of purchase. For any support inquiries, please contact our dedicated email support, available 24 hours.
