

[Manuals.plus](#) /

> [Eono](#) /

> Eono Eonobuds 1 Wireless Earbuds User Manual

## Eono Eonobuds 1 (CCX-W1S-pink)

# Eono Eonobuds 1 Wireless Earbuds User Manual

Model: CCX-W1S-pink

## INTRODUCTION

Thank you for choosing the Eono Eonobuds 1 Wireless Earbuds. These Bluetooth earphones are designed to provide clear sound, IPX7 waterproof protection, and convenient USB-C charging, making them ideal for work, home, or office use. This manual provides detailed instructions on how to set up, operate, and maintain your earbuds to ensure optimal performance and longevity.

## WHAT'S IN THE BOX

Upon opening your Eonobuds 1 package, please verify that all the following components are included:

- 2 x Wireless Earbuds (Left and Right)
- 1 x Charging Case
- 1 x USB-C Charging Cable
- 3 x Pairs of Eartips (Sizes: Small, Medium, Large)
- 1 x User Manual
- 1 x Quick Guide



Figure 1: Package Contents of Eono Eonobuds 1 Wireless Earbuds.

## PRODUCT OVERVIEW

---

The Eonobuds 1 feature a compact and ergonomic design for comfortable wear. The charging case not only protects your earbuds but also provides additional battery life on the go.



Figure 2: Eonobuds 1 Earbuds and Charging Case.

The charging case is equipped with an LED display to indicate the battery level, ensuring you always know when it's time to recharge.

## Handy LED battery level display

LEDバッテリー残量表示

so you always know when it's time to recharge

いつでも充電ケースのバッテリーの残量が把握可能



Figure 3: Handy LED Battery Level Display on Charging Case.

## SETUP

### 1. Initial Charging

Before first use, fully charge both the earbuds and the charging case. Connect the provided USB-C cable to the charging port on the case and a power source. The LED display on the case will indicate the charging progress.



Figure 4: USB-C Charging Port on the Charging Case.

## 2. Pairing with Your Device

1. Ensure the charging case is charged and the earbuds are inside.
2. Open the charging case. The earbuds will automatically enter pairing mode.

3. On your device (smartphone, tablet, etc.), go to Bluetooth settings and turn Bluetooth on.
4. Search for "Eonobuds 1" in the list of available devices and select it to connect.
5. Once connected, you will hear a confirmation tone, and the earbuds will be ready for use.

The earbuds feature instant connection. As long as the wireless earphones are taken out of the charging case, they will automatically connect to the last paired device.



Figure 5: Instant Connection Feature.

### 3. Fitting the Earbuds

Select the eartip size (S/M/L) that provides the most comfortable and secure fit for your ears. A proper fit is crucial for optimal sound quality and noise isolation.

## OPERATING INSTRUCTIONS

### Touch Controls

The Eonobuds 1 feature touch controls for easy management of music and calls. Specific touch functions may vary slightly, but

common actions include:

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold on either earbud during an incoming call.
- **Activate Voice Assistant:** Triple tap on either earbud (e.g., Siri, Google Assistant).

## Battery Life and Charging

The earbuds provide up to 4.5 hours of listening time on a single charge. The charging case extends the total playtime up to 24 hours. The USB-C fast charge feature allows for 1.5 hours of listening time with only 15 minutes of charging.



Figure 6: Battery Life Overview.

## Call Quality and Noise Reduction

Built-in high-quality microphones and CVC noise cancellation technology ensure clearer calls and a smoother sound quality, allowing you to enjoy clear conversations.

## CVC Noise Reduction

クリアな通話を実現

Makes the call clearer and ensures a smoother  
CVCノイズキャンセリング搭載



Figure 7: CVC Noise Reduction for Clearer Calls.

## MAINTENANCE

### Cleaning

Regularly clean your earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials. For eartips, you may gently wipe them with a damp cloth and mild soap, then dry thoroughly before reattaching.

### Water Resistance (IPX7)

The Eonobuds 1 earbuds are IPX7 waterproof, meaning they can resist sweat and rain with ease. This makes them suitable for workouts and outdoor activities. However, please note the following:

- Do not put the charging case into water. The IPX7 rating applies only to the earbuds.
- Avoid prolonged submersion in water.

- Ensure earbuds are dry before placing them back into the charging case to prevent damage.

## IPX7 Waterproof

IPX7 防水仕様

Enjoy without a care, even while you sweat away in the gym

汗や雨も安心に利用可能



Figure 8: IPX7 Waterproof Earbuds.

### Storage

When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from extreme temperatures.

### TROUBLESHOOTING

Problem	Possible Cause	Solution
Earbuds not pairing.	Earbuds not in pairing mode; Bluetooth off on device; previously paired with another device.	Ensure earbuds are in the case, open the lid to activate pairing. Turn Bluetooth on your device. Forget "Eonobuds 1" on other devices and try pairing again.

Problem	Possible Cause	Solution
No sound from one earbud.	Low battery; earbud not properly connected; earbud dirty.	Place both earbuds back in the charging case and ensure they are charging. Re-pair the earbuds. Clean the charging contacts on the earbud and in the case.
Charging case not charging.	Faulty cable or power adapter; charging port dirty.	Try a different USB-C cable and power adapter. Ensure the charging port is clean and free of debris.
Poor sound quality.	Improper fit; low battery; interference.	Adjust eartips for a snug fit. Charge earbuds fully. Move closer to your device to reduce interference.

## SPECIFICATIONS

Feature	Detail
Model Name	Eonobuds 1
Model Number	CCX-W1S-pink
Connectivity Technology	Bluetooth 5.0
Earbud Battery Capacity	45mAh (per earbud)
Charging Case Battery Capacity	500mAh
Earbud Dimensions	23 x 15.6 x 21 mm
Charging Case Dimensions	60 x 37.3 x 28 mm
Water Resistance Level	IPX7 (Earbuds only)
Control Type	Touch, Voice Control
Maximum Operating Distance	10 meters
Item Weight	120 g
UPC	793811281675

## WARRANTY AND SUPPORT

Eono provides a 12-month worry-free warranty for the Eonobuds 1 Wireless Earbuds. For any questions, concerns, or support needs, please contact our dedicated customer service team. We offer 24-hour dedicated email support and are committed to 100% customer satisfaction.

Please refer to the contact information provided in your product packaging or visit the official Eono website for support details.

