

[Manuals.plus](#) /

› [Logitech](#) /

› Logitech K380 Pebble Multi-Device Bluetooth Keyboard User Manual

Logitech K380 Pebble

Logitech K380 Pebble Multi-Device Bluetooth Keyboard User Manual

Model: K380 Pebble (920-009599)

INTRODUCTION

The Logitech K380 Pebble Multi-Device Bluetooth Keyboard is designed for versatile use across multiple operating systems and devices. Its compact and lightweight design allows for comfortable typing on computers, laptops, smartphones, and tablets. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your keyboard.



Image: The Logitech K380 Pebble Multi-Device Bluetooth Keyboard, showcasing its compact design and rose color.

WHAT'S IN THE BOX

- Logitech K380 Multi-Device Bluetooth Keyboard
- 2 x AAA Alkaline Batteries (pre-installed)
- User Documentation



Image: Contents of the Logitech K380 package, including the keyboard and two AAA batteries.

SETUP

1. Power On

The keyboard comes with two AAA batteries pre-installed. Locate the power switch on the side of the keyboard and slide it to the ON position. An indicator light should illuminate briefly.

2. Bluetooth Pairing

The K380 keyboard can connect to up to three Bluetooth-enabled devices simultaneously. Follow these steps to pair your keyboard with a device:

1. **Select a Channel:** Press and hold one of the Easy-Switch keys **F1**, **F2**, or **F3** for three seconds until the LED light above the key starts blinking rapidly. This indicates the keyboard is in pairing mode.
2. **Activate Bluetooth on Your Device:** On your computer, tablet, or smartphone, go to the Bluetooth settings.
3. **Pair the Keyboard:** In the list of available Bluetooth devices, select "Logi K380" or "Logitech K380". Your device may prompt you to enter a code displayed on the screen using the K380 keyboard, then press **Enter**.
4. **Confirmation:** Once paired, the LED light above the selected Easy-Switch key will glow solid for 5 seconds, then turn off. Your keyboard is now connected.

1



2



3



PAIR UP TO 3 DEVICES AND EASILY SWITCH BETWEEN THEM

Image: Visual guide demonstrating how to pair the K380 keyboard with up to three different devices, such as a laptop, desktop, and tablet.

OPERATING INSTRUCTIONS

Switching Between Devices

To switch between paired devices, simply press the corresponding Easy-Switch key **F1**, **F2**, or **F3**. The LED light above the key will illuminate for 5 seconds to confirm the active connection.

Key Functions and Layout

The K380 keyboard automatically detects your device and maps keys to provide a familiar layout with shortcuts for Windows, macOS, Chrome OS, Android, and iOS. The keyboard features quiet, low-profile, scooped keys for a comfortable typing experience.



1. Connect up to 3 devices
2. Shortcuts & Media keys
3. Mac/Windows layout

4. Quiet, curved keys
5. Bluetooth connectivity
6. 24-month battery life

Image: Detailed diagram highlighting key features of the K380 keyboard, including Easy-Switch buttons, media keys, and multi-OS layout indicators.

- **Easy-Switch Keys (F1, F2, F3):** Used to connect and switch between up to three Bluetooth devices.
- **Function Keys (F4-F12):** These keys have dual functions. By default, they perform media control or system functions (e.g., volume, play/pause). To use them as standard F-keys, you may need to press the **Fn** key simultaneously.
- **Operating System Specific Keys:** The keyboard includes keys with dual labels (e.g., Start/Alt Opt, Alt/Cmd) to accommodate both Windows and macOS layouts.



COMFORTABLE & QUIET TYPING

Image: A user demonstrating comfortable and quiet typing on the K380 keyboard in a workspace setting.

MAINTENANCE

Battery Replacement

The K380 keyboard is powered by two AAA alkaline batteries, offering up to 24 months of battery life depending on usage. When the battery indicator light starts blinking red, it's time to replace the batteries.

1. Locate the battery compartment on the underside of the keyboard.
2. Open the battery compartment cover.
3. Remove the old AAA batteries.
4. Insert two new AAA batteries, ensuring correct polarity (+/-).
5. Close the battery compartment cover securely.

Cleaning

To clean your keyboard, gently wipe the surface with a soft, damp, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays directly on the keyboard.

TROUBLESHOOTING

- **Keyboard not connecting:**
 - Ensure the keyboard is powered on.
 - Check that Bluetooth is enabled on your device.
 - Make sure the keyboard is within range (typically up to 10 meters or 33 feet).
 - Try re-pairing the keyboard by holding down an Easy-Switch key until it blinks rapidly, then re-selecting it in your device's Bluetooth settings.
 - Replace the batteries if the battery indicator light is blinking red.
- **Keys not responding:**
 - Check the battery level.
 - Ensure the keyboard is connected to the correct device (check the Easy-Switch LED).
 - Restart your device and try reconnecting.
- **Lag or intermittent connection:**
 - Move the keyboard closer to your device.
 - Avoid using the keyboard near other wireless devices that might cause interference (e.g., Wi-Fi routers, other Bluetooth devices).
 - Ensure your device's Bluetooth drivers are up to date.

SPECIFICATIONS

Model Number	920-009599
Connectivity	Bluetooth
Compatible Operating Systems	Windows 10, 11 or later, Chrome OS, macOS 10.15 or later, iOS 11 or later, iPadOS 13.4 or later, Android 8 or later
Compatible Devices	PC, Smartphone, Tablet, Apple TV, iPad, iPhone
Dimensions (L x W x H)	10.9 x 4.9 x 0.6 inches (279 x 124 x 16 mm)
Weight	14.4 ounces (408 grams)
Power Source	2 x AAA Batteries (included)
Battery Life	Up to 24 months (depending on usage)
Special Features	Lightweight, Low-Profile Keys, Quiet Keys, Slim Design, Multi-Device Easy-Switch

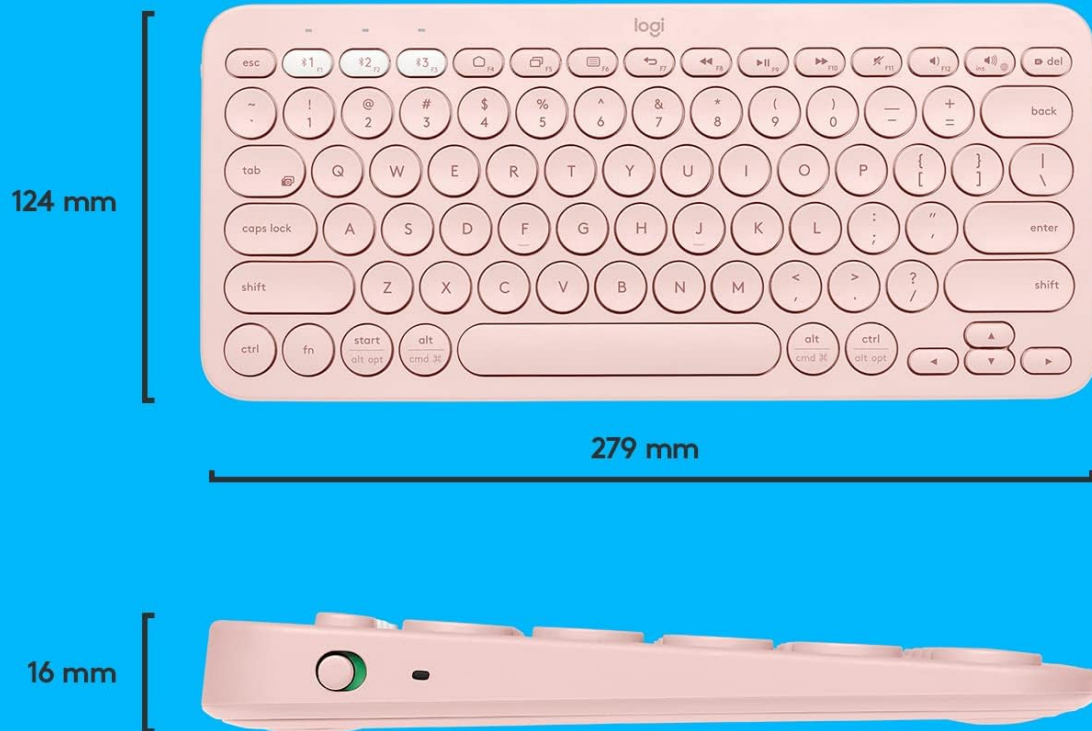


Image: Technical drawing illustrating the dimensions of the Logitech K380 keyboard in millimeters.

WARRANTY AND SUPPORT


Logitech products are manufactured to high quality standards and are designed to provide years of reliable service. For detailed warranty information, please refer to the user documentation included in your product packaging or visit the official Logitech support website.

For further assistance, troubleshooting guides, and driver downloads, please visit the Logitech Support website:

support.logi.com

ADDITIONAL INFORMATION

This keyboard is designed for portability and multi-device use, making it suitable for various environments, including home and office settings. Its universal compatibility ensures a consistent typing experience across different platforms.

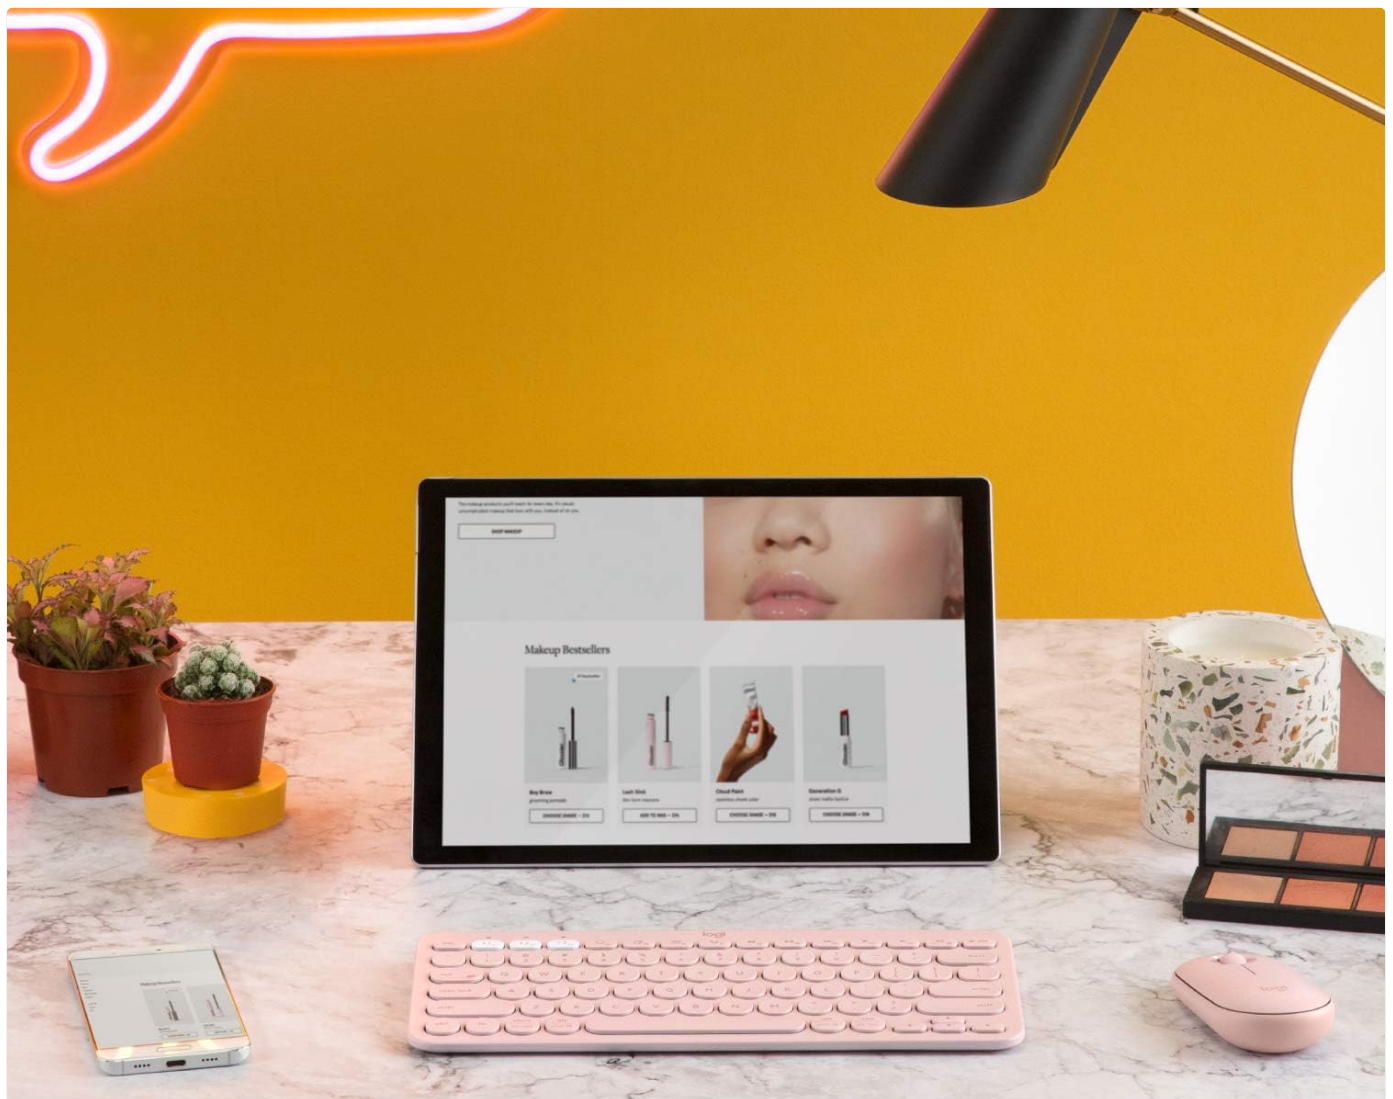

UNIVERSAL COMPATIBILITY: MULTI-DEVICE, MULTI-OS



Image: The K380 keyboard demonstrating universal compatibility with multiple operating systems and devices.



WORK FROM ANYWHERE WITH 24 MONTHS BATTERY LIFE

Image: A person holding the K380 keyboard, emphasizing its compact size and portability for working from anywhere.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where is the caps lock indicator on the Logitech Pebble Keys 2 K380s?

The Logitech Pebble Keys 2 K380s (and the original K380) does not have a dedicated physical LED indicator light on the keyboard to show when Caps Lock is active. This design choice helps maintain...

[Read full answer](#)