

Affresh W10135699B

Affresh Washing Machine Cleaner User Manual (Model W10135699B)

Comprehensive instructions for effective washing machine maintenance.

1. INTRODUCTION

The Affresh Washing Machine Cleaner is designed to remove and prevent odor-causing residue that can accumulate in all brands of High-Efficiency (HE) washing machines. Unlike bleach, which primarily addresses bacteria, Affresh utilizes surfactant chemistry to target and eliminate detergent residue, which is often the root cause of odors. This product consists of slow-dissolve, foaming tablets that work to break up and wash away residue, leaving your washer fresh and clean.





Image 1.1: Affresh Washing Machine Cleaner product packaging, showing a 3-count pack.

2. SAFETY INFORMATION

Caution: Poison / Irritant.

Always read the product label for complete safety instructions before use. Keep out of reach of children and pets. Avoid contact with eyes and skin. In case of contact, rinse thoroughly with water. If swallowed, seek immediate medical attention.

3. PREPARATION FOR USE

Before using Affresh Washing Machine Cleaner, ensure your washing machine is empty. Remove all clothing or other items from the washer drum.

4. OPERATING INSTRUCTIONS

Follow these steps to effectively clean your washing machine:

1. **Empty Washer:** Ensure the washing machine drum is completely empty of clothes or any other items.
2. **Place Tablet:** Place one Affresh tablet directly into the washing machine's wash basket. Do not place it in the dispenser.



Image 4.1: Placing tablet in a front-load washer.



Image 4.2: Placing tablet in a top-load washer.

3. **Select Cycle:** Close the washer door and select the "Clean Washer" cycle. If your washer does not have a "Clean Washer" cycle, select a Normal Cycle with the hot water option.
4. **Run Cycle:** Start the selected cycle. The tablet will dissolve and foam, working to break up and wash away residue.

USE AFFRESH® MONTHLY
to help optimize your
machine's performance



UTILISEZ AFFRESH®
TOUS LES MOIS
pour aider à optimiser la
performance de votre machine

Image 4.3: Illustration of the tablet's action in removing residue.

5. **Remove Residue:** After the cycle is complete, manually remove any left-behind residue from the washer drum or door seal with a clean cloth.

EASY TO USE **FACILE À UTILISER**



EMPTY washer.
VIDEZ la laveuse.



PLACE one tablet in the washer.
PLACEZ une pastille dans la
cuve de la laveuse.



SELECT and run the "Clean
Washer" cycle*.
SÉLECTIONNEZ le cycle de nettoyage
de la laveuse « Clean washer »*.



REMOVE left-behind residue.
ENLEVEZ manuellement tout résidu.

*See packaging for washers without "clean washer cycle."
*Consultez l'emballage pour les laveuses sans cycle de nettoyage.

Image 4.4: Areas inside the washing machine cleaned by Affresh.

5. MAINTENANCE

For optimal performance and to keep your washing machine fresh and free of odor-causing residue, it is recommended to use one Affresh Washing Machine Cleaner tablet monthly. Regular use helps prevent buildup and maintains the efficiency of your appliance.

6. TROUBLESHOOTING

This product is designed for straightforward use. If you encounter persistent odors or residue after following the instructions, consider the following:

- Ensure you are using the correct cycle (Clean Washer or Normal with hot water).

- Verify that the tablet was placed directly in the wash basket, not the dispenser.
- For heavily soiled machines, a second cleaning cycle may be beneficial.
- Regularly wipe down the door seal and dispenser drawers to prevent surface buildup.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Affresh
Model Number	W10135699B
Item Form	Tablet
Scent	Fresh
Specific Uses	Washing Machine Cleaning
Unit Count	3 Count (per pack)
Surface Recommendation	Fabric (for residue removal)
Special Feature	Effective in all washer brands; 2-year shelf life from production date.
Product Dimensions	9.53 x 5.72 x 9.53 cm
Item Weight	131.54 g (0.29 Pounds)
Manufacturer	Whirlpool Canada

8. INGREDIENTS

The Affresh Washing Machine Cleaner contains the following ingredients:

- Sodium percarbonate
- Sodium carbonate
- Glucono-delta-lactone
- Polyethylene glycol
- Sodium acetate
- Fragrance

9. WARRANTY AND SUPPORT

Specific warranty information for Affresh Washing Machine Cleaner is not provided in this manual. For product support or warranty inquiries, please refer to the contact information on the product packaging or visit the official Affresh website.
Manufacturer: Whirlpool Canada

10. LEGAL DISCLAIMER

Actual product packaging and materials may contain more and different information than what is presented in this manual. It is recommended that users do not rely solely on the information provided here and always read labels, warnings, and directions on the physical product packaging before using or consuming a product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question