

[Manuals.plus](#) /

› [VIN FRESCO](#) /

› VIN FRESCO CHG1 Rechargeable Electric Wine Bottle Opener Instruction Manual

VIN FRESCO CHG1

VIN FRESCO CHG1 Rechargeable Electric Wine Bottle Opener Instruction Manual

Model: CHG1

[Introduction](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &](#)

[Support](#)

1. INTRODUCTION

The VIN FRESCO CHG1 Rechargeable Electric Wine Bottle Opener is designed for effortless and quick cork removal from wine bottles. This automatic corkscrew is compatible with most standard wine bottles and cork types, including natural and synthetic. It features a convenient charging base and an integrated foil cutter for a complete wine opening experience.

The device is lightweight and compact, capable of opening 30 bottles or more on a single charge. Its sleek design complements any kitchen or bar setting.



Image: The VIN FRESCO Electric Wine Opener in action, demonstrating its ability to open a bottle in approximately 7 seconds. The image highlights the ease of use and the product's sleek design.

2. SETUP

2.1 Unpacking and Components

Carefully remove all components from the packaging. Ensure the following items are present:

- Electric Wine Opener
- Charging Base
- Foil Cutter
- USB-C Charging Cord (North America 110V wall plug included)



Image: A clear display of all included components: the electric wine opener, its charging base, a USB-C charging cord, and the foil cutter. This image helps users identify all parts of their new set.

2.2 Initial Charge

Before first use, fully charge the electric wine opener. Place the opener onto the charging base. Connect the charging base to a power outlet using the provided USB-C charging cord and wall plug. The indicator light on the charging base will illuminate to show it is charging. A full charge typically takes several hours.

Enjoy Wine in 4 Simple Steps



1
Cut the foil using the included foil cutter.



2
Position vertically over the cork.



3
Press & hold "Down" until the opener stops automatically.



4
Press & hold "Up" to release the cork - no pulling required.

Image: The electric wine opener resting securely on its charging base, connected to power. This setup ensures the device is always ready for use.

3. OPERATING INSTRUCTIONS

3.1 Removing the Foil Seal

Use the included foil cutter to remove the foil seal from the wine bottle. Place the foil cutter over the top of the wine bottle and squeeze firmly. Rotate the bottle or the cutter a few times to cut the foil completely. Remove the foil seal.

3.2 Opening a Wine Bottle

1. Place the electric wine opener vertically on top of the wine bottle, ensuring it is centered over the cork.
2. Hold the bottle firmly with one hand and the opener with the other.
3. Press and hold the 'Down' button on the opener. The corkscrew will automatically penetrate the cork and extract it from the bottle. The opener will stop automatically once the cork is fully removed.
4. Lift the opener away from the bottle.

3.3 Releasing the Cork from the Opener

Once the cork is extracted from the bottle and is inside the opener, press and hold the 'Up' button. The corkscrew will rotate in reverse, releasing the cork from the device. No pulling is required.



Image: A step-by-step visual guide illustrating the process of opening a wine bottle: 1. Cutting the foil with the included cutter. 2. Positioning the electric opener over the cork. 3. Pressing the 'Down' button to extract the cork. 4. Pressing the 'Up' button to release the cork from the opener.

Video: Official demonstration of the Vin Fresco Electric Wine Opener, showcasing its quick and easy operation for cork removal.

4. MAINTENANCE

4.1 Cleaning

Wipe the exterior of the electric wine opener and charging base with a soft, damp cloth. Do not immerse the opener or charging base in water or other liquids. The foil cutter can be rinsed under water if necessary.

4.2 Storage

Store the electric wine opener on its charging base when not in use to ensure it is always ready. Store in a cool, dry place away from direct sunlight.

5. TROUBLESHOOTING

- **Opener not working:** Ensure the device is fully charged. Check if the charging base is properly connected to a power outlet.
- **Cork not extracting:** Make sure the opener is centered firmly on the bottle. Ensure the bottle is held steady. The corkscrew may struggle with extremely old or brittle corks.
- **Cork not releasing:** Press and hold the 'Up' button until the cork is fully ejected. If the cork is stuck, gently pull it out manually.
- **Foil cutter not working:** Ensure the foil cutter is placed correctly over the bottle neck and rotated with firm pressure.

6. SPECIFICATIONS

Brand	VIN FRESCO
Model Number	CHG1
Material	Plastic
Color	Black & Rose Gold
Finish Type	Matte
Product Dimensions	11"L x 4"W
Item Weight	1.32 pounds
Power Source	Rechargeable Battery (3 AA batteries included)
Special Feature	Compatible with all standard wine bottles and cork types, One-touch cork removal with auto-stop, Rechargeable base, Includes foil cutter

7. WARRANTY & SUPPORT

7.1 Warranty Information

VIN FRESCO products are designed for quality and durability. For specific warranty details, please refer to the product packaging or contact our customer support.

7.2 Customer Support

If you encounter any issues or have questions regarding your VIN FRESCO Electric Wine Bottle Opener, please contact our customer support team. We are committed to ensuring your satisfaction.

Contact information can typically be found on our official website or the product packaging.

