

Eapmic OTZJGJ3145USCSW

Eapmic 110V Dual Induction Cooker Instruction Manual

Model: OTZJGJ3145USCSW

IMPORTANT SAFETY INFORMATION

- Please read all instructions carefully before using the Eapmic Dual Induction Cooker. Retain this manual for future reference.
- **Pot Compatibility:** This induction cooker requires cookware made of ferromagnetic material (iron or magnetic stainless steel). If the pot is not made of iron or is not induction-compatible, the product will not function.
 - **Power Supply:** Ensure the cooker is connected to a 110V power outlet. Do not use with incompatible voltage.
 - **Placement:** Place the cooker on a stable, flat, heat-resistant surface. Ensure adequate ventilation around the unit.
 - **Heat:** The black crystal panel is high-temperature resistant. However, always exercise caution as the cooking surface can become hot from residual heat transferred from the cookware.
 - **Cleaning:** Disconnect from power before cleaning. Allow the unit to cool completely.
 - **Children and Pets:** Keep the appliance out of reach of children and pets.
 - **Damage:** Do not operate the cooker if it has a damaged cord or plug, or if it malfunctions or has been damaged in any manner. Contact customer support for assistance.
 - **Ventilation:** Do not block the ventilation openings. The integrated fan requires proper airflow for heat dissipation.

PRODUCT OVERVIEW

The Eapmic Dual Induction Cooker features two independent cooking zones, touch controls, and a durable black crystal panel. It is designed for efficient and rapid heating.

DOUBLE INDUCTION COOKER

110V



Image: Front view of the Eapmic Dual Induction Cooker, showcasing its two cooking zones and integrated touch control panel.

SETUP

1. **Unpacking:** Carefully remove the cooker from its packaging. Retain packaging materials for potential future transport or storage.
2. **Inspection:** Inspect the cooker for any signs of damage. Do not use if damaged.
3. **Placement:** Place the cooker on a dry, stable, and heat-resistant countertop. Ensure there is at least 10 cm (4 inches) of clear space around all sides for proper ventilation.
4. **Power Connection:** Plug the power cord into a standard 110V AC electrical outlet.



Image: Dimensional diagram of the Eapmic Dual Induction Cooker, showing overall length, width, and height measurements in millimeters.

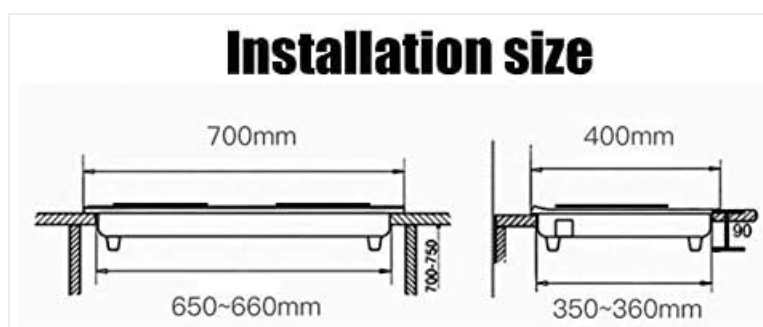


Image: Installation size diagram, illustrating recommended cutout dimensions for potential built-in countertop installation.

OPERATING INSTRUCTIONS

1. Cookware Compatibility

The Eapmic Dual Induction Cooker operates using electromagnetic induction. This requires cookware with a magnetic base. To test if your cookware is compatible, hold a magnet to the bottom of the pot or pan. If the magnet sticks, the cookware is suitable for induction cooking. Compatible materials include cast iron, enameled iron, and magnetic stainless steel. Non-compatible materials include aluminum, copper, glass, ceramic, and non-magnetic stainless steel.

2. Basic Operation

1. **Power On:** Place compatible cookware with food on one of the cooking zones. Plug the cooker into a 110V power outlet. The unit will enter standby mode.
2. **Select Zone:** Touch the power button for the desired cooking zone. The display will illuminate.
3. **Adjust Power/Temperature:** Use the '+' and '-' touch buttons to adjust the firepower (8 gear settings available). The cooker will begin heating.
4. **Cooking Modes:** The cooker features multiple cooking functions such as Fry, Steam, and Water mode. Select the desired mode by touching the corresponding icon on the control panel. An automatic warm function is also available to keep food warm after cooking.
5. **Power Off:** After cooking, touch the power button for the active zone to turn it off. Unplug the cooker from the wall outlet when not in use.



Image: A hand interacting with the touch control panel of the induction cooker, highlighting the digital display and various function buttons.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Eapmic Dual Induction Cooker.

1. **Before Cleaning:** Always unplug the cooker from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning the Surface:** The black crystal panel is easy to clean. Wipe the surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for glass cooktops.
3. **Drying:** Dry the surface thoroughly with a clean, soft cloth to prevent water spots.
4. **Ventilation Openings:** Periodically check the ventilation openings for dust or debris. Use a soft brush or vacuum cleaner to gently remove any blockages. Do not allow water to enter these openings.
5. **Do Not Submerge:** Never immerse the cooker in water or any other liquid.
6. **Avoid Abrasives:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the surface.

TROUBLESHOOTING

If you encounter issues with your Eapmic Dual Induction Cooker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooker does not turn on or heat.	• Not plugged in. • Power outage. • Cookware not compatible or not present. • Unit is in standby mode.	• Ensure the power cord is securely plugged into a 110V outlet. • Check your household circuit breaker. • Use only induction-compatible cookware (magnetic base). Ensure the pot is centered on the cooking zone. • Press the power button for the desired zone to activate.
Cooker makes a humming noise.	• Normal operation sound of the induction technology or cooling fan. • Cookware material or construction.	• This is generally normal. • Some cookware may produce a slight hum due to its composition. This is not a defect.
Error code displayed.	• Overheating. • Sensor malfunction. • Cookware detection issue.	• Turn off the unit, unplug it, and allow it to cool. Ensure ventilation is not blocked. • Ensure cookware is compatible and properly placed. • If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	OTZJGJ3145USCSW
Type	Dual Induction Cooker
Color	Black
Rated Voltage	110V

Feature	Detail
Power (Left Burner)	1200W
Power (Right Burner)	1200W
Total Wattage	Up to 2400W (1200W per burner)
Firepower Regulation	8 gear settings
Controls Type	Touch
Panel Material	Black Crystal Morion Panel
Product Dimensions (L x W x H)	Approx. 26.8" x 15" x 3" (680mm x 380mm x 76mm)
Compatible Pot Diameter	12cm - 24.5cm
Included Components	Cooktop

WARRANTY AND SUPPORT

Specific warranty details for the Eapmic Dual Induction Cooker (Model OTZJGJ3145USCSW) are not provided in this manual. For warranty information, technical support, or service inquiries, please contact the manufacturer or your point of purchase directly.

Please have your model number (OTZJGJ3145USCSW) and purchase date available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0885SQK4C>

More documents and user manuals: <https://manuals.plus/>