

[Manuals.plus](#) /

› [ELIVED](#) /

› ELIVED Tilting TV Wall Mount (Model YD1002-A) Instruction Manual

ELIVED YD1002-A

ELIVED Tilting TV Wall Mount Instruction Manual

Model: YD1002-A

For 37-75 inch Flat and Curved TVs

1. SAFETY INFORMATION

Please read these instructions carefully before installation. If you do not understand these instructions or have doubts about the safety of the installation, assembly, or use of this product, please contact customer service. Improper installation may cause damage or serious injury.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 99 lbs (45 kg).
- **TV Size:** This mount is designed for most 37-75 inch flat or curved TVs.
- **VESA Compatibility:** Ensure your TV's VESA pattern is between 75x75mm and 600x400mm.
- **Wall Type:** This mount is intended for installation on wood studs (16", 18", 24" spacing), solid concrete, or brick walls. **DO NOT install into drywall alone.**
- **Input Access:** Check the back of your TV for input access before installation to ensure cables will not be blocked.
- **Personal Injury:** Always use appropriate safety gear and seek assistance for heavy lifting.

2. PACKAGE CONTENTS

Verify all components are present and undamaged before beginning installation.

 
Will This Wall Mount Fit My TV?

(Please check before purchase)

Wall Types




Wood Studs

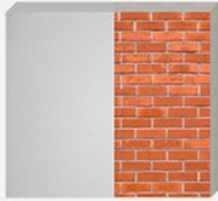


Concrete / Brick Wall

 VESA Pattern

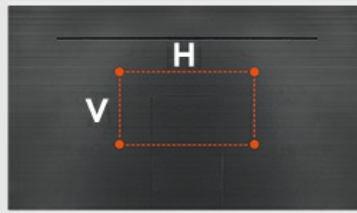

Max: 600x400mm
Min: 150x100mm

 Cable Outlets

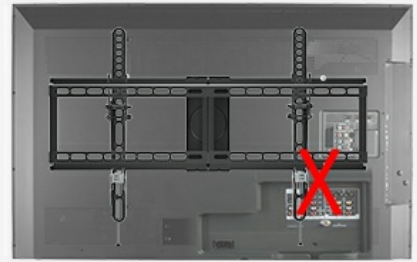

Potential Cable Blockage



Friendly Design

Open wall plate design for outlets

Image: All included hardware and components for the ELIVED TV Wall Mount.

- Wall Plate Assembly
- TV Brackets (2)
- Mounting Hardware (various screws, washers, spacers for TV and wall)
- Bubble Level
- Installation Manual

3. PRODUCT FEATURES

- **Universal Compatibility:** Fits most 37-75 inch flat or curved TVs weighing up to 99 lbs (45 kg) with VESA patterns from 75x75mm to 600x400mm.
- **Anti-Glare Tilt:** Allows for a 10° downward tilt to reduce glare and optimize viewing angles.
- **Low Profile Design:** Sits only 1.67 inches from the wall for a clean, space-saving appearance.
- **Sturdy Construction:** Made of high-quality alloy steel for reliable strength and durability.
- **Easy Installation:** Designed for a simple 3-step installation process.
- **Quick Release:** Features a pulling strap design for easy locking and releasing of the TV.
- **Wall Type Versatility:** Compatible with 16", 18", 24" wood studs, solid concrete, and brick walls.

4. SPECIFICATIONS

Brand	ELIVED
Model Number	YD1002-A
Material	Alloy Steel
Mounting Type	Wall Mount
Movement Type	Tilt

Maximum Tilt Angle	10 Degrees
TV Size Compatibility	37-75 inches
Weight Capacity	99 lbs (45 kg)
VESA Compatibility	75x75mm to 600x400mm
Distance from Wall	1.67 inches
Compatible Stud Spacing	16", 18", 24"

5. INSTALLATION GUIDE

Pre-Installation Checklist:

- Ensure your TV's weight and VESA pattern are within the mount's specifications.
- Identify your wall type (wood stud, solid concrete, or brick).
- Locate the desired mounting position, considering viewing height and cable access.

Tools Required:

- Pencil
- Drill
- Stud Finder (for wood stud installation)
- Hammer (for concrete/brick anchors)
- Socket Wrench or Adjustable Wrench
- Screwdriver

Installation Steps:

EASY 3-STEP INSTALLATION

Step 1: Attach brackets to the back of TV



Image: Overview of the easy 3-step installation process.

Step 1: Attach TV Brackets to the TV

Carefully place your TV face down on a soft, clean surface. Select the appropriate screws, washers, and spacers from the provided hardware kit that fit your TV's VESA mounting holes. Attach the two vertical TV brackets to the back of your TV, ensuring they are securely fastened.



Image: Attaching the TV brackets to the back of the television.

Step 2: Install Wall Plate (Wood Studs)

Use a stud finder to locate the edges and center of your wood studs. Mark the center of the studs where you intend to mount the wall plate. Position the wall plate against the wall, ensuring it is level using the included bubble level. Mark the pilot hole locations through the wall plate onto the studs. Drill pilot holes (5/32" or 4mm diameter, 2.75" deep) into the marked spots. Secure the wall plate to the studs using the lag bolts and washers. Tighten firmly but do not overtighten.

FIT 16"/18"/24" STUDS

(Do not mount on drywall alone!)



Image: Wall mount designed to fit 16", 18", and 24" wood studs.

Step 3: Install Wall Plate (Solid Concrete/Brick Wall)

Position the wall plate against the concrete or brick wall at your desired height. Use the included bubble level to ensure it is straight. Mark the pilot hole locations through the wall plate onto the wall. Drill pilot holes (3/8" or 10mm diameter, 2.75" deep) into the marked spots. Insert the concrete anchors into the drilled holes, tapping gently with a hammer until flush with the wall surface. Secure the wall plate to the wall using the lag bolts and washers, tightening firmly.

SUITABLE TYPE OF WALL



FIT 16"-24"
WOOD STUDS



DO NOT mount
onto drywall alone!



Concrete



Brick Wall

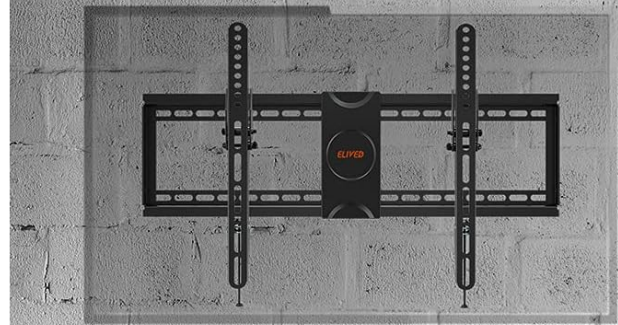
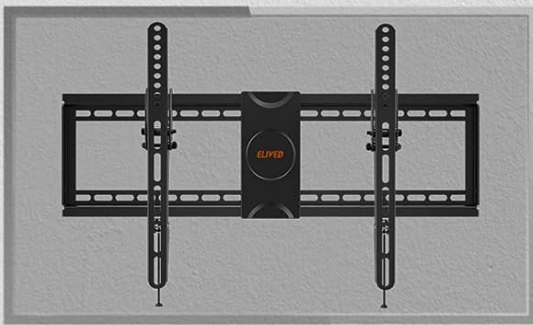 


Image: Wall mount compatibility with various wall types.

Step 4: Hang TV on Wall Plate

With assistance, carefully lift the TV and hook the TV brackets onto the top edge of the wall plate. Gently lower the TV until the brackets engage with the bottom of the wall plate. The pulling straps should be accessible below the TV. Ensure the TV is securely seated on the wall plate.

 

Image: Hanging the TV onto the wall plate.

Step 5: Leveling and Tilt Adjustment

After hanging the TV, use the leveling screws on the TV brackets to make minor horizontal adjustments if needed. To adjust the tilt, loosen the tilt adjustment knobs on both TV brackets, set the desired tilt angle (up to 10° down), and then tighten the knobs to secure the position.

VIEWING FLEXIBILITY

Low profile **-1.67"** from the wall.

«**1.67"**



Tilted down to reduce glare.

-10°



Image: Demonstrating low profile and tilt adjustment for optimal viewing.

Installation Videos:

ELIVED Tilt TV Wall Mount Installation Guide

Video: A detailed guide from ELIVED on how to install a tilting TV wall mount. This video demonstrates the step-by-step process of attaching the brackets to the TV, mounting the wall plate, and hanging the TV securely.

ELIVED Tilt TV Wall Mount Product Overview

Video: An official ELIVED video showcasing the features and benefits of the tilting TV wall mount, including its low profile and tilt capabilities.

6. OPERATION

Tilt Adjustment:

To adjust the tilt angle of your TV, locate the tilt adjustment knobs on both TV brackets behind the TV. Loosen these knobs, adjust the TV to your desired angle (up to 10 degrees downward), and then firmly tighten the knobs to lock the TV in place. This feature helps reduce glare and provides a comfortable viewing experience.

RELIABLE & CONVENIENT DESIGN

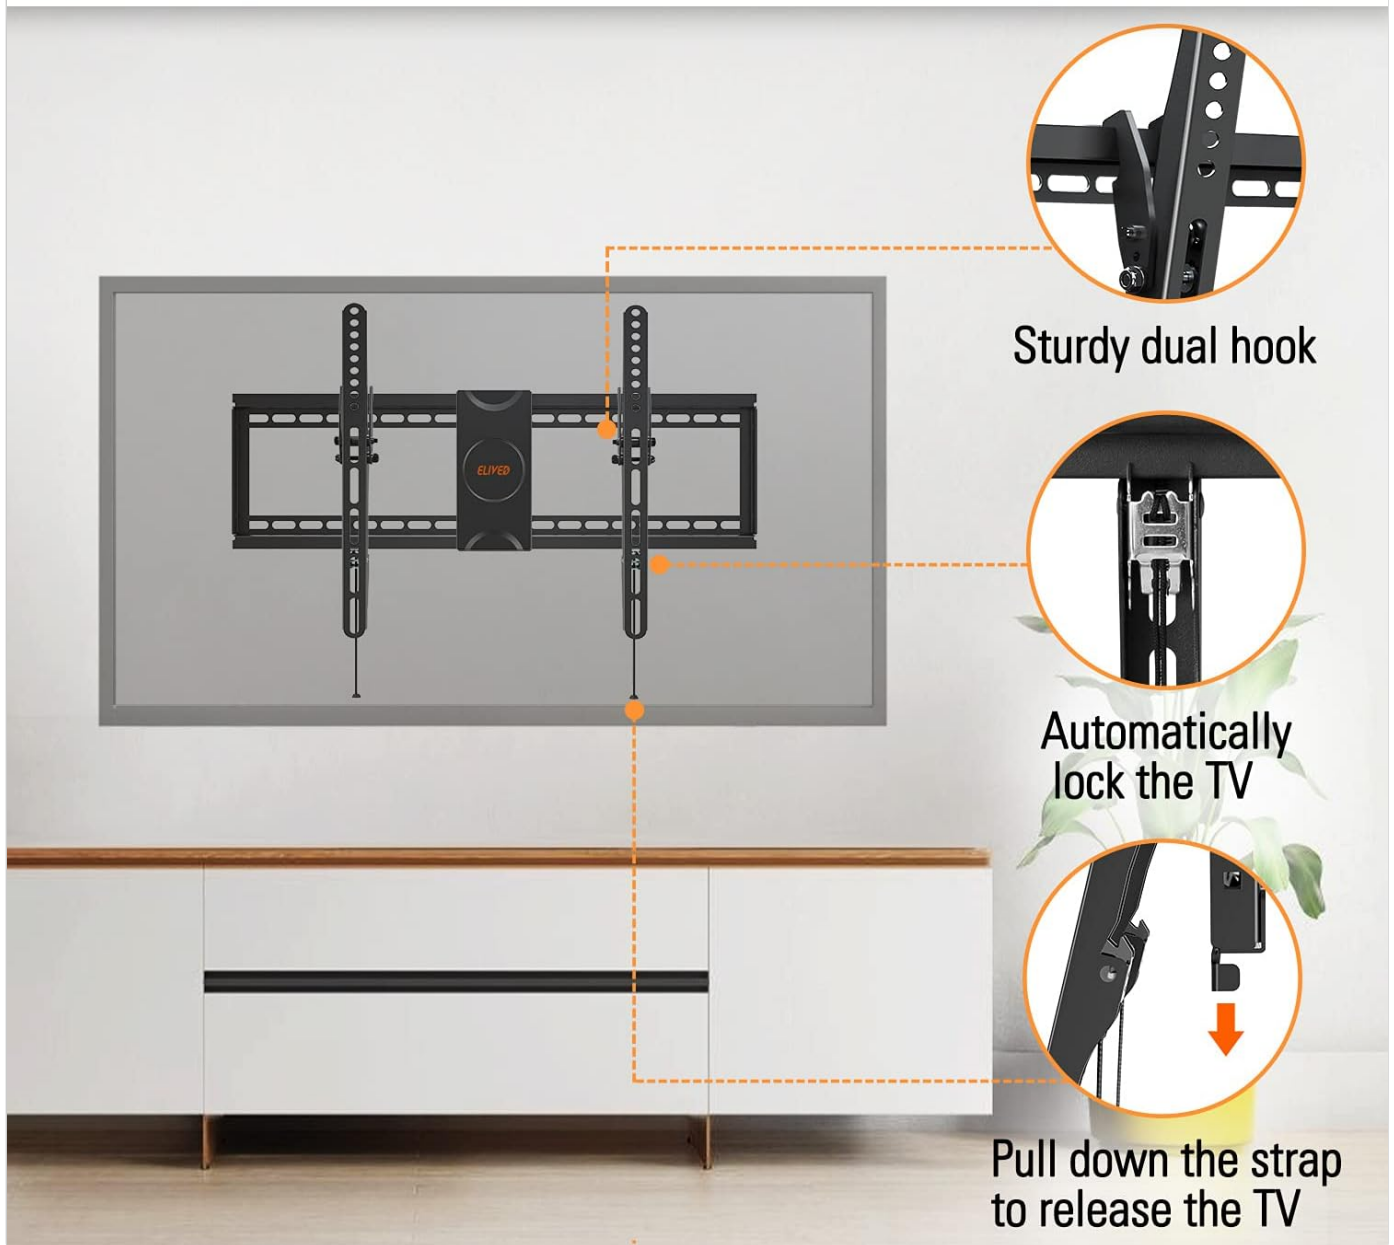


Image: Detail of the reliable design with sturdy dual hooks and pull-down straps for TV release.

TV Release:

If you need to remove the TV from the wall mount, simply pull down on the accessible straps located beneath the TV. This action will disengage the locking mechanism, allowing you to safely lift the TV off the wall plate. Ensure you have assistance when removing the TV.

7. MAINTENANCE

- **Cleaning:** Wipe the mount with a soft, dry cloth to remove dust. Avoid abrasive cleaners or solvents.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight and secure. Re-tighten if necessary.
- **Damage:** If any part of the mount appears damaged or worn, discontinue use and contact customer service for replacement parts or advice.

8. TROUBLESHOOTING

- **TV Not Level:** Use the leveling screws on the TV brackets to make fine adjustments after installation.
- **Difficulty Tilting:** Ensure the tilt adjustment knobs on both TV brackets are sufficiently loosened before attempting to adjust the angle.

- **TV Not Secure:** Double-check that all lag bolts securing the wall plate to the wall are tightened, and that the TV brackets are properly hooked onto the wall plate and the pulling straps are engaged.
- **Cables Blocked:** If TV inputs are blocked, the TV may need to be removed and re-mounted with appropriate spacers or a different VESA hole configuration if available. Consider using right-angle adapters for cables.

9. WARRANTY & SUPPORT

ELIVED TV wall mounts come with a **10-year product support and warranty**. If you encounter any issues or have questions regarding your product, please contact ELIVED customer service for assistance. Our professional support team is available to answer your pre-purchase and installation questions.

For further assistance, please visit the [ELIVED Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question