

Lifelong LLATWM08

Lifelong SwingPlus 6.2 Kg Fully-Automatic Top Loading Washing Machine

Model: LLATWM08

1. INTRODUCTION

Thank you for choosing the Lifelong SwingPlus Fully-Automatic Top Loading Washing Machine. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before use and keep it for future reference.

Safety Information

- Ensure the washing machine is installed on a stable, level surface.
- Do not operate the machine with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not wash items that are soiled with flammable substances.
- Always unplug the machine before cleaning or performing any maintenance.

2. PRODUCT OVERVIEW

The Lifelong SwingPlus LLATWM08 is a 6.2 kg fully-automatic top-loading washing machine designed for efficient laundry care. It features a digital display, multiple wash programs, and a durable stainless steel tub.

Product Dimensions



2
YEAR
WARRANTY
ON PRODUCT

2
YEAR
WARRANTY
ON MOTOR

Image: Front view of the washing machine with key dimensions (Height: 84 cm, Depth: 49 cm, Width: 51 cm) and warranty information (2 years on product, 2 years on motor).

Control Panel



8 Wash Programs



Delay Start Function



Child Lock

Image: Detailed view of the control panel showing the digital display, water level indicators, program selection buttons, and start/pause button.

The control panel allows you to select wash programs, adjust water levels, and activate special functions. The digital display shows the remaining time and selected settings.

Key Features

- **Capacity:** 6.2 kg, suitable for small to medium loads.
- **Spin Speed:** 700 RPM for faster drying.
- **Wash Programs:** 8 distinct wash programs for various fabric types and soil levels.
- **Delay Start:** Up to 24-hour delay start function.
- **Fuzzy Logic:** Automatically detects wash load and optimizes cycle.
- **Tub Clean:** Dedicated program for maintaining tub hygiene.
- **Child Lock:** Prevents accidental changes to settings during operation.
- **Auto Balance Detection:** Ensures stable operation by redistributing unbalanced loads.
- **Stainless Steel Drum:** Durable and rust-free washing tub.

3. SETUP AND INSTALLATION

Unpacking

1. Carefully remove the washing machine from its packaging.
2. Remove all packing materials, including the base packaging.
3. Check for any damage during transit. Contact customer service if damage is found.

Water Supply Connection

1. Connect the inlet hose pipe (provided) to the water inlet valve at the back of the washing machine.
2. Connect the other end of the inlet hose to a cold water tap. Ensure connections are tight to prevent leaks.
3. Turn on the water supply and check for any leaks.

Drain Hose Installation

1. Attach the drain hose pipe (provided) to the drain outlet at the back of the machine.
2. Position the drain hose into a suitable drain or sink. Ensure the hose is not kinked and is securely placed to prevent it from falling out during drainage.
3. The drain hose should be positioned at a height between 60 cm and 90 cm from the floor.

Power Connection

1. Plug the power cord into a grounded electrical outlet (230 Volts).
2. Ensure the outlet meets the power requirements of the washing machine.

4. OPERATING INSTRUCTIONS

Loading Laundry

1. Open the top lid of the washing machine.
2. Load clothes loosely into the tub, ensuring not to overload. Overloading can affect wash performance and cause damage.
3. Close the lid securely.

Adding Detergent

1. Add the appropriate amount of detergent to the detergent dispenser. Refer to your detergent packaging for recommended quantities.
2. For liquid detergents, pour directly into the dispenser. For powder detergents, place in the designated compartment.

Selecting a Wash Program



 24Hour Delay Start

 Fuzzy Logic

 Child Lock

 Error Alarm

 Quick Wash Program

 Auto Unbalancing
Detection

Image: Side view of the washing machine highlighting its advanced features.

Press the 'Program' button on the control panel to cycle through the available wash programs. The selected program will be indicated on the digital display.

- **Normal:** For daily laundry with moderate soil.
- **Gentle:** For delicate items requiring a softer wash.
- **Cotton:** Optimized for cotton fabrics.
- **Speedy:** A quick wash cycle for lightly soiled clothes.
- **Underwear:** Specific program for intimate apparel.
- **Spin:** Drains water and spins clothes to remove excess moisture.
- **Air-dry:** Helps to further dry clothes using air circulation.

- **Tub Clean:** For cleaning the washing machine tub.

After selecting the program, press the 'Start/Pause' button to begin the wash cycle.

Special Functions


- **Water Level:** Adjust the water level (High, Medium, Low) according to the load size.
- **Delay Start:** Press the 'Delay Press 3s' button to set a delayed start time for your wash cycle.
- **Child Lock:** Press and hold the 'Water Level' and 'Program' buttons simultaneously for 3 seconds to activate/deactivate the child lock.
- **Fuzzy Logic:** This feature automatically senses the load weight and adjusts the water level and wash time for optimal results.
- **Tub Clean:** Select this program periodically to clean the inner tub and prevent odor buildup.

5. MAINTENANCE

Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.

Cleaning the Tub

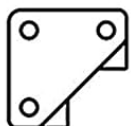

**Stainless
Steel Tub**



**Tub Clean
Function**



Image: Top-down view of the stainless steel washing tub, showing the pulsator and lint filter.

Use the 'Tub Clean' program regularly (e.g., once a month) to remove detergent residue and prevent mold growth. You may add a washing machine cleaner for better results.

Cleaning the Lint Filter

Locate the lint filter inside the tub (usually on the side or center agitator). Remove it, clean out any accumulated lint under running water, and reinsert it securely.

6. TROUBLESHOOTING GUIDE

Before contacting customer service, please refer to the following table for common issues and their

solutions.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; Lid not closed properly; Power outage.	Check power connection; Ensure lid is fully closed; Check household power supply.
No water filling	Water tap closed; Water inlet hose kinked; Water supply pressure too low.	Open water tap; Straighten hose; Check water pressure.
Machine vibrates excessively	Machine not level; Load unbalanced; Transit bolts not removed.	Adjust leveling feet; Redistribute laundry; Ensure all transit bolts are removed (if applicable).
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Check and clear drain hose; Clean drain pump filter.
Error code displayed	Specific malfunction detected by the machine.	Refer to the full user manual for specific error code meanings or contact customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	LLATWM08
Capacity	6.2 kg
Type	Fully-Automatic Top Loading
Voltage	230 Volts
Maximum Rotational Speed	700 RPM
Number of Wash Cycles	8
Drum Material	Stainless Steel
Item Weight	20000 Grams
Included Components	Washing machine, 1 Drain Hose pipe, User Manual, 1 Inlet Hose pipe

8. WARRANTY AND SUPPORT

Warranty Information

This Lifelong SwingPlus washing machine comes with a**2-year warranty on the product** and a **2-year warranty on the motor** from the date of purchase. Please retain your purchase receipt as proof of warranty.

The warranty covers manufacturing defects under normal use. It does not cover damage caused by improper installation, misuse, accidents, or unauthorized repairs.

Customer Support

For any service requests, technical assistance, or warranty claims, please contact Lifelong customer support. Refer to the contact information provided in your warranty card or on the official Lifelong website.