

WOMOW W5pro

WOMOW

WOMOW W5pro Cordless Stick Vacuum Cleaner User Manual

Model: W5pro

1. INTRODUCTION

Thank you for purchasing the WOMOW W5pro Cordless Stick Vacuum Cleaner. This manual provides essential information for the safe and efficient use of your new appliance. Please read it thoroughly before first use and keep it for future reference.

The WOMOW W5pro is a versatile 2-in-1 stick and handheld vacuum cleaner designed for various cleaning tasks. It features powerful suction, a lightweight design, and multiple attachments for comprehensive cleaning.

2. SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use the vacuum cleaner outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible materials, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and filters in place.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Turn off the appliance before making any adjustments, changing accessories, or storing the vacuum cleaner.
- Store the vacuum cleaner indoors in a cool, dry place.

3. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any items are missing or damaged, contact customer support.



Image: All included accessories and main unit laid out.



Image: Numbered diagram of all included accessories.

1. Main Motor Unit (Handheld)
2. Motorized Brush Head
3. Wall Mount Holder
4. Crevice Nozzle
5. 2-in-1 Round Brush
6. Extension Pipe (75cm)
7. Power Adapter
8. Cleaning Tool
9. Flexible Hose
10. User Manual & Warranty Card

4. ASSEMBLY

The WOMOW W5pro can be assembled as a stick vacuum or a handheld vacuum with various attachments.

4.1 Stick Vacuum Assembly


1. Insert the extension pipe into the main motor unit until it clicks securely.
2. Attach the motorized brush head to the other end of the extension pipe until it clicks securely.



Image: Assembled stick vacuum cleaner.

4.2 Handheld Vacuum Assembly

For handheld use, detach the extension pipe and motorized brush head. Directly attach desired accessories (e.g., crevice nozzle, 2-in-1 brush, flexible hose) to the main motor unit.

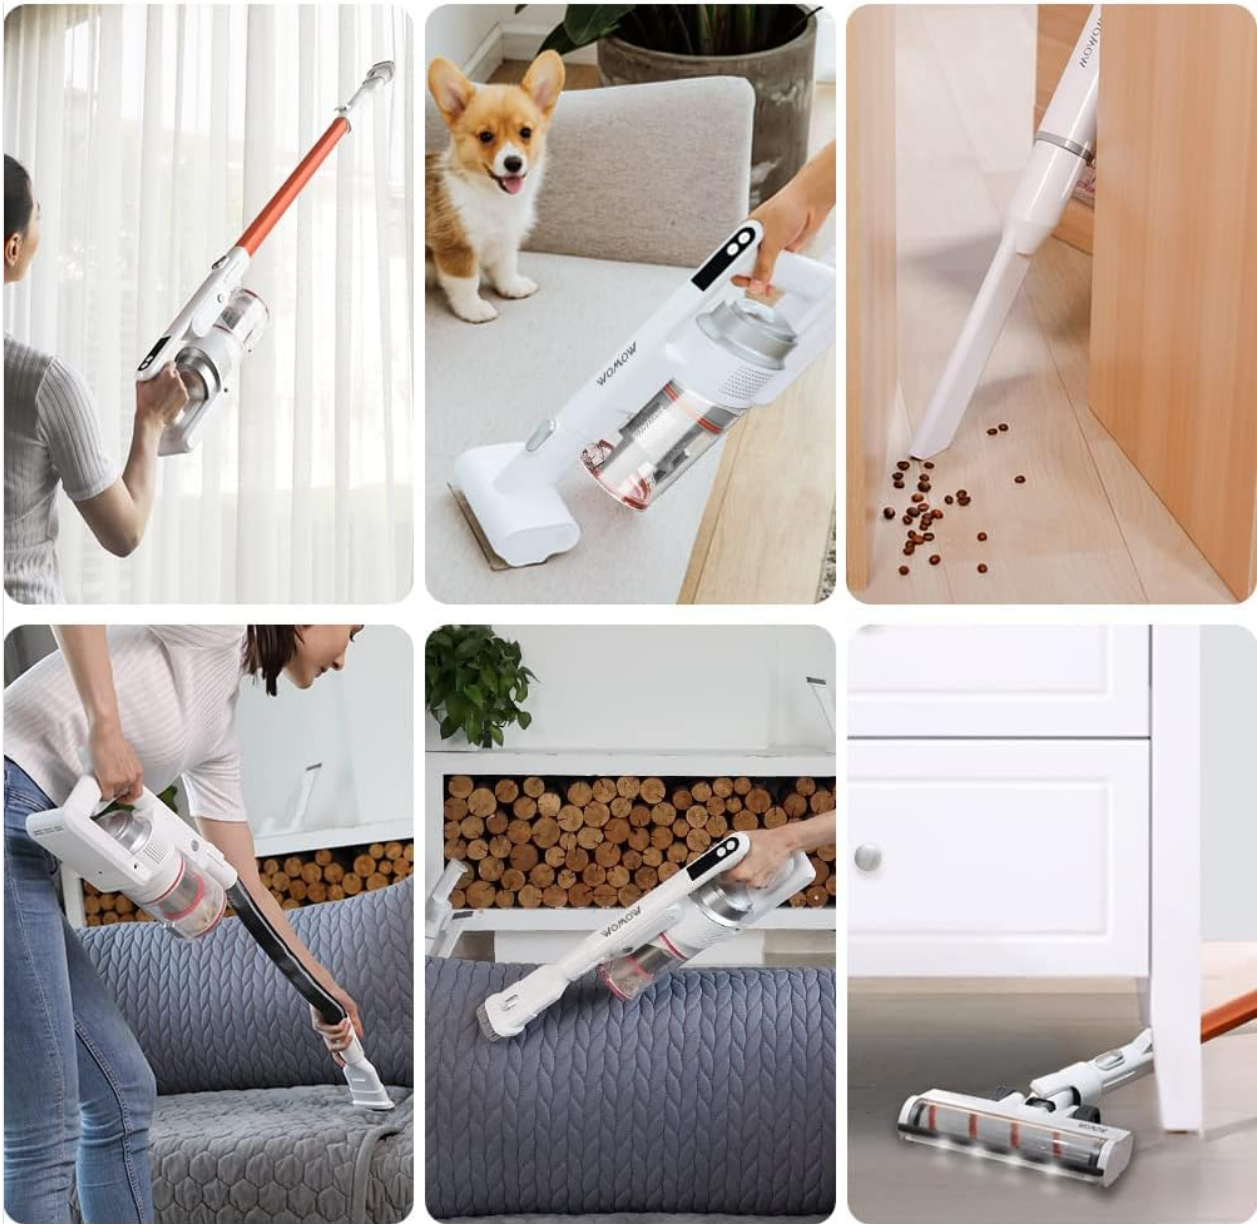

用途に合わせて組立てる、豊かな付属品



Image: Examples of the vacuum cleaner used in various configurations, including handheld mode.

5. CHARGING

Before first use, fully charge the vacuum cleaner. The battery indicator on the main unit will show the charging status.

- Connect the power adapter to the charging port on the main motor unit.
- Plug the adapter into a power outlet.
- Charging time is approximately 5 hours for a full charge.
- A full charge provides approximately 40 minutes of cleaning time in normal mode and 10 minutes in strong mode.

穴打ちなし場所制限なし

便利性がスマートフォンと同じくらいです



4-5時間



標準モード



高速モード



クリーン面積



Image: The vacuum cleaner connected to its charger, illustrating charging and runtime information.



Image: Battery indicator showing maximum runtime.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Mode Selection

- Press the power button on the main unit to turn the vacuum cleaner on.
- Press the mode button to switch between normal and strong suction modes.
- Press the power button again to turn the vacuum cleaner off.

LDE液晶ディスプレイ

掃除機運転状況などをリアルタイムお知らせ
通路詰む印が追加！[掃除機を大掃除する時が来ました！]

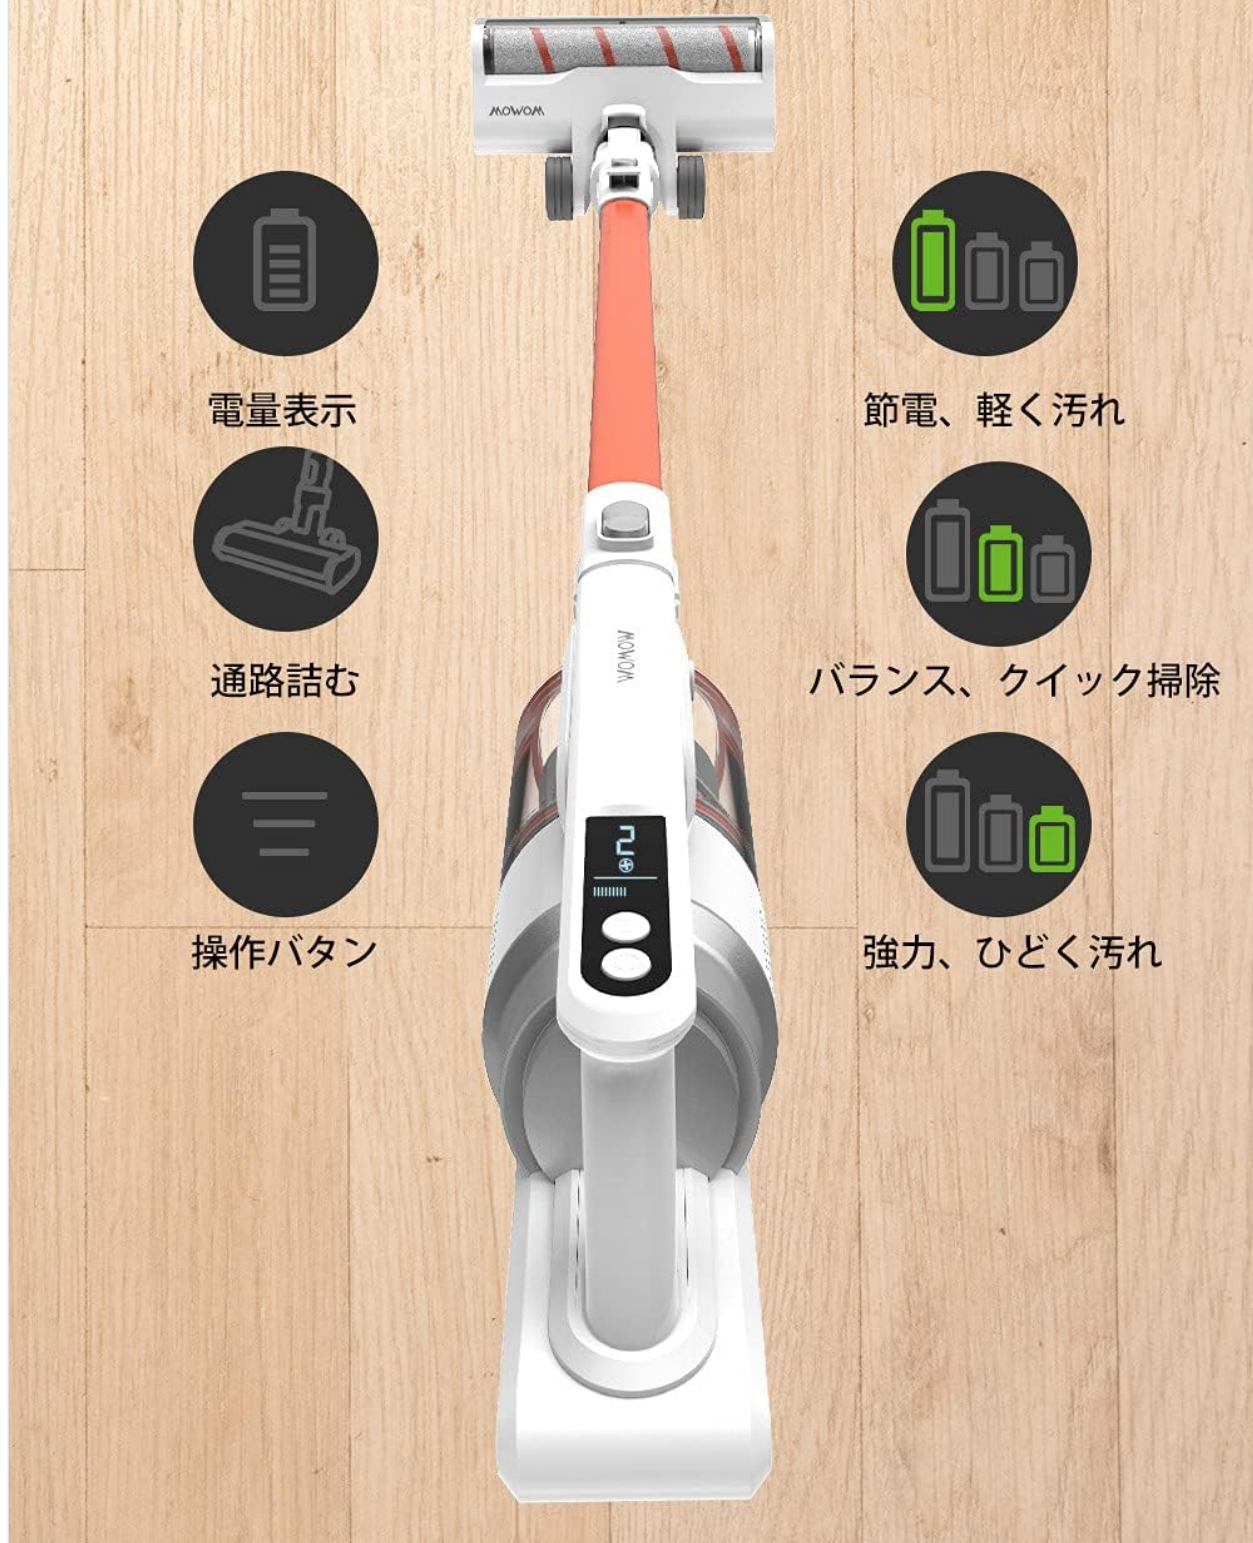


Image: Full view of the WOMOW W5pro showing the LED display for operating status and battery level.

6.2 Using Attachments

- **Motorized Brush Head:** Ideal for floors, carpets, and rugs. The integrated LED lights illuminate dust in dark areas.

- **Crevice Nozzle:** Use for narrow gaps, corners, and edges.
- **2-in-1 Round Brush:** Suitable for delicate surfaces, upholstery, and car interiors.
- **Extension Pipe:** Extends reach for high areas like ceilings or under furniture.
- **Flexible Hose:** Provides flexibility for cleaning awkward spaces, especially in cars or around furniture.

ブラシレスモーターのみ コードレス掃除機の限界を**突破**でき！

ブラシあるモーターと比較して、エネルギー効率が大幅に向上し、吸引力が強く、寿命が長く、ノイズが少なくなります。ほぼ同じ容量のバッテリーを搭載したが全然違う世界！

23000PA
超強吸引力

120AW
吸込仕事率

120000回/分
高速回転

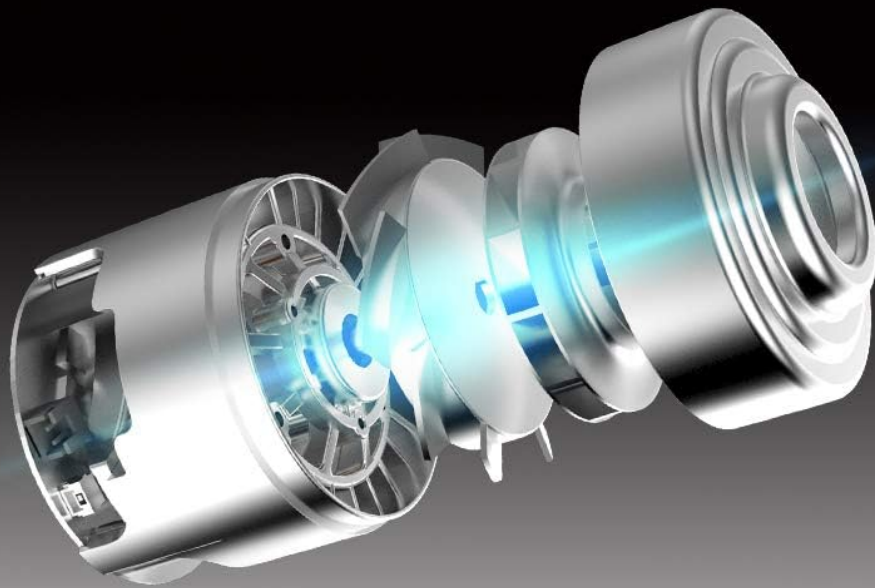


Image: The vacuum cleaner in use, highlighting the LED brush head illuminating dust on the floor.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Cup

- Press the dust cup release button to detach it from the main unit.
- Hold the dust cup over a trash bin and press the bottom release button to empty debris.
- Reattach the dust cup securely.



Image: Handheld unit with dust cup being emptied into a trash bin.

7.2 Cleaning Filters

- Remove the dust cup and then remove the internal filters (HEPA filter and metal filter).
- Tap the filters gently to remove loose dust.
- Rinse the filters under running water. Ensure they are completely dry before reassembling.
- It is recommended to clean filters regularly, depending on usage.



Image: Components of the vacuum cleaner being washed under water, illustrating the washable design.

7.3 Cleaning the Brush Head

- Turn off the vacuum cleaner and detach the motorized brush head.
- Use the provided cleaning tool to cut and remove any hair or debris tangled around the brush roll.
- Wipe the brush head with a damp cloth if necessary.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is depleted Power button not pressed correctly	Charge the battery fully Ensure the power button is pressed firmly
Low suction power	Dust cup is full Filters are clogged Brush head or pipe is blocked	Empty the dust cup Clean or replace filters Check and clear any blockages

Problem	Possible Cause	Solution
Brush head stops rotating	Hair or debris tangled in brush roll Brush head is blocked	Clean the brush roll Check for and remove any blockages
Short runtime	Battery not fully charged Battery life degraded	Ensure battery is fully charged Contact customer support for battery replacement options

9. SPECIFICATIONS

Feature	Specification
Model	W5pro
Rated Vacuum	26,000 Pa
Power Consumption	120W (Normal) - 300W (Strong)
Rated Voltage	25.9V
Noise Level	60dB (Normal) - 72dB (Strong)
Weight (Handheld)	1.41 kg
Dust Cup Capacity	0.5 L
Battery Capacity	2200mAh Lithium Battery
Charging Time	5 hours
Cleaning Time	10 minutes (Strong) - 40 minutes (Normal)
GTIN	738630450734

10. WARRANTY AND SUPPORT

The WOMOW W5pro Cordless Stick Vacuum Cleaner comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact WOMOW customer service through the retailer where you purchased the product or visit the official WOMOW website.