

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Pebble Gear](#) /
- › [Pebble Gear Disney Toy Story Kids Bag - Instruction Manual PG914942M](#)

Pebble Gear PG914942M

Pebble Gear Disney Toy Story Kids Bag - Instruction Manual

Model: PG914942M

PRODUCT OVERVIEW

This manual provides essential information for the safe and effective use of your Pebble Gear Disney Toy Story Kids Bag. This universal carrying case is designed to protect 7-inch kids tablets and other small items, making it ideal for kindergarten, travel, and vacation.



Image: Front view of the Pebble Gear Disney Toy Story Kids Bag, featuring a blue exterior with yellow trim and the Toy Story logo.

SETUP AND FIRST USE

The Pebble Gear Disney Toy Story Kids Bag requires minimal setup. Follow these steps before first use:

1. **Unpack:** Carefully remove the bag from its packaging.
2. **Inspect:** Check the bag for any signs of damage or manufacturing defects. If any issues are found, contact customer support.
3. **Initial Cleaning:** It is recommended to hand wash the bag before first use to remove any manufacturing residue. Refer to the "Maintenance" section for detailed cleaning instructions.

OPERATING INSTRUCTIONS

This bag is designed for easy and secure transport of your child's essentials.

- **Main Compartment:** The main compartment is suitable for 7-inch kids tablets or e-readers. Gently slide the device into the main padded section. The soft inner lining provides protection against scratches.



Image: Close-up view of the soft grey inner lining of the Pebble Gear Disney Toy Story Kids Bag, designed to protect contents from scratches.

- **Additional Storage:** An additional zipped storage pocket is located on the back of the bag. This pocket is ideal for smaller items such as pens, headphones, or small toys.



Image: The front pocket of the Pebble Gear Disney Toy Story Kids Bag, shown holding colorful markers and a notebook.

- **Secure Closure:** Ensure all zippers are fully closed to secure the contents of the bag during transport. The zip tags feature a high-quality finish and Disney Toy Story design.



Image: Close-up of the zipper on the Pebble Gear Disney Toy Story Kids Bag, showing the yellow zipper and a rocket-shaped pull tab.

- **Carrying Handle:** Use the integrated handle for easy carrying.

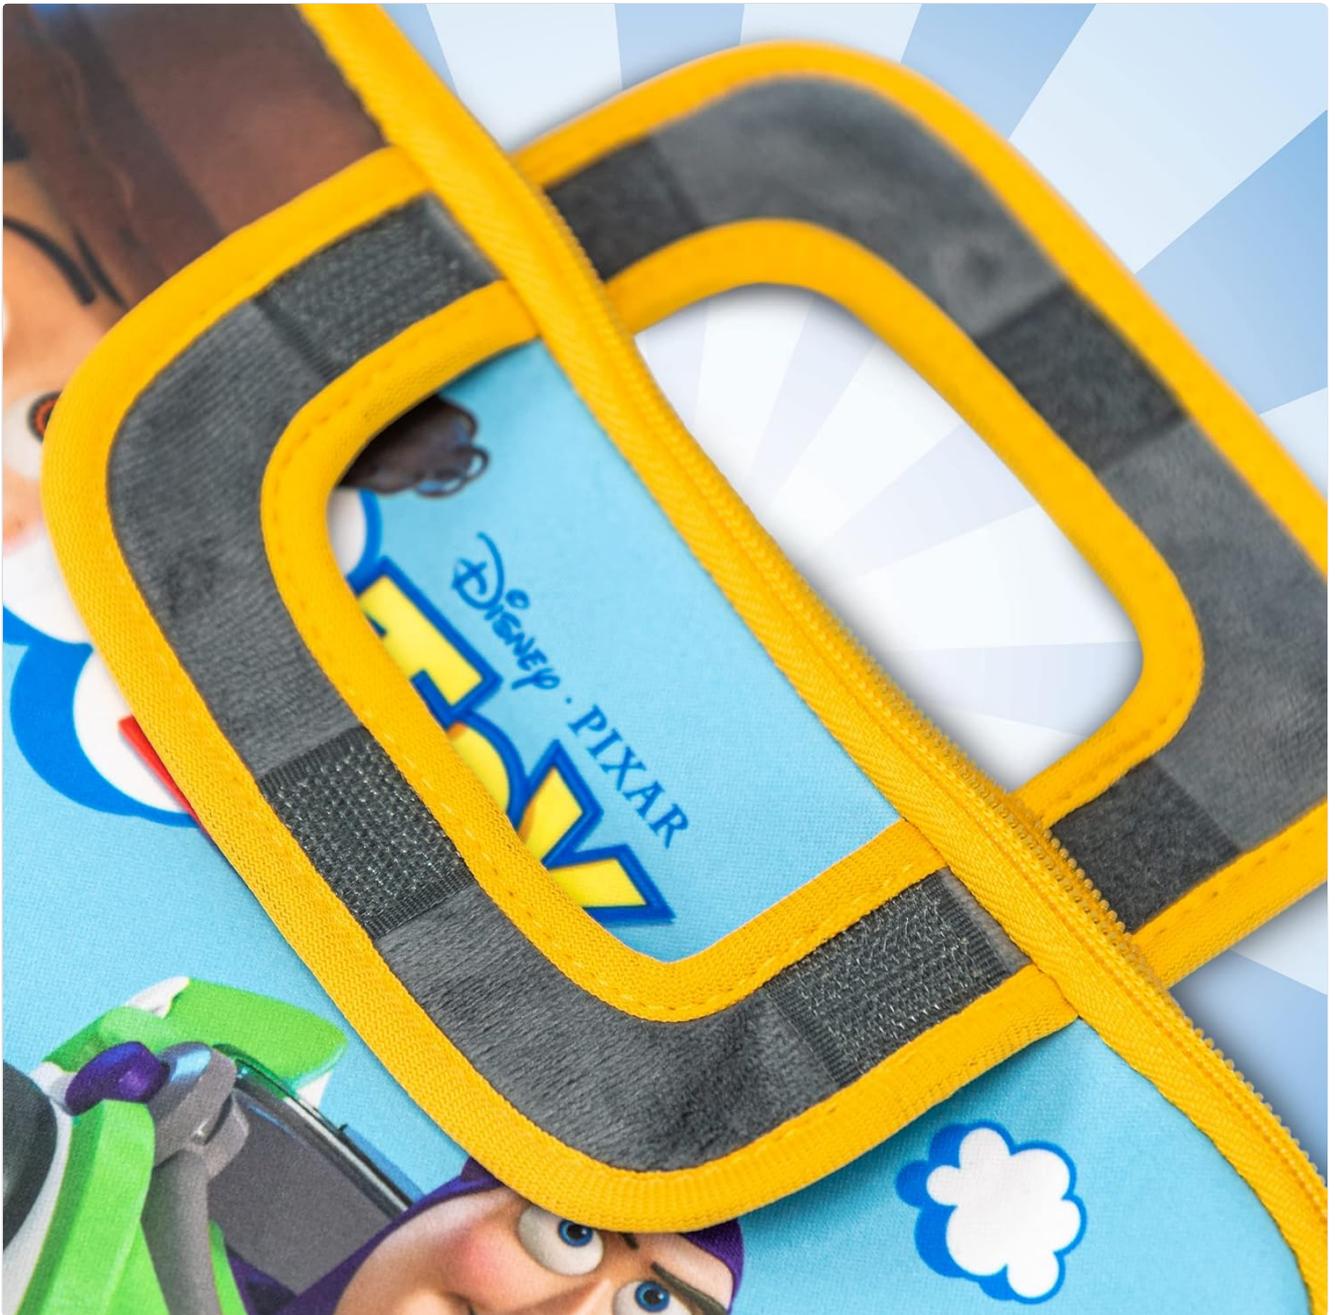


Image: Close-up of the yellow carrying handle on the Pebble Gear Disney Toy Story Kids Bag, showing the soft grip material.

MAINTENANCE AND CARE

To ensure the longevity and cleanliness of your Pebble Gear Disney Toy Story Kids Bag, follow these maintenance guidelines:

- **Cleaning:** The bag is made from neoprene material, which is easy to clean. Hand wash with mild soap and cold water. Avoid using harsh detergents or bleach.
- **Drying:** After washing, air dry the bag completely. Do not tumble dry or expose to direct heat, as this may damage the material.
- **Storage:** Store the bag in a cool, dry place away from direct sunlight when not in use.
- **Stain Removal:** For stubborn stains, gently spot clean with a soft cloth and a small amount of mild stain remover. Test on an inconspicuous area first.

TROUBLESHOOTING

If you encounter any issues with your Pebble Gear Disney Toy Story Kids Bag, refer to the following common solutions:

- **Tablet Does Not Fit:**

- Ensure your tablet is 7 inches or smaller.
- If your tablet has a bulky protective case, it might exceed the internal dimensions of the bag. Try removing the tablet from its external case before placing it in the bag.

- **Zipper Sticking:**

- Check for any fabric caught in the zipper teeth. Gently pull the fabric away and try to operate the zipper again.
- Apply a small amount of zipper lubricant (e.g., wax or silicone spray) to the zipper teeth if it continues to stick.

- **Bag Appears Dirty:**

- Refer to the "Maintenance and Care" section for detailed cleaning instructions.

PRODUCT SPECIFICATIONS

Brand	Pebble Gear
Model Number	PG914942M
Product Dimensions	0.59 x 13.78 x 10.24 inches
Item Weight	3.53 ounces
Compatible Devices	Tablets (up to 7 inches)
Form Factor	Bag
Shell Type	Soft
Color	Yellow (trim) / Blue (main)
Manufacturer	Pebble Gear
ASIN	B0888FD7PK

WARRANTY INFORMATION

Pebble Gear products are manufactured to high-quality standards. For specific warranty details regarding your Disney Toy Story Kids Bag, please refer to the warranty card included with your purchase or visit the official Pebble Gear website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to report an issue with your Pebble Gear Disney Toy Story Kids Bag, please contact Pebble Gear customer support. You can typically find contact information on the product packaging or on the official Pebble Gear website.

For more information about Pebble Gear products, visit the [Pebble Gear Store on Amazon](#).

