

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Lemax](#) /

› [Lemax Christmas Village Toy Town 05653 Instruction Manual](#)

## Lemax 05653

# Lemax Christmas Village Toy Town 05653 Instruction Manual

Model: 05653

## 1. INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your Lemax Christmas Village Toy Town, model 05653. This collectible building is part of the Caddington Village collection, designed to evoke the charm of 19th-century London during the Christmas season. It features intricate details, LED lighting, and animated elements to enhance your holiday display.

## 2. PACKAGE CONTENTS

Before proceeding, please ensure all components are present and undamaged. The package should contain:

- Lemax Christmas Village Toy Town building (Model 05653)
- Power adapter (if included, check packaging)
- Instruction manual (this document)

Inspect the item carefully upon unpacking. If any parts are missing or damaged, please contact customer support immediately.

## 3. SETUP

### 3.1 Placement

Place the Toy Town building on a stable, flat surface, such as a table. Ensure the area is dry and away from direct heat sources or excessive moisture. This item is designed for indoor use only.

### 3.2 Power Connection

The Lemax Toy Town 05653 features LED lighting and animation. It is typically powered by an AC adapter (not always included, check your specific package) or can be adapted for battery operation with a compatible battery box (sold separately). The product specifications indicate "Batteries required: No", suggesting primary power is via adapter.

1. Locate the power input jack on the back or base of the building.
2. If using an AC adapter, insert the adapter plug into the power input jack.
3. Plug the AC adapter into a standard electrical outlet.
4. If using a battery box (sold separately), ensure fresh batteries are installed, then connect the battery box to the power input jack.



**Figure 1:** The Lemax Christmas Village Toy Town 05653. This image shows the front view of the miniature building, highlighting its colorful facade, "Toy Town" sign, and various windows displaying miniature toys. Snow details are visible on the roof and ledges, and a staircase leads to an upper level.

## 4. OPERATION

### 4.1 Power On/Off

Once connected to a power source, the LED lights and animation of the Toy Town will activate automatically. Some models may include an on/off switch, typically located near the power input jack. If no switch is present, disconnect the power source to turn off the unit.

### 4.2 Features

- **LED Lighting:** The building features various LED lights that illuminate windows, signs, and other decorative elements, creating a festive glow.
- **Animation:** Certain elements within the Toy Town are animated, such as miniature figures moving or rotating, adding dynamic movement to your display. Observe the storefronts and upper levels for these animated details.



**Figure 2:** A closer view of the Lemax Toy Town's central section. This image highlights the "Toy Town" sign, the "Dolls," "Puzzles," and "Games" sections, and the intricate details of the windows and doors. Miniature figures and toys are visible inside the illuminated windows.

### 4.3 Video Demonstration

The following video demonstrates the features and operation of a Lemax Christmas Village piece, similar to your Toy Town 05653. Please note that specific animations or lighting effects may vary slightly by model. (Note: Creator type information for videos was not available in the provided data.)

Your browser does not support the video tag.

**Video 1:** A demonstration of a Lemax Christmas Village item, showcasing its illuminated features and animated elements. This video provides a general overview of how Lemax village pieces function and appear when powered on.

## 5. MAINTENANCE

### 5.1 Cleaning

To clean your Lemax Toy Town, gently wipe the surface with a soft, dry cloth. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the finish and delicate details. Do not immerse the item in water.

### 5.2 Storage

When storing the item, ensure it is placed in its original packaging or a suitable protective container to prevent damage. Store in a cool, dry place away from direct sunlight and extreme temperatures. Handle with care, as small decorative pieces can be fragile.

## 6. TROUBLESHOOTING

- **Lights or Animation Not Working:**

- Ensure the power adapter is securely plugged into both the building and the electrical outlet.
- Verify the electrical outlet is functional by testing it with another device.
- If using a battery box, check that the batteries are fresh and correctly installed.
- If the model has an on/off switch, ensure it is in the "On" position.

- **Broken or Detached Pieces:**

- Due to the intricate nature of collectible village pieces, small decorative elements may occasionally detach during shipping or handling.
- For minor detachments, a small amount of clear, non-toxic craft glue can be used to reattach pieces. Apply glue sparingly.
- For significant damage, contact Lemax customer support.

## 7. SPECIFICATIONS

<b>Model Number</b>	05653
<b>Brand</b>	Lemax
<b>Collection</b>	The Caddington Village
<b>Material</b>	Plastic, Resin
<b>Product Dimensions (D x W x H)</b>	5.24" x 8.66" x 8.07" (13.3cm x 22cm x 20.5cm approx.)
<b>Item Weight</b>	4.45 pounds (2.02 kg approx.)
<b>Power Source</b>	AC Adapter (not always included) or compatible battery box (sold separately)
<b>Features</b>	LED lighting, Animated elements
<b>Care Instructions</b>	Wipe Clean

## 8. WARRANTY AND SUPPORT

Lemax products are manufactured with quality and care. For information regarding warranty coverage, returns, or technical support, please refer to the official Lemax website or contact their customer service department directly. Keep your purchase receipt as proof of purchase.

You can often find support information on the [Lemax Brand Store on Amazon](#) or through the retailer where the product was purchased.