

## Lemax 95569

# Lemax Dasher's Advent Stable Instruction Manual

Model: 95569

## INTRODUCTION

Thank you for choosing the Lemax Dasher's Advent Stable. This festive facade is a charming addition to any Christmas village collection, designed to bring daily joy and anticipation during the holiday season. This manual provides essential information for the proper setup, operation, and care of your advent stable.

## SAFETY INFORMATION

- **Warning:** Not suitable for children under 8 years of age.
- For use only under adult supervision.
- This product is intended for indoor decorative use only.
- Do not immerse in water or expose to excessive moisture.
- Keep away from direct heat sources and open flames.
- Handle with care to prevent damage to delicate components.

## PACKAGE CONTENTS

- 1 x Lemax Dasher's Advent Stable (Model 95569)
- 1 x Decorative Key or Tool (for advent doors)

*Note: Batteries and 4.5V power adapter are not included and must be purchased separately if desired for operation.*

## SETUP

1. **Unboxing:** Carefully remove the advent stable from its packaging. Inspect the unit for any signs of damage.
2. **Placement:** Place the stable on a flat, stable surface, such as a tabletop or shelf. Ensure it is in a location where it will not be easily knocked over.
3. **Power Connection:** The Dasher's Advent Stable can be powered in two ways:
  - **Battery Operation:** Locate the battery compartment (typically on the bottom or back of the unit). Insert the required batteries (e.g., 3 x AA, not included) ensuring correct polarity.
  - **4.5V Adapter:** If using a power adapter (not included), plug the adapter into the designated port on the unit and then into a standard electrical outlet.

4. **Initial Inspection:** Before operation, gently open and close a few advent doors to familiarize yourself with their mechanism.

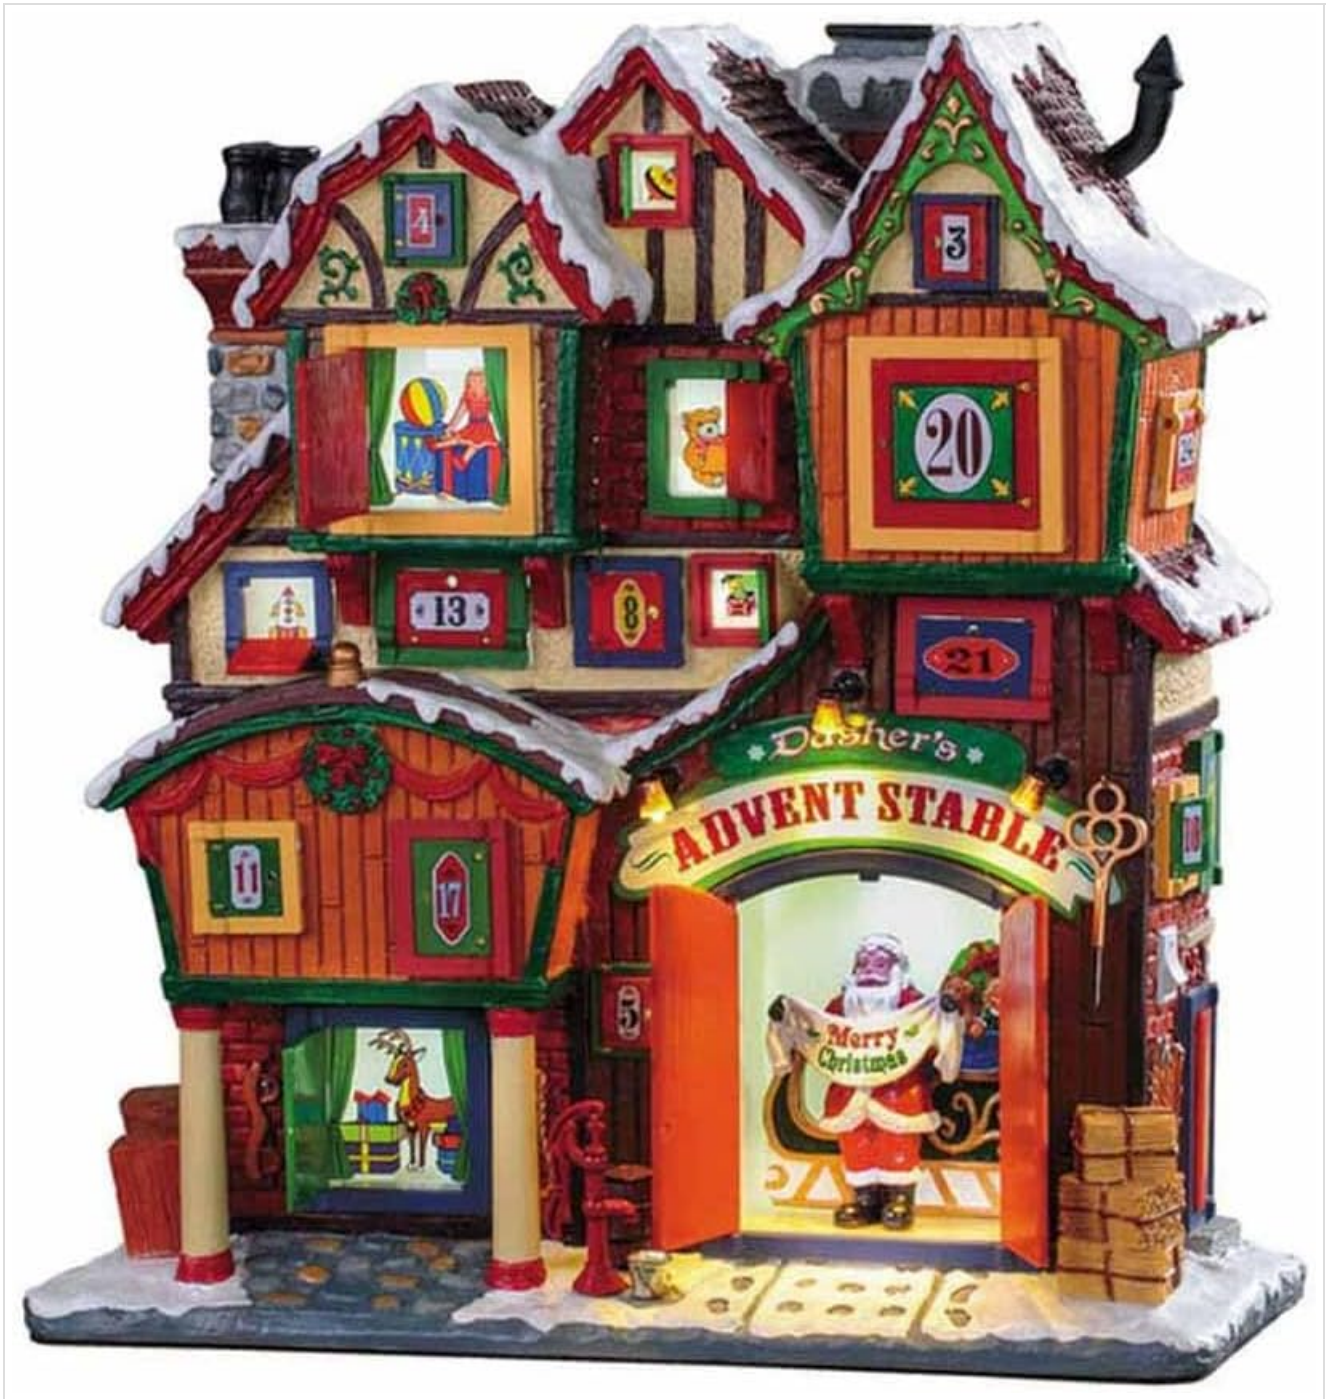


Figure 1: Lemax Dasher's Advent Stable. A detailed view of the Lemax Dasher's Advent Stable, showcasing its multi-story design, numerous numbered doors for advent, and festive Christmas decorations. The stable features a central archway with Santa Claus inside, holding a 'Merry Christmas' banner. Snow-covered roofs and intricate detailing are visible.

## OPERATING INSTRUCTIONS

1. **Power On/Off:** Locate the power switch (usually on the back or bottom of the unit). Flip the switch to the 'ON' position to illuminate the stable's interior and exterior lights. Flip to 'OFF' when not in use.
2. **Advent Calendar Function:** Starting from December 1st, open one numbered door each day leading up to Christmas. Use the provided decorative key or gently use your fingers to open the small doors. Each door reveals a unique festive scene or character.
3. **Enjoyment:** Position the stable where its intricate details and warm glow can be appreciated throughout the holiday

season.

MAINTENANCE

- **Cleaning:** To clean the stable, gently wipe its surfaces with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Storage:** When not in use, store the advent stable in its original packaging or a protective container in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Removal:** If storing for an extended period, remove batteries to prevent leakage and corrosion.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights are not working.	Power switch is off. Batteries are dead or incorrectly inserted. Power adapter is not connected or faulty.	Ensure the power switch is in the 'ON' position. Check battery polarity and replace with fresh batteries. Verify adapter connection and try a different outlet or adapter if available.
Advent doors are difficult to open.	Minor manufacturing variation. Dust or debris.	Gently manipulate the door using the provided key or your fingernail. Avoid excessive force. Carefully clean around the door hinges with a soft brush.
Unit appears damaged.	Shipping damage. Accidental impact.	If damaged upon arrival, contact your retailer immediately for assistance. Handle with care to prevent further damage.

SPECIFICATIONS


Feature	Detail
Model Number	95569
Brand	Lemax
Material	Resin
Color	Multicolor
Dimensions (D x W x H)	4.72" x 4.72" x 13.78"
Item Weight	3.96 pounds (1.8 Kilograms)
Power Source	Battery Operated / 4.5V Adaptor Compatible
Assembly Required	No
Product Care	Wipe Clean
UPC	728162955692

# WARRANTY AND SUPPORT

---

This product is covered by the standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or inquiries regarding your Lemax Dasher's Advent Stable, please contact the retailer from whom you purchased the product or visit the official Lemax website for customer service information.

## Related Documents

	<p><a href="#">Wall-mounted LFP Battery User Manual</a></p> <p>User manual for the Wall-mounted LFP Battery, detailing product parts, size, installation steps, product details, parallel connection diagram, warnings, storage conditions, and technical data.</p>
---	---