



Manuals.plus /

› HORI /

› HORI Nintendo Switch Fighting Commander Instruction Manual

HORI HNSW-244

HORI Nintendo Switch Fighting Commander Instruction Manual

Model: HNSW-244

Brand: HORI

INTRODUCTION

This manual provides detailed instructions for the HORI Nintendo Switch Fighting Commander, a wired controller designed for 2D fighting games. This pad offers a precise D-pad, a six-button layout, and improved ergonomics for an optimal gaming experience. It is officially licensed by Nintendo and compatible with Nintendo Switch and PC (via X-input).

PRODUCT OVERVIEW

Controller Layout

The HORI Fighting Commander features a classic six-button layout on the right side and a responsive D-pad on the left. It also includes assignable shoulder buttons and a D-pad function toggle switch.



Figure 1: Top-down view of the HORI Nintendo Switch Fighting Commander controller, showing the D-pad, six face buttons (X, Y, A, B, R, ZR), and the DP LS RS toggle switch.



Figure 2: Angled view of the controller, highlighting its ergonomic shape and button placement.



Figure 3: Back view of the controller, showing the model number (HNSW-244) and regulatory information.



Figure 4: Top view of the controller, clearly showing the LSB, RSB, ZL, and L shoulder buttons and their assignment switch.



Figure 5: Close-up of the six-button layout (X, Y, A, B, R, ZR) designed for fighting games.



Figure 6: Diagram illustrating the functionality of the LSB/RSB and L/ZL toggle switch for shoulder button assignment.

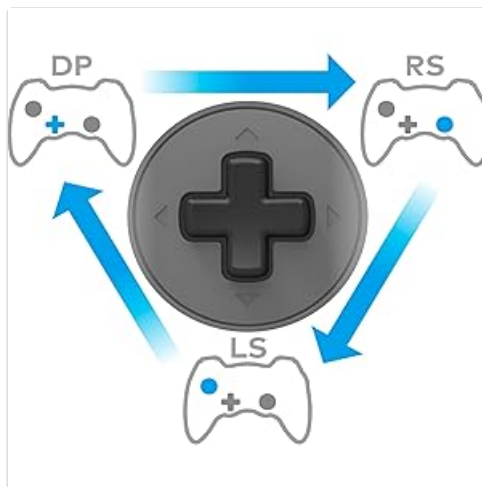


Figure 7: Diagram illustrating the DP LS RS toggle switch, which changes the D-pad's function between D-pad, Left Stick, and Right Stick.

SETUP

Connecting to Nintendo Switch

1. Ensure your Nintendo Switch console is docked and powered on.
2. Locate an available USB port on the Nintendo Switch dock.
3. Plug the USB connector of the Fighting Commander controller into the USB port on the dock.
4. The controller should be automatically recognized by the system.

Connecting to PC

1. Connect the USB connector of the Fighting Commander controller to an available USB port on your PC.
2. The controller is compatible with PC via X-input and should be recognized as a standard gamepad.

The controller features a 10-foot (approximately 3-meter) wired cable for flexible placement.

OPERATING INSTRUCTIONS

D-Pad Function Toggle

The controller includes a toggle switch labeled "DP LS RS" located below the Nintendo Switch logo. This switch allows you to change the function of the D-pad:

- **DP (D-Pad):** The D-pad functions as a standard directional pad.
- **LS (Left Stick):** The D-pad emulates the left analog stick.
- **RS (Right Stick):** The D-pad emulates the right analog stick.

Adjust this setting based on game requirements or personal preference.

Assignable Shoulder Buttons

The controller features assignable shoulder buttons (RSB, LSB, ZL, L). A switch on the top edge of the controller allows mapping of the LSB and RSB buttons to other functions:

- **RSB-ZL:** Maps RSB to the ZL button.
- **LSB-L:** Maps LSB to the L button.
- **RSB-L:** Maps RSB to the L button.
- **LSB-ZL:** Maps LSB to the ZL button.

Refer to the specific game's control settings for optimal button assignments.

Six-Button Layout

The six-button layout (X, Y, A, B, R, ZR) on the right side is optimized for fighting games, providing quick access to multiple commands.

MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Do not attempt to disassemble or repair the controller yourself, as this may void the warranty.
- Store the controller in a safe place when not in use to prevent damage to the cable or buttons.

TROUBLESHOOTING

Controller Not Responding

- Ensure the USB cable is securely connected to the Nintendo Switch dock or PC.
- Try connecting the controller to a different USB port.
- For Nintendo Switch, ensure the console is updated to the latest firmware.
- For PC, check device manager to confirm the controller is recognized and drivers are installed correctly.

Incorrect D-Pad Input

- Verify the "DP LS RS" toggle switch is set to the desired function (DP for standard D-pad input).

Button Malfunction

- Check the assignable shoulder button switch to ensure buttons are mapped as intended.
- If issues persist, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Hori Nintendo Switch Fighting Commander
Model Number	HNSW-244
Compatible Devices	Nintendo Switch, PC
Connectivity Technology	Wired (USB)
Cable Length	Approximately 10 feet (3 meters)
Button Layout	6-button (X, Y, A, B, R, ZR)
Special Features	D-pad function toggle (DP/LS/RS), Assignable shoulder buttons (LSB, RSB, ZL, L)
Dimensions	3.15 x 7.01 x 5.71 inches (approximate)
Weight	9 Grams (approximate)
Manufacturer	HORI
Official License	Officially Licensed by Nintendo

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official HORI website or contact their customer service department. Keep your proof of purchase for warranty claims.