

Fujifilm Instax Mini 90Neo

Fujifilm Instax Mini 90 Neo Classic Instant Film Camera User Manual

MODEL: INSTAX MINI 90NEO

Introduction

This manual provides detailed instructions for the safe and effective use of your Fujifilm Instax Mini 90 Neo Classic Instant Film Camera. Please read this manual thoroughly before operating the camera and retain it for future reference. The Instax Mini 90 combines a classic aesthetic with advanced features for instant photography.

What's Included

Your Fujifilm Instax Mini 90 Neo Classic Instant Film Camera bundle includes the following items:

- Fujifilm Instax Mini 90 Neo Classic Instant Film Camera
- Fujifilm Instax Mini Instant Film Twin Pack (20 Sheets)
- Camera Case
- Fujifilm Instax Mini Photo Album
- 4 colorful filters (Blue, Green, Red, Orange)
- Selfie mirror attachment
- 10 creative wall decor hanging film frames
- 5 colored 3 Inch Table photo plastic frames
- L Shaped Photo Frame For 2x3 Photo Paper
- 60 Sheets Colorful Photo Instant Films Sticker

Product Overview

The Fujifilm Instax Mini 90 Neo Classic is designed with a vintage look and enhanced functionality. It offers advanced features such as bulb and double exposure modes, allowing for creative light capture. The camera also

The complete Fujifilm Instax Mini 90 Neo Classic camera and accessory bundle.



Durable brown PU leather camera case with a detachable strap.



The Instax Mini 90 camera securely fitted within its protective case.



Included colorful filters (orange, green, blue, red) to add creative effects to your photos.



The camera features a selfie mirror and supports a close-up lens for versatile shooting.



A selection of photo frames and decorative stickers to display your instant prints.

Setup

1. **Battery Installation:** Open the battery compartment cover. Insert the included Lithium Ion battery, ensuring correct polarity. Close the cover securely.
2. **Film Loading:** Open the film compartment door on the back of the camera. Align the yellow mark on the film pack with the yellow mark on the camera. Insert the film pack straight in. Close the film compartment door. The camera will automatically eject the black film cover. Do not open the film compartment door until all 10 exposures are used.

Operating Instructions

- Power On/Off:** Press the power button located near the lens to turn the camera on. The lens will extend. Press the power button again to turn off the camera.
- Taking a Photo:** Frame your shot using the viewfinder. Press the shutter button to take a picture. The instant print will eject from the top of the camera.
- Mode Selection:** Use the mode buttons on the back of the camera to select various shooting modes such as Party Mode, Kids Mode, Landscape Mode, Double Exposure Mode, and Bulb Exposure Mode.
- Flash Control:** The camera features a high-performance flash. Use the flash control button to cycle through flash modes (Auto, Fill-in, Red-eye reduction, Flash off).
- Selfie Mirror:** The small mirror located next to the viewfinder assists in framing self-portraits.
- Timer Mode:** Activate the self-timer function for group photos or self-portraits.
- Macro Mode:** For close-up photography, activate the macro mode.

Maintenance

- Cleaning:** Use a soft, dry cloth to clean the camera body and lens. Do not use abrasive cleaners or solvents.
- Battery Care:** Remove the battery if the camera will not be used for an extended period. Store batteries in a cool, dry place.
- Film Storage:** Store unused film packs in a cool, dry place away from direct sunlight.
- Handling:** Avoid dropping the camera or exposing it to extreme temperatures or moisture.

Troubleshooting

Problem	Possible Cause	Solution
Camera does not power on.	Battery is dead or incorrectly inserted.	Recharge or replace the battery. Ensure it is inserted with correct polarity.
No photo ejected after pressing shutter.	Film pack is empty or incorrectly loaded.	Check film counter. Replace film pack if empty. Re-insert film pack correctly.
Photos are too dark/light.	Incorrect exposure mode or lighting conditions.	Adjust exposure compensation or select a different shooting mode suitable for the lighting. Ensure flash is enabled if needed.
Camera case does not fit properly.	Case is not designed for this specific model or is misaligned.	Ensure the camera is correctly oriented within the case. If issues persist, verify case compatibility.

Specifications

Feature	Detail
Brand	Fujifilm

Feature	Detail
Model Name	Instax Mini 90Neo
Film Format Type	Instant
Special Feature	Auto Exposure
Exposure Control Type	Automatic
Batteries	1 Lithium Ion battery (included)
Item Weight	2.99 pounds
Package Dimensions	10.16 x 8.94 x 6.65 inches
UPC	860002934211

Warranty and Support

Your Fujifilm Instax Mini 90 Neo Classic Instant Film Camera is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support, service, or inquiries, please visit the official Fujifilm support website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

© 2024 Fujifilm. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question