

## Bene Casa 037005902671



# Bene Casa Red Portable Electric Espresso Maker

MODEL: 037005902671

### Important Safety Instructions

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the espresso maker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance has an automatic shut-off feature to prevent overheating and burning of espresso.

## Product Overview

The Bene Casa Red Portable Electric Espresso Maker is designed for convenient preparation of 3 or 6 cups of espresso. Its features include a transparent carafe for monitoring, a cool-touch handle for safe pouring, and a 360-degree swiveling power base for ease of use.



The image displays the product packaging and the coffee maker itself. The packaging is white with red accents and features the Bene Casa logo and product name in both English and Spanish. It lists key features: automatic shutoff, transparent carafe, and cordless design. Below the packaging, two views of the red coffee maker are shown: a full view and a view showing the coffee being brewed. To the right, three red callout boxes highlight specific features: brewing capacity, power safety system, and the 360-degree swiveling base. A warranty notice is located at the bottom left of the product area.

**Automático Shutoff** AL LOWE BURNING WITHOUT THE WORRY OF BURNING THE ESPRESSO.  
EL APAGADO AUTOMÁTICO PERMITE LA ELABORACIÓN DE CAFÉ SIN LA PREOCUPACIÓN DE QUE SE QUEME EL ESPRESSO.

**Transparent Carafe** TO MONITOR BREWING PROCESS  
JARRA TRANSPARENTE PARA CONTROLAR EL PROCESO DE ELABORACIÓN

**Cordless Espresso Pot** WITH A 360° DETACHABLE, SWIVELING POWER BASE  
CAFFETIERA ESPRESSO SIN CABLE CON UNA BASE GIRATORIA DESMONTABLE Y GIRATORIA DE 360°

*Designed to inspire*

**bene casa**  
Portable Espresso Coffee Maker / Cafetera Portable

**bene casa**  
Portable Espresso Coffee Maker / Cafetera Portable

**BREWS UP TO 6 SHOTS OF ESPRESSO**  
Prepara hasta 6 porciones de espresso

**POWER SAFETY SYSTEM**  
Sistema de seguridad de energía

**360° SWIVELING BASE**  
Base giratoria 360°

Limited 1-Year Warranty  
Garantía limitada de 1 año  
BC-90267

**Figure 1:** Labeled diagram showing the components of the Bene Casa Electric Espresso Maker, including the 6-cup and 3-cup capacity markings, easy pour spout, cool-touch handle, easy touch to open lid, pressurized 2-level safety valve, 360 swiveling base, detachable base, power safety system, and easy on/off switch.

## Key Features:

- **3 or 6 Cup Capacity:** Brews either 3 or 6 cups of espresso, adjustable by water level.
- **Automatic Shut-Off:** Prevents espresso from burning by automatically turning off when brewing is complete.
- **Swiveling Power Base:** Cordless espresso pot with a 360° detachable base for easy placement and serving.
- **Transparent Carafe:** Allows you to monitor the brewing process.
- **Cool-Touch Handle:** Ergonomically designed for comfortable and safe handling.

## Setup

---

### Before First Use:

1. Unpack the espresso maker and all its components.
2. Wash the transparent carafe, filter funnel, and filter plate with warm, soapy water. Rinse thoroughly and dry. Do not immerse the power base in water.
3. Assemble the unit by placing the filter funnel into the lower chamber and the transparent carafe onto the lower chamber, ensuring a secure fit.
4. Perform a trial run with water only (without coffee) to clean the internal components. Fill the lower chamber with water up to the 6-cup mark, assemble, place on the power base, and turn on. Discard the water after brewing.

### Assembly:



# bene casa

*Designed to inspire*



## **AUTOMATIC SHUTOFF**

Automatic shutoff allows brewing without the worry of burning the espresso



Connect with us @ClubBeneCasa  
[www.BeneCasa.com](http://www.BeneCasa.com)

**Figure 2:** The Bene Casa Electric Espresso Maker fully assembled and ready for use, showcasing its red and black design.

Ensure all parts are correctly assembled before each use. The transparent carafe should be securely screwed onto the lower chamber, and the filter funnel should be properly seated.

## **Operating Instructions**

Follow these steps to brew espresso:

1. **Fill with Water:** Unscrew the transparent carafe from the lower chamber. Fill the lower chamber with fresh, cold water. For 3 cups, fill to the 3-cup mark. For 6 cups, fill to the 6-cup mark. Do not exceed the safety valve level.
2. **Add Coffee:** Insert the filter funnel into the lower chamber. Fill the filter funnel with finely ground espresso coffee. Do not tamp the coffee. Level the coffee gently.
3. **Assemble:** Screw the transparent carafe firmly back onto the lower chamber, ensuring a tight seal.
4. **Place on Base:** Place the assembled espresso maker onto the 360° swiveling power base.
5. **Start Brewing:** Plug the power base into a suitable electrical outlet. Press the On/Off switch to the 'On' position. The indicator light will illuminate.
6. **Monitor Brewing:** The transparent carafe allows you to observe the espresso as it brews and rises into the upper chamber.
7. **Automatic Shut-Off:** The espresso maker will automatically shut off once the brewing cycle is complete, preventing the coffee from burning.
8. **Serve:** Carefully remove the espresso maker from the power base using the cool-touch handle. Pour and serve your fresh espresso.



# bene casa

*Designed to inspire*

## TRANSPARENT CARAFE

Transparent carafe to monitor brewing process



Connect with us @ClubBeneCasa  
[www.BeneCasa.com](http://www.BeneCasa.com)

**Figure 3:** The transparent carafe of the Bene Casa Electric Espresso Maker during the brewing process, showing the espresso rising.



# bene casa

*Designed to inspire*

## COOL TOUCH HANDLE

Ergonomic handle is designed for comfort and easy handling



Connect with us @ClubBeneCasa  
www.BeneCasa.com

Figure 4: The Bene Casa Electric Espresso Maker with its cool-touch handle, safely pouring freshly brewed espresso into a cup.

### Maintenance and Cleaning

Regular cleaning ensures optimal performance and longevity of your espresso maker.

#### Daily Cleaning:

1. Always unplug the appliance and allow it to cool completely before cleaning.
2. Disassemble the transparent carafe, filter funnel, and lower chamber.
3. Discard used coffee grounds.
4. Wash all removable parts (carafe, funnel, filter plate) with warm, soapy water. Use a soft brush to remove any coffee residue.
5. Rinse thoroughly under running water.
6. Dry all parts completely before reassembling or storing.
7. Wipe the exterior of the lower chamber and the power base with a damp cloth. Never immerse the lower chamber or power base in water.

### Descaling:

Depending on water hardness, mineral deposits may accumulate over time. Descale your espresso maker every 2-3 months or as needed.

1. Fill the lower chamber with a mixture of water and white vinegar (1:1 ratio) or a commercial descaling solution according to product instructions.
2. Place the filter funnel (without coffee) and transparent carafe back on the lower chamber.
3. Place on the power base and turn on, allowing the solution to brew through.
4. After the cycle, discard the solution.
5. Run 2-3 cycles with fresh water only to rinse out any remaining descaling solution.

## Troubleshooting

If you encounter issues with your espresso maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Espresso not brewing or very slow.	Not enough water; coffee grounds too fine or tamped too hard; clogged filter; mineral buildup.	Ensure sufficient water. Use medium-fine grounds and do not tamp. Clean filter. Descale the unit.
Weak or watery espresso.	Not enough coffee grounds; coffee grounds too coarse; too much water.	Use recommended amount of coffee. Use finer grounds. Ensure water level is correct for desired cups.
Espresso leaks from sides.	Carafe not screwed on tightly; gasket worn or misplaced.	Ensure carafe is securely tightened. Check and reposition or replace the gasket if necessary.
Unit does not turn on.	Not plugged in; power switch off; power outlet issue.	Check power cord connection. Ensure switch is 'On'. Test outlet with another appliance.

## Specifications

<b>Feature</b>	<b>Detail</b>
Brand	Bene Casa
Model Number	037005902671
Color	Red
Product Dimensions	4.5"D x 6"W x 8"H
Special Feature	Auto Shut-Off
Coffee Maker Type	Espresso Machine
Specific Uses For Product	Espresso
Included Components	Filter
Operation Mode	Fully Automatic
Number of Items	1
Human Interface Input	Buttons
Unit Count	6.0 Count
Coffee Input Type	Ground Coffee
Item Weight	2.44 pounds
Capacity	6 Cups



# bene casa

*Designed to inspire*

## Portable Espresso Coffee Maker BC-90267



Connect with us @ClubBeneCasa  
www.BeneCasa.com

**Figure 5:** Image illustrating the dimensions of the Bene Casa Portable Electric Espresso Maker, showing a height of 9.09 inches (23 cm), a width of 6.07 inches (20.2 cm), and a depth of 4.53 inches (11.5 cm).

### Warranty and Support

This Bene Casa Electric Espresso Maker comes with a **Limited 1-Year Warranty**. Please refer to the product packaging or contact Bene Casa customer service for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact Bene Casa

customer service through their official website or the contact information provided with your purchase.

© 2026 Bene Casa. All rights reserved.