

[Manuals.plus](#) /

> [Wahl](#) /

> WAHL Deluxe Complete Hair Cutting Kit Instruction Manual

Wahl 1398697

WAHL Deluxe Complete Hair Cutting Kit

Model: 1398697 | Brand: Wahl

IMPORTANT SAFETY INFORMATION

WARNING: Keep blades away from eyes and face. Do not use on infants or children. Keep away from water sources. Always unplug the trimmer when not in use. Always follow recommended cleaning and maintenance procedures. Always supervise use by minors.

PRODUCT OVERVIEW

The Wahl Deluxe Complete Hair Cutting Kit is an all-in-one solution for home haircutting, touch-ups, and beard trimming. This comprehensive kit includes a powerful hair clipper, a versatile detail battery trimmer, and a wide array of accessories designed to provide a professional grooming experience at home.



Image: The Wahl Deluxe Complete Hair Cutting Kit, showcasing the main clipper, detail trimmer, and various accessories including guide combs, scissors, and a storage case.

Kit Contents:

- Haircutting clipper
- Clipper blade cover
- Detail battery trimmer
- Trimmer blade cover
- 2 AA Duracell batteries (for trimmer)
- Soft storage case and accessory storage bag
- Barber shears
- Styling hair comb
- Barber hair comb
- 10 clipper attachment guards:
 - No. 1 - 1/8" (3mm)
 - No. 2 - 1/4" (6mm)
 - No. 3 - 3/8" (10mm)
 - No. 4 - 1/2" (13mm)
 - No. 5 - 5/8" (16mm)
 - No. 6 - 3/4" (19mm)
 - No. 7 - 7/8" (22mm)
 - No. 8 - 1" (25mm)
 - Left ear taper

- Right ear taper
- 6 trimmer guide comb attachments:
 - No. 1 - 1/8" (3mm)
 - No. 2 - 1/4" (6mm)
 - No. 3 - 3/8" (10mm)
 - No. 4 - 1/2" (13mm)
 - No. 5 - 5/8" (16mm)
 - No. 6 - 3/4" (19mm)
- Cleaning brush
- Blade oil for clipper & trimmer
- Easy step-by-step full color instructions and easy quick start-up guide



Image: A detailed view of all 29 pieces included in the Wahl Deluxe Haircutting Kit, including the clipper, trimmer, various guide combs, scissors, combs, and maintenance items.

SETUP

Unpacking and Inspection:

Carefully remove all components from the packaging. Inspect all items for any signs of damage. Ensure all listed accessories are present before proceeding.

Battery Installation (Detail Trimmer):

1. Locate the battery compartment on the detail trimmer.
2. Open the compartment cover.
3. Insert the two (2) AA Duracell batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

Initial Blade Oiling:

Before first use, apply a few drops of the included blade oil to the teeth of both the clipper and trimmer blades. Turn the devices on for a few seconds to allow the oil to distribute evenly. Wipe off any excess oil with a soft cloth.

OPERATING INSTRUCTIONS

Using the Hair Clipper:

1. **Select Attachment Guard:** Choose the desired haircut length by selecting one of the 10 clipper attachment guards. Securely attach it to the clipper blade.
2. **Adjust Taper Lever:** The adjustable taper lever allows for blending and fading. Move the lever up for a closer cut and down for a longer cut.
3. **Power On:** Plug the clipper into a suitable power outlet.
4. **Begin Cutting:** Guide the clipper through the hair against the direction of hair growth. For best results, use a steady, even motion.

Using the Detail Trimmer:

1. **Select Trimmer Guide Comb:** For beard trimming or body grooming, select one of the 6 trimmer guide combs and attach it to the trimmer blade. For precise touch-ups (necklines, sideburns, around ears), the trimmer can be used without a guide comb.
2. **Power On:** Ensure batteries are installed and turn on the trimmer.
3. **Begin Trimming:** Carefully guide the trimmer to achieve desired lines and lengths.



Image: Visual guide illustrating the three primary uses of the kit: haircutting with the clipper, touch-ups with the trimmer, and beard grooming with the trimmer.

For detailed haircutting techniques and tips, refer to the free downloadable home haircutting how-to book mentioned in your kit's instructions.

MAINTENANCE

Cleaning Blades:

1. After each use, turn off and unplug the clipper/trimmer.

2. Use the included cleaning brush to remove loose hairs from the blades.
3. For a more thorough cleaning, the blades can be carefully removed (refer to the full instruction manual for specific blade removal steps).

Oiling Blades:

To ensure optimal performance and longevity, apply 2-3 drops of Wahl blade oil to the blades after every few uses or as needed. Turn the device on for a few seconds to distribute the oil, then wipe off any excess. The blades are self-sharpening, designed to cut through all hair types and stay sharp longer with proper maintenance.

Storage:

Store the clipper, trimmer, and all accessories in the provided soft storage case and accessory storage bag in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your Wahl Deluxe Complete Hair Cutting Kit, please refer to the following common solutions:

- **Clipper/Trimmer not turning on:**
 - *Clipper:* Ensure it is securely plugged into a working power outlet.
 - *Trimmer:* Check that the AA batteries are correctly installed and are not depleted. Replace if necessary.
- **Pulling or snagging hair:**
 - Ensure blades are clean and free of hair debris.
 - Apply blade oil as per maintenance instructions.
 - Check if the blades are properly aligned (refer to the full instruction manual for alignment procedures).
- **Reduced cutting performance:**
 - Clean and oil the blades.
 - Ensure the correct attachment guard is securely in place.

For more detailed troubleshooting steps, please consult the full instruction manual included with your kit.

SPECIFICATIONS

Feature	Detail
Model Number	1398697
Brand	Wahl
Product Dimensions	12 x 6 x 4 inches
Item Weight	2.76 Pounds
Power Source (Clipper)	Corded Electric

Feature	Detail
Power Source (Trimmer)	Battery Powered (2 AA batteries included)
Special Feature	Self Sharpening Blades
Recommended Uses	Haircutting, Beard Trimming, Touch-ups
Color	Black
UPC	043917110615, 043917796581

WARRANTY INFORMATION

The Wahl Deluxe Complete Hair Cutting Kit comes with the following limited warranties:

- **Clipper:** 5-year limited warranty
- **Trimmer:** 3-year limited warranty

Please retain your proof of purchase for warranty claims. For full warranty terms and conditions, refer to the detailed instruction manual included with your product or visit the official Wahl website.

SUPPORT

For further assistance, product registration, or to purchase replacement parts, please visit the official Wahl website or contact Wahl customer service.

You can find more information and support resources at the [Wahl Store on Amazon](#).