

Tefal LN8125MX

Tefal LN8125MX Blender User Manual

Model: LN8125MX

1. INTRODUCTION

Thank you for choosing the Tefal LN8125MX Blender. This appliance is designed to assist you in preparing a wide variety of recipes efficiently and safely. Please read this manual carefully before using your blender for the first time and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your appliance.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before operating the blender.
- Do not immerse the motor base in water or other liquids. Clean with a damp cloth only.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Keep hands and utensils out of container while blending to prevent the possibility of severe injury to persons or damage to the blender. A scraper may be used but only when the blender is not running.
- Blades are sharp. Handle with care.
- Always operate blender with lid in place.
- Do not blend hot liquids in the blender. Allow hot liquids to cool before blending.
- This appliance is for household use only.

3. PRODUCT OVERVIEW

The Tefal LN8125MX blender is designed for versatile food preparation. It features a robust motor base, a durable glass jar, and a multi-speed control panel. **Note:** While the product described is a black 10-speed model, visual representations may vary. The image below illustrates a typical Tefal blender design.



This image displays a Tefal blender featuring a vibrant red motor base, a clear glass blending jar, and a black lid. The control panel on the front of the base includes buttons for various functions and a dial indicating 12 speed settings. The blender is designed for kitchen use.

Components:

- **Motor Base:** Contains the motor and control panel.
- **Glass Jar:** The main blending container.
- **Blade Assembly:** Located at the bottom of the glass jar.
- **Lid:** Covers the glass jar during operation.
- **Measuring Cap:** Small removable cap in the lid for adding ingredients during blending.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging. Retain packaging for storage or future shipping.
2. **Clean:** Before first use, wash the glass jar, lid, and measuring cap in warm, soapy water. Rinse thoroughly and dry. Wipe the motor base with a damp cloth.
3. **Assemble:** Place the blade assembly securely into the bottom of the glass jar. Ensure it is tightened properly to prevent leaks.
4. **Position:** Place the motor base on a clean, dry, and stable surface.
5. **Attach Jar:** Place the assembled glass jar onto the motor base, ensuring it is seated correctly and locked into position if your model has a locking mechanism.
6. **Connect Power:** Plug the power cord into a suitable electrical outlet (220 Volts).

5. OPERATING INSTRUCTIONS

The Tefal LN8125MX blender offers 10 speeds for precise control over your blending tasks.

1. **Prepare Ingredients:** Cut solid ingredients into small pieces (approximately 2-3 cm) to facilitate blending.
2. **Add Ingredients:** Place ingredients into the glass jar. For best results, add liquids first, then soft ingredients, followed by hard ingredients and ice. Do not overfill the jar beyond the maximum fill line.
3. **Secure Lid:** Place the lid firmly onto the glass jar and insert the measuring cap.
4. **Select Speed:** Turn the speed dial to your desired setting from 1 to 10. Start with a lower speed for thicker mixtures or to chop, then increase as needed for smoother blending.
5. **Pulse Function:** For short bursts of power or to chop ingredients, use the pulse setting (if available on your model).
6. **Blending:** Allow the blender to run until the desired consistency is achieved. Do not operate continuously for more than 3 minutes to prevent overheating. Allow the motor to cool down for 10-15

minutes between cycles if blending for extended periods.

- 7. Adding Ingredients During Blending:** If necessary, remove the measuring cap from the lid and add ingredients through the opening while the blender is running. Replace the cap immediately.
- 8. Finish:** Once blending is complete, turn the speed dial to the 'OFF' position. Unplug the blender from the power outlet before removing the jar.

6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance will ensure your blender remains in excellent working condition.

Cleaning:

- Immediate Cleaning:** For quick cleaning, after use, fill the jar halfway with warm water and a drop of dish soap. Secure the lid and run the blender on a low speed for 30 seconds. Rinse thoroughly.
- Deep Cleaning:** Disassemble the glass jar, blade assembly, lid, and measuring cap. Wash these parts in warm, soapy water. Use a brush to clean around the blades carefully. All removable parts are generally dishwasher safe (top rack only), but hand washing is recommended for longevity.
- Motor Base:** Wipe the motor base with a damp cloth. Never immerse the motor base in water or any other liquid. Do not use abrasive cleaners or scouring pads.
- Drying:** Ensure all parts are completely dry before reassembling or storing.

Storage:

Store the blender in a dry place. You can store the jar assembled on the motor base or separately.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--|---|---|
| Blender does not start. | Not plugged in; power outlet not working; jar not correctly seated; motor overheated. | Check power cord connection; test outlet with another appliance; ensure jar is securely locked onto the base; unplug and let cool for 15-20 minutes. |
| Ingredients are not blending smoothly. | Too little liquid; too many ingredients; ingredients too large; incorrect speed. | Add more liquid; reduce quantity of ingredients; cut ingredients into smaller pieces; increase speed or use pulse function. |
| Leakage from the bottom of the jar. | Blade assembly not tightened correctly; seal ring missing or damaged. | Ensure blade assembly is securely tightened; check if the seal ring is properly in place and undamaged. Replace if necessary. |
| Burning smell from motor. | Overloading the blender; continuous operation for too long. | Reduce ingredients; do not operate continuously for more than 3 minutes; unplug and let motor cool down completely. If smell persists, discontinue use and contact support. |

8. SPECIFICATIONS

- **Model:** LN8125MX
- **Brand:** Tefal
- **Power:** 300 Watts
- **Voltage:** 220 Volts
- **Number of Speeds:** 10
- **Material:** Plastic (base), Glass (jar)
- **Color:** Black
- **Dimensions (approx.):** 32.2 x 25.4 x 18.6 cm
- **Weight (approx.):** 2.92 kg
- **Components Included:** Blender (Motor Base, Glass Jar, Lid, Measuring Cap, Blade Assembly)

9. WARRANTY AND SUPPORT

Tefal products are manufactured to high-quality standards. For information regarding warranty coverage, terms, and conditions, please refer to the warranty card included with your purchase or visit the official Tefal website. For technical support, spare parts, or service inquiries, please contact Tefal customer service in your region. Keep your proof of purchase for warranty claims.