

Lasko S16225

Lasko S16225 16-inch Pedestal Fan Instruction Manual

Model: S16225 | UPC: 046013463685

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this fan. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Always unplug the fan before cleaning, servicing, or relocating it.
- Do not use the fan in wet or damp locations, such as bathrooms or laundry areas.
- Keep the fan away from open flames, cooking appliances, or heating devices.
- Ensure the power cord is not damaged or placed under carpets or furniture.
- This fan is equipped with the Lasko Blue Plug, a safety feature that incorporates a fuse. Do not remove or tamper with this plug.
- Do not insert fingers or foreign objects into the grille openings.
- Supervise children when the fan is in operation.

PRODUCT OVERVIEW

The Lasko S16225 is a 16-inch pedestal fan designed to provide efficient air circulation and cooling. It features three quiet speeds, widespread oscillation, and a tilt-back fan head for directional airflow. The fan's height is adjustable, making it suitable for various room settings.



Image: Front view of the Lasko S16225 16-inch Pedestal Fan in white, showing the fan head, adjustable stand, and round base.

ASSEMBLY INSTRUCTIONS

Simple assembly is required for this pedestal fan. Follow these steps to set up your fan:

1. **Attach the Base:** Securely connect the fan pole to the round base. Ensure all locking mechanisms or screws are tightened as per the included hardware.



Image: Close-up view of the fan's base and the lower part of the adjustable pole, illustrating how the components connect.

2. **Assemble the Fan Head:** Attach the rear grille, fan blade, and front grille to the motor housing. Ensure the blade nut and grille clips are fastened correctly.
3. **Connect Fan Head to Pole:** Mount the assembled fan head onto the top of the adjustable pole, securing it with the provided screw or locking collar.

Refer to the detailed diagrams in the packaging for specific component identification and assembly steps.

OPERATING INSTRUCTIONS

Controls

The Lasko S16225 fan features simple manual controls located on the fan's pole.



Image: Close-up of the control dial on the fan's pole, showing settings for 0 (off), 1 (low), 2 (medium), and 3 (high).

- **Power/Speed Dial:** Rotate the dial to select your desired fan speed: **0** (Off), **1** (Low), **2** (Medium), or **3** (High).
- **Oscillation Knob:** A separate knob or button (if present) on the motor housing controls the widespread oscillation feature. Pull up to stop oscillation, push down to start.

Adjusting Height and Tilt

- **Height Adjustment:** Loosen the height adjustment collar on the fan pole, extend or retract the pole to the desired height (between 41 and 53 inches), and then securely tighten the collar.
- **Tilt-Back Head:** The fan head can be manually tilted up or down to direct airflow. Gently push or pull the fan head to the desired angle.

MAINTENANCE

Cleaning

Regular cleaning helps maintain the fan's performance and extends its lifespan.

1. **Unplug the Fan:** Always ensure the fan is unplugged from the power outlet before cleaning.
2. **Exterior Cleaning:** Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
3. **Grille Cleaning:** The grilles can be carefully wiped to remove dust. For thorough cleaning, the grilles may be removable (refer to assembly instructions for disassembly).
4. **Blade Cleaning:** If the blades are accessible, wipe them with a soft, damp cloth. Ensure the

blades are completely dry before reassembling or operating the fan.

Storage

When not in use, store the fan in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

If your fan is not operating as expected, consult the following common issues and solutions:

- **Fan Does Not Turn On:**

- Ensure the fan is securely plugged into a working electrical outlet.
- Check the power cord for any damage.
- Verify that the speed dial is set to a speed setting (1, 2, or 3) and not '0' (Off).
- The Lasko Blue Plug contains a safety fuse. If the fan does not operate, the fuse may have blown. Refer to the instructions on the plug for fuse replacement (if applicable and safe to do so).

- **Weak Airflow:**

- Increase the fan speed using the control dial.
- Ensure the fan grilles and blades are clean and free from dust buildup.
- Adjust the fan's tilt to direct airflow more effectively.

- **Fan Makes Unusual Noise:**

- Ensure the fan is placed on a stable, level surface.
- Check for any loose parts or obstructions within the fan grilles.

If the problem persists after attempting these solutions, contact Lasko customer support for further assistance.

SPECIFICATIONS

- **Brand:** Lasko
- **Model:** S16225 (463689)
- **Fan Diameter:** 16 inches
- **Speeds:** 3 (Low, Medium, High)
- **Power Source:** Corded Electric
- **Control Method:** Manual Control Dial
- **Height Adjustment:** 41 to 53 inches
- **Features:** Widespread Oscillation, Tilt-Back Fan Head
- **Item Weight:** Approximately 8.32 pounds
- **Safety Features:** Lasko Blue Plug (fused safety plug), HVI, cUL certified
- **Included Components:** Lasko - S16225 16" Pedestal Fan With Dial On Stand - White







WARRANTY AND SUPPORT

This Lasko S16225 Pedestal Fan comes with a basic manufacturer's warranty. Specific details regarding the warranty period and coverage are typically included with the product packaging or available on the manufacturer's official website.

For warranty claims, technical support, or any questions not covered in this manual, please contact Lasko customer support directly. You can usually find contact information on the Lasko website or on the product packaging.

For more information, visit the official Lasko website: www.lasko.com

Related Documents - S16225

| | |
|---|---|
|  | <p>Lasko 16" Pedestal Fan Model S16225: Operating Manual and Safety Instructions</p> <p>This document provides operating instructions, safety warnings, assembly guides, maintenance tips, troubleshooting advice, and warranty information for the Lasko 16" Pedestal Fan, Model S16225. Designed for residential use.</p> |
|  | <p>Manual de Instrucciones Lasko Ventilador de Pedestal Ajustable de 20" con Control Remoto</p> <p>Obtenga información detallada sobre el ventilador de pedestal Lasko de 20 pulgadas con control remoto. Incluye instrucciones de seguridad, mantenimiento, solución de problemas y garantía para los modelos S20620 y S20625.</p> |
|  | <p>Lasko 18" Adjustable Pedestal Fan with Remote Control (Model S18635) - Instruction Manual</p> <p>Comprehensive instruction manual for the Lasko 18-inch Adjustable Pedestal Fan with Remote Control (Model S18635), covering setup, operation, safety, maintenance, troubleshooting, and warranty information.</p> |
|  | <p>Lasko 18" Eco Quiet DC Pedestal Fan with Remote Control - Instruction Manual</p> <p>Instruction manual for the Lasko 18" Eco Quiet DC Pedestal Fan (Models S18705/S18708), including safety instructions, parts list, assembly, operation, maintenance, troubleshooting, and warranty information.</p> |
|  | <p>Lasko 18" Adjustable Pedestal Fan - Instruction Manual and Safety Guide</p> <p>Comprehensive instruction manual and safety guide for the Lasko 18" Adjustable Pedestal Fan (Models S18931, S18910, S18902). Learn about maintenance, troubleshooting, assembly, operation, and warranty information.</p> |
|  | <p>Lasko 16-Inch Adjustable Pedestal Fan with Thermostat and Remote Control - Instruction Manual</p> <p>User manual and instructions for the Lasko 16-inch adjustable pedestal fan (models S16612, S16614) featuring thermostat and remote control. Includes safety information, assembly, operation, maintenance, and troubleshooting.</p> |

