

[Manuals.plus](#) /

> [MUSE](#) /

> Muse M-172 DBT DAB+/FM Clock Radio User Manual

MUSE M-172 DBT

Muse M-172 DBT DAB+/FM Clock Radio User Manual

Model: M-172 DBT

1. INTRODUCTION

Thank you for purchasing the Muse M-172 DBT DAB+/FM Clock Radio. This device combines a digital clock, dual alarm functions, FM/DAB/DAB+ radio, Bluetooth audio streaming, and a convenient USB charging port. This manual provides essential information for setting up, operating, and maintaining your new clock radio to ensure optimal performance and longevity.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter. Ensure the voltage matches your local power supply.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Keep it away from water sources like bathtubs, sinks, and swimming pools.
- **Ventilation:** Ensure adequate ventilation. Do not block ventilation openings. Avoid placing the unit on soft surfaces that may obstruct airflow.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the unit before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Batteries:** If using backup batteries, ensure correct polarity. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries responsibly.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check that all items listed below are present in your package:

- Muse M-172 DBT DAB+/FM Clock Radio
- Power Adapter
- User Manual



Image 3.1: The Muse M-172 DBT Clock Radio packaging, showing the device and its key features.

4. PRODUCT OVERVIEW

The Muse M-172 DBT is a compact and versatile clock radio designed for ease of use and clear audio. It features a large, dimmable white LED display for time and station information, along with intuitive controls on the top panel. The device includes a built-in speaker and a USB port for charging external devices.



Image 4.1: Front view of the Muse M-172 DBT Clock Radio, highlighting the LED display and speaker grille.

Key Features:

- DAB+/FM PLL Digital Radio Tuner with 20 Presets (10 DAB+, 10 FM)
- Bluetooth Connectivity for Wireless Audio Streaming
- USB Port for Mobile Device Charging
- Dual Alarm Function with Wake-up Options (Radio, Bluetooth, Buzzer)
- Large White Dimmable LED Display
- Snooze and Sleep Functions
- AUX-In Jack for Wired Audio Connection

5. SETUP

5.1 Power Connection

1. Unpack the Muse M-172 DBT and its power adapter.
2. Connect the power adapter cable to the DC IN jack located on the rear of the unit.
3. Plug the power adapter into a standard AC wall outlet (240V AC).
4. The unit will power on, and the display will illuminate.

5.2 Battery Backup (Optional)

The unit requires 2 AAA batteries (not included) for time and alarm settings backup during a power outage.

1. Locate the battery compartment on the bottom of the unit.
2. Open the battery compartment cover.

3. Insert 2 AAA batteries, ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

6. OPERATING INSTRUCTIONS

6.1 Setting Time and Date

Upon initial power-on, the unit may automatically synchronize time via DAB+ signal. If not, or to adjust manually:

1. Press and hold the **TIME SET** button (refer to your unit's button layout for exact labeling).
2. Use the **TUNE +/-** buttons to adjust the hour, then press **TIME SET** to confirm.
3. Repeat for minutes, year, month, and day.
4. Press **TIME SET** again to exit.

6.2 Radio Operation (FM/DAB/DAB+)

1. Press the **SOURCE** button to select FM or DAB mode.
2. **Automatic Scan:** In FM or DAB mode, press and hold the **SCAN** button to automatically scan and store available stations.
3. **Manual Tuning:** Use the **TUNE +/-** buttons to manually adjust the frequency.
4. **Recalling Presets:** Press the **PRESET** button, then use **TUNE +/-** to select a stored station. Press **PRESET** again to confirm.
5. **Storing Presets:** Tune to your desired station. Press and hold the **PRESET** button until the preset number flashes. Use **TUNE +/-** to select a preset number, then press **PRESET** to save.

6.3 Bluetooth Pairing

1. Press the **SOURCE** button to select Bluetooth mode. The display will show 'BT' and flash, indicating it's in pairing mode.
2. On your smartphone or tablet, enable Bluetooth and search for available devices.
3. Select 'M-172 DBT' from the list of devices.
4. Once paired, the display will show 'BT' steadily, and you can stream audio from your device.

6.4 USB Charging

The USB port on the rear of the unit can be used to charge compatible mobile devices.

1. Connect your mobile device's USB charging cable to the USB port on the M-172 DBT.
2. Ensure the M-172 DBT is powered on.
3. Your device should begin charging.

6.5 Alarm Settings

The M-172 DBT features two independent alarms (Alarm 1 and Alarm 2).

1. Press and hold the **ALARM 1** or **ALARM 2** button.
2. Use **TUNE +/-** to set the alarm hour, then press the respective **ALARM** button to confirm.
3. Repeat for minutes.
4. Select the alarm source (Buzzer, FM, DAB, or Bluetooth) using **TUNE +/-**, then confirm.
5. Adjust the alarm volume using **TUNE +/-**, then confirm.
6. To activate/deactivate an alarm, press the **ALARM 1** or **ALARM 2** button briefly. An alarm icon will appear/disappear on the display.

6.6 Snooze and Sleep Functions

- **Snooze:** When an alarm sounds, press the **SNOOZE** button to temporarily silence it for a few minutes. The alarm will sound again after the snooze period.
- **Sleep:** Press the **SLEEP** button repeatedly to set a sleep timer (e.g., 15, 30, 60, 90 minutes). The unit will automatically turn off after the selected time.

6.7 Display Dimmer

Press the **DIMMER** button (or similar labeled button) repeatedly to adjust the brightness level of the LED display.

7. MAINTENANCE

7.1 Cleaning

To maintain the appearance of your clock radio:

- Unplug the unit from the power outlet before cleaning.
- Use a soft, dry, lint-free cloth to wipe the surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

7.2 Battery Replacement

If the time and alarm settings are lost during a power outage, the backup batteries may need replacement.

- Follow the steps in Section 5.2 to replace the 2 AAA batteries.
- Ensure to dispose of old batteries according to local regulations.

8. TROUBLESHOOTING

If you encounter issues with your Muse M-172 DBT, please refer to the following table for common problems and solutions:

Problem	Possible Cause	Solution
No power / Display off	Power adapter not connected or faulty.	Ensure the power adapter is securely plugged into the unit and a working wall outlet.
Poor radio reception	Weak signal; antenna not extended.	Extend the telescopic antenna fully. Try repositioning the unit for better reception.
Bluetooth not pairing	Unit not in pairing mode; device too far.	Ensure the unit is in Bluetooth pairing mode (flashing 'BT'). Move your device closer to the unit.
Alarm does not sound	Alarm not activated; volume too low.	Check if the alarm icon is displayed. Increase the alarm volume.
USB charging not working	Unit off; cable faulty; device incompatible.	Ensure the unit is powered on. Try a different USB cable or device.

9. SPECIFICATIONS

Brand	MUSE
Model Number	M-172 DBT
Color	Dark Grey
Product Dimensions (L x W x H)	19 x 7 x 6.8 cm
Weight	448 grams
Voltage	240 Volts (AC)
Power Source	Electric Cable
Display Type	Digital LED
Special Features	Alarm, Charge Indicator, Radio, Wake-up Function, Bluetooth, USB Charging
Frame Material	Acrylonitrile Butadiene Styrene (ABS)
Batteries Required	2 AAA (for backup, not included)
Mounting Type	Tabletop

10. WARRANTY AND SUPPORT

This product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact your retailer or the manufacturer's customer service department. Keep your proof of purchase for warranty purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B088C7KJJK>

More documents and user manuals: <https://manuals.plus/>