

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Iconbit](#) /
- › [Iconbit AS-1978K Kick Scooter Accessory Kit User Manual](#)

Iconbit AS-1978K

Iconbit AS-1978K Kick Scooter Accessory Kit User Manual

Model: AS-1978K

INTRODUCTION

The Iconbit AS-1978K Kick Scooter Accessory Kit is a comprehensive 4-piece set designed to enhance your e-scooter experience. This kit provides practical solutions for carrying essentials, securing your scooter, and improving convenience during your rides. It includes a water bottle holder, a smartphone holder, a kick scooter carrying strap, and a kick scooter lock, ensuring you have everything needed for a complete and secure scooter journey.

PACKAGE CONTENTS



Figure 1: Overview of the Iconbit AS-1978K Kick Scooter Accessory Kit components. From left to right: the adjustable carrying strap with shoulder pad, the coiled cable lock with keys, the bicycle-style water bottle cage, and the adjustable smartphone mount.

Upon opening the package, verify that all the following components are present:

- **Water Bottle Holder:** Designed to securely hold standard water bottles.
- **Smartphone Holder:** Adjustable mount for various smartphone sizes.
- **Kickscooter Carrying Strap:** Adjustable strap with padded shoulder section for comfortable transport.
- **Kick Scooter Lock:** Cable lock with keys for securing your scooter.

SETUP AND INSTALLATION

Follow these instructions to properly install each accessory on your kick scooter.

1. Water Bottle Holder Installation

1. Identify a suitable mounting location on your scooter's handlebar or frame. Ensure it does not obstruct steering or braking.
2. Use the provided mounting hardware (if any, typically screws and clamps) to attach the holder securely. Tighten fasteners firmly but do not overtighten.
3. Test the holder by placing a water bottle inside to ensure it is stable during movement.

2. Smartphone Holder Installation

1. Choose a position on the handlebar that allows for easy viewing of your smartphone without impeding your grip or controls.
2. Attach the base clamp of the smartphone holder to the handlebar. Ensure the clamp is snug and the holder does not rotate freely.
3. Adjust the angle of the holder for optimal viewing.
4. To insert your smartphone, expand the holder's grips and carefully place your device inside, ensuring it is held firmly by the side clamps.

3. Kickscooter Carrying Strap Attachment

1. Locate sturdy points on your scooter's frame or stem where the strap's hooks can be securely attached.
2. Attach one hook to the front section of the scooter (e.g., near the handlebar stem) and the other hook to the rear section (e.g., near the rear wheel or deck).
3. Adjust the length of the strap using the buckles to achieve a comfortable carrying height when the scooter is folded or upright. The padded section should rest comfortably on your shoulder.

4. Kick Scooter Lock Usage

1. To secure your scooter, find a fixed, immovable object such as a bike rack, lamppost, or sturdy fence.
2. Thread the cable lock through a part of your scooter's frame or wheel that cannot be easily removed.
3. Pass the cable around the fixed object.
4. Insert the end of the cable into the locking mechanism and turn the key to secure it.
5. Ensure the lock is fully engaged before leaving your scooter unattended. Keep the keys in a safe place.

OPERATION

Once installed, these accessories are ready for use.

- **Water Bottle Holder:** Simply slide your water bottle into the holder. Ensure it is snug to prevent it from falling out during rides.
- **Smartphone Holder:** Place your smartphone into the holder, ensuring the adjustable grips secure it firmly. Verify that the phone is stable before riding.
- **Kickscooter Carrying Strap:** When you need to carry your scooter, lift it by the strap, allowing the weight to distribute across your shoulder. This is particularly useful for navigating stairs or public transport.
- **Kick Scooter Lock:** Use the lock whenever you need to leave your scooter unattended in a public place. Always secure it to an immovable object.

MAINTENANCE

Proper maintenance will extend the life of your accessory kit.

- **Cleaning:** Wipe down all components with a damp cloth as needed. Avoid harsh chemicals that may damage plastic or fabric.
- **Inspection:** Periodically check all mounting points and straps for wear and tear. Ensure all screws and clamps remain tight.
- **Lock Care:** For the scooter lock, occasionally apply a small amount of lubricant to the keyhole and locking mechanism to ensure smooth operation.
- **Storage:** When not in use, store the kit in a cool, dry place away from direct sunlight to prevent material degradation.

TROUBLESHOOTING

Here are some common issues and their solutions.

Problem	Possible Cause	Solution
Accessory feels loose after installation.	Mounting screws/clamps are not tight enough.	Retighten all mounting screws and clamps. Ensure they are securely fastened to the scooter frame or handlebar.
Smartphone slips out of holder.	Holder grips are not fully engaged or phone is too small/large.	Ensure the adjustable grips are tightened firmly around your smartphone. Verify your phone's dimensions are within the holder's specified range.
Lock mechanism is stiff or difficult to turn.	Lack of lubrication or dirt in the mechanism.	Apply a small amount of graphite lubricant or a silicone-based spray into the keyhole and mechanism. Work the key in and out several times.
Carrying strap feels uncomfortable.	Strap length is incorrect or scooter balance is off.	Adjust the strap length to find a comfortable carrying position. Ensure the scooter is balanced when lifted to distribute weight evenly.

SPECIFICATIONS

Brand: Iconbit

Model Number: AS-1978K

Included Components: Water Bottle Holder, Smartphone Holder, Kickscooter Carrying Strap, Kick Scooter Lock

Color: Black

Material Type: Plastic (Primary)

Product Dimensions: 20.2 x 9.5 x 25.1 cm (approximate package dimensions)

Item Weight: 770 g

Batteries Included: No

Age Range: Adult

WARRANTY AND SUPPORT

For warranty information or technical support regarding your Iconbit AS-1978K Kick Scooter Accessory Kit, please refer to the documentation provided at the time of purchase or contact Iconbit customer service directly. Contact details can typically be found on the manufacturer's official website.

