

[manuals.plus](#) /› [Panasonic](#) /› [Panasonic ER-GB96-K Beard Trimmer Instruction Manual](#)

## Panasonic ER-GB96-K

# Panasonic ER-GB96-K Beard Trimmer Instruction Manual

Model: ER-GB96-K

## 1. PRODUCT OVERVIEW

The Panasonic ER-GB96-K electric beard trimmer is designed for precise and comfortable beard and mustache styling at home. It features acute-edge, ultra-sharp stainless-steel blades with wider tips to capture more hair efficiently. Powered by a high-torque motor, it ensures smooth trimming of even dense beards without snagging or pulling. The trimmer offers up to 58 trim length settings (0.5mm to 30mm) using a quick-adjust dial and four comb attachments. A 5mm-wide detail attachment is included for precise styling. The device is IPX7 waterproof, allowing for wet or dry use and easy cleaning under running water. It operates corded or cordless, providing up to 50 minutes of use on a 1-hour charge.

## 2. SAFETY INFORMATION

- Always unplug the trimmer from the electrical outlet when washing or using for wet trimming.
- Do not use on infants or children without adult supervision.
- Keep the trimmer away from water sources while in use.
- Follow recommended cleaning and maintenance procedures to prevent injury from dull or damaged blades.

## 3. SETUP AND CHARGING

### 3.1 Initial Charge

Before first use, or if the trimmer has not been used for an extended period, fully charge the device. A single 1-hour charge provides up to 50 minutes of cordless use. The trimmer can also be used while plugged in for continuous operation.

### 3.2 Attaching Combs

Select the appropriate comb attachment based on your desired hair length. The trimmer includes four comb


attachments for various lengths and a detail attachment for precision.

# 4 STYLE ATTACHMENTS




## Attachment A

For shorter, 1-10mm beard lengths.

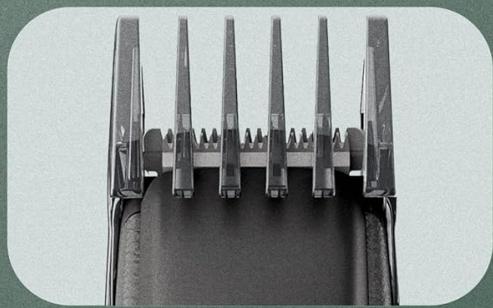

## Attachment B

for medium, 11-20mm beard lengths.

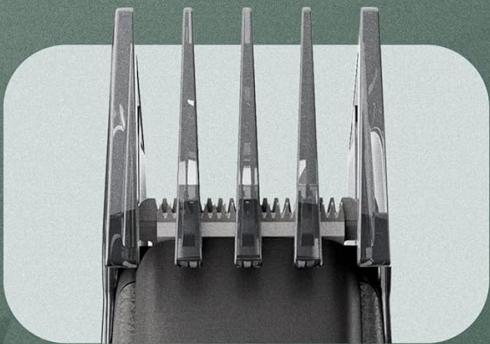

## Attachment C

For long, 21-30mm beard lengths.



## Detail Attachment

A 5mm-wide detail attachment adds the perfect finish.

Image: The four comb attachments and the detail attachment.

### 3.3 Adjusting Length Settings

The quick-adjust dial allows for precise length settings from 0.5mm (without attachment) to 30mm. Rotate the dial to select your preferred trimming length.



# QUICK-ADJUST TRIM DIAL

With **58 length settings** (0.5mm - 30mm).

Image: Quick-adjust trim dial for precise length control.

## 4. OPERATING INSTRUCTIONS

Follow these general steps for trimming. For specific styles, refer to the video tutorials provided below.

### 4.1 General Trimming

1. Ensure the trimmer is charged or plugged in.
2. Attach the desired comb and set the length using the dial.
3. Hold the trimmer against your skin and move it slowly against the direction of hair growth for an even trim.
4. For areas requiring precision, use the 5mm detail attachment.

### 4.2 Styling Tutorials

#### Defined Stubble Style

Video: This tutorial demonstrates how to achieve a defined stubble look using the Panasonic ER-GB96-K trimmer.

## Thick Boxed Beard Style

Video: Learn how to style and maintain a thick boxed beard with this guide for the Panasonic ER-GB96-K trimmer.

## Barber Beard Style

Video: This video provides instructions for achieving a classic barber beard style using the Panasonic ER-GB96-K trimmer.

## 5. MAINTENANCE

---

### 5.1 Cleaning

The Panasonic ER-GB96-K is IPX7 waterproof. For optimal hygiene and performance, rinse the blades under running water after each use. Use the included cleaning brush to remove any trapped hairs.



# SHOWERPROOF & EASY TO CLEAN

**Trim wet or dry** and rinsing  
under running water.

Image: Trimmer being rinsed under water for easy cleaning.

### 5.2 Blade Replacement

To maintain peak performance, replace the blade every 3 years or when it becomes dull. The replacement blade model is WER9620Y.

## 6. TROUBLESHOOTING

---

If you experience any issues with your Panasonic ER-GB96-K trimmer, please refer to the following common solutions:

- **Trimmer not turning on:** Ensure the device is fully charged or connected to a power source. Check the power outlet.
- **Poor trimming performance:** Clean the blades thoroughly to remove any hair buildup. Ensure the blades are properly oiled. If performance does not improve, the blades may need replacement.
- **Snagging or pulling hair:** This often indicates dull blades. Consider replacing the blade (WER9620Y). Ensure you are trimming against the grain of the hair.
- **Battery not holding charge:** Ensure the charging cable is securely connected. If the issue persists, the battery may need servicing.

For further assistance, please contact Panasonic customer support.

## 7. SPECIFICATIONS

---

- **Model Number:** ER-GB96-K
- **Product Dimensions:** 1.65 x 1.69 x 6.69 inches
- **Item Weight:** 5.6 ounces (0.35 Pounds)
- **Power Source:** Corded Electric / Cordless (Rechargeable)
- **Run Time:** Up to 50 minutes (cordless)
- **Charge Time:** 1 hour
- **Waterproof Rating:** IPX7
- **Length Settings:** 58 (0.5mm to 30mm)
- **Attachments:** 4 comb attachments, 1 detail attachment
- **Color:** Black

## 8. WARRANTY AND SUPPORT

---

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For product support, replacement parts, or service inquiries, visit the official Panasonic website or contact their customer service department.