

KLIM KLIM Nomad

KLIM Discman Portable CD Player User Manual

Model: KLIM Nomad

INTRODUCTION

Thank you for choosing the KLIM Discman Portable CD Player. This manual provides essential information to help you set up, operate, and maintain your device. Please read it carefully to ensure proper use and to maximize your listening experience.

WHAT'S IN THE Box?

Upon unboxing your KLIM Discman, please verify that all the following items are included:

- KLIM Discman CD Player
- KLIM Fusion wired earphones
- Earphone Accessories
- USB-C Charging Cable
- 3.5 mm audio jack cable
- Detailed User Manual (this document)
- CD player pouch for easy carrying and safety



Image: The KLIM Discman Portable CD Player shown with its accompanying accessories, including the wired earphones, charging cable, and audio cable.

PRODUCT OVERVIEW

Familiarize yourself with the main components and features of your KLIM Discman:



KLIM DISCMAN



BUILT-IN BATTERY



SHOCK PROTECTION



HOURS OF PLAYBACK



PROTECTIVE CASE



Image: An illustration highlighting key features of the KLIM Discman, such as its built-in rechargeable battery, shock protection, extended playback hours, and the included protective case.

- Built-in Rechargeable Battery:** Provides long hours of playtime on a single charge.
- Anti-Skip/Anti-Shock Protection:** Ensures uninterrupted music playback by preloading music for up to 100 seconds.
- LCD Display:** Shows track number, time, and playback status.
- Control Buttons:** Intuitive buttons for playback, volume, and mode selection.
- 3.5mm AUX Output:** For connecting headphones or external speakers.
- USB-C Charging Port:** For convenient charging.

SETUP

1. Charging the Device

Before first use, fully charge the KLIM Discman. Connect the provided USB-C charging cable to the device's USB-C port

and the other end to a compatible USB power adapter (not included) or a computer's USB port.

- The charging indicator light will show the charging status.
- A full charge provides extended hours of listening pleasure.

2. Inserting a CD

1. Locate the 'OPEN' switch on the side of the Discman.
2. Slide the switch to open the CD compartment lid.
3. Carefully place a CD (CD, CD-R, CD-RW, MP3, WMA format) onto the spindle, ensuring it clicks into place.
4. Close the lid firmly until it latches.



**COMPATIBLE WITH
MULTIPLE CD FORMATS**



Image: The KLIM Discman highlighting its compatibility with various CD formats, including standard CD, CD-R, CD-RW, MP3 CDs, and Mini CDs.

3. Connecting Headphones or External Audio Devices

Plug the KLIM Fusion wired earphones or your preferred 3.5mm audio cable into the AUX output jack on the side of the

Discman.

- You can connect the Discman to external speakers or a car audio system using the 3.5mm audio jack cable.



Image: The KLIM Discman positioned in a car's center console, demonstrating its portability and suitability for use as a car CD player.

OPERATING INSTRUCTIONS

Basic Playback Controls

- **Power On/Off:** Slide the 'ON/OFF' switch to power the device on or off.
- **Play/Pause (▶):** Press to start or pause playback.
- **Stop (■):** Press to stop playback.
- **Previous/Rewind (◀◀):** Press once to go to the beginning of the current track. Press multiple times or hold to rewind.
- **Next/Fast Forward (▶▶):** Press once to skip to the next track. Press multiple times or hold to fast forward.

- **Volume Control:** Use the dedicated volume dial on the side of the device to adjust the audio level.
- **Hold Switch:** Slide the 'HOLD' switch to lock all buttons and prevent accidental presses during transport.

Advanced Features

- **EQ Effects:** Press the 'EQ' button to cycle through different equalizer presets: BBS (Bass Boost System), POP, JAZZ, ROCK, CLASSIC.
- **Playback Modes:** Use the 'MODE' button to select playback options such as single loop (repeat one track), shuffle (random playback), or all loop (repeat all tracks).
- **Program Play:** The 'PROG' button allows you to program a specific order of tracks to play. Refer to the on-screen instructions for detailed programming steps.
- **A-B Repeat:** The 'A-B' button allows you to repeat a specific section of a track. Press once at the start point (A) and again at the end point (B) to set the loop.

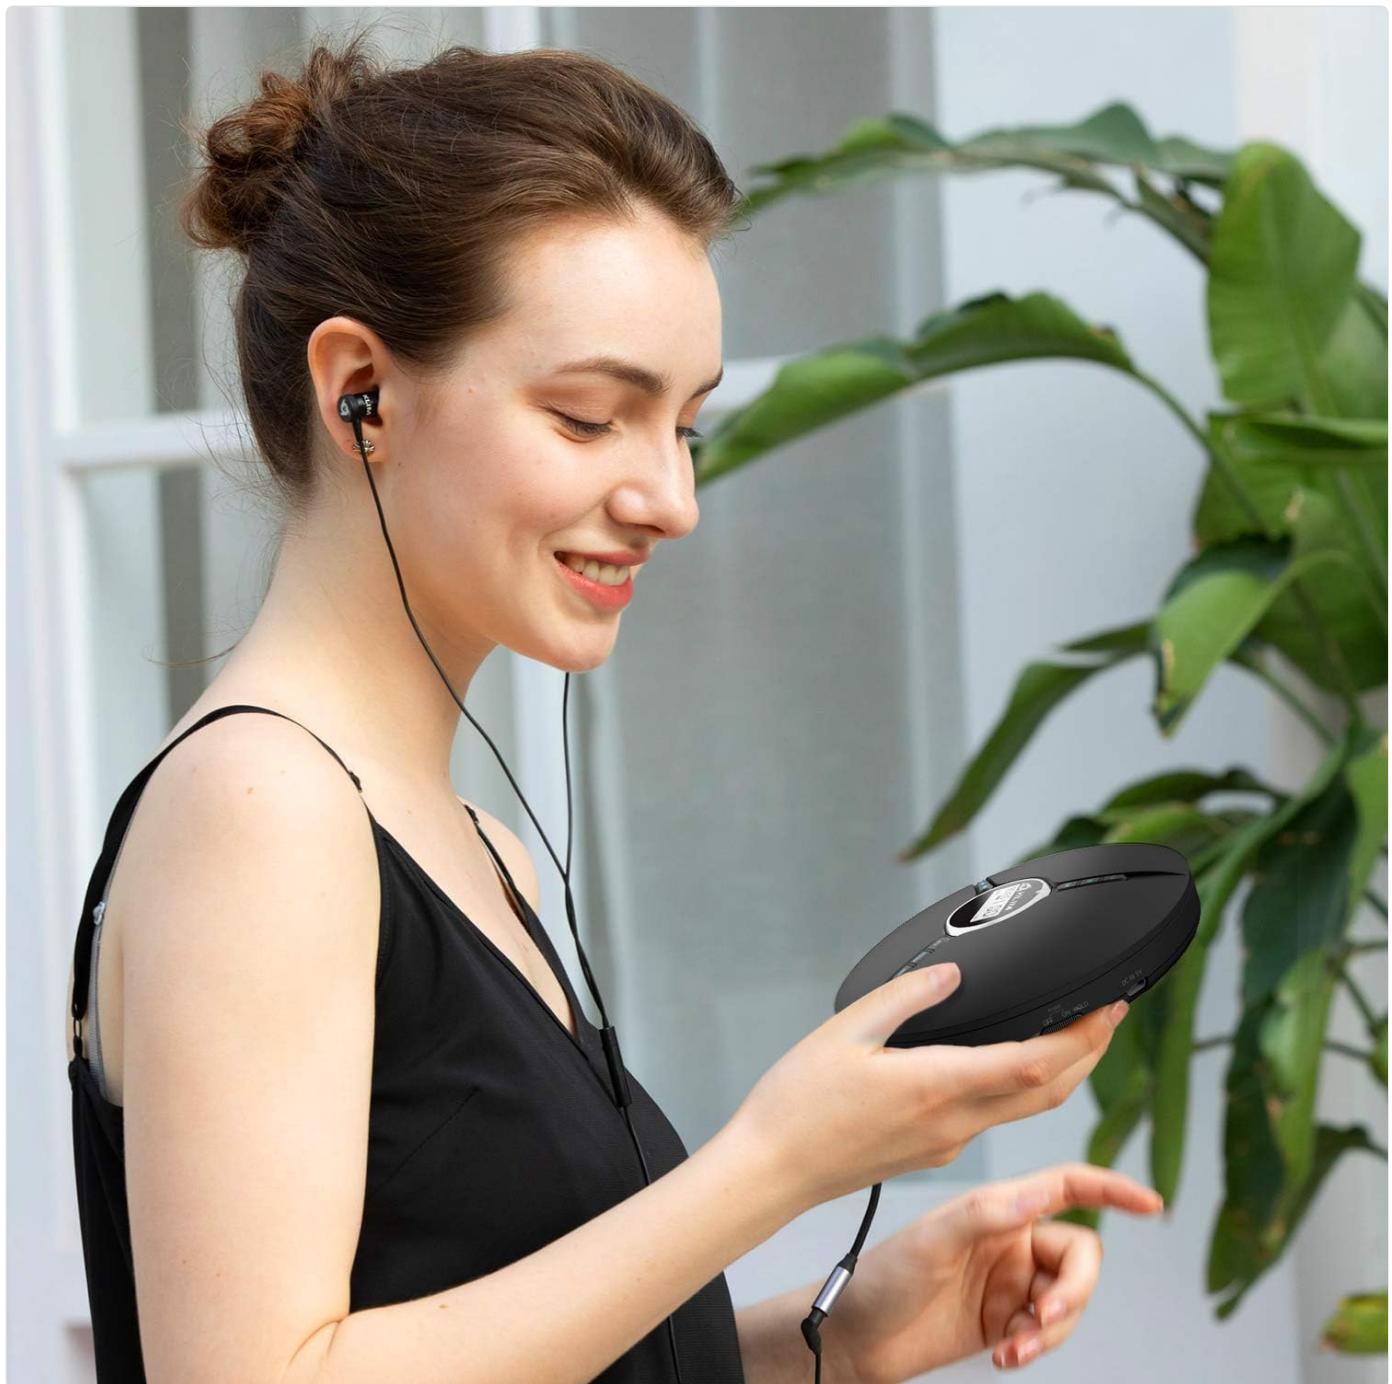


Image: A person enjoying music using the KLIM Discman and connected headphones, demonstrating its portable nature.

MAINTENANCE

Cleaning the Device

- Wipe the exterior of the Discman with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- For the optical lens, use a specialized CD lens cleaning kit if necessary, following its instructions carefully. Avoid touching the lens directly.

Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Charge the device regularly, even if not in use for extended periods.
- Store the device in a cool, dry place away from extreme temperatures.

CD Care

- Handle CDs by their edges to avoid fingerprints and scratches.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.
- Store CDs in their cases to protect them from dust and damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; Power switch off; Hold switch engaged.	Charge the device; Ensure 'ON/OFF' switch is 'ON'; Disengage 'HOLD' switch.
CD skips or stops playing.	Scratched/dirty CD; Excessive vibration; Disc not seated properly.	Clean or replace CD; Minimize movement; Ensure CD is correctly placed on spindle.
No sound.	Headphones not connected; Volume too low; Faulty headphones.	Ensure headphones are fully plugged in; Increase volume; Test with different headphones.
Battery not charging.	Faulty cable/adapter; Charging port issue.	Try a different USB-C cable and power adapter; Contact support if issue persists.

SPECIFICATIONS

CARRY IT EVERYWHERE



Image: A visual representation of the KLIM Discman's dimensions, indicating its compact and portable size.

Feature	Detail
Product Dimensions	5.51 x 5.51 x 1.1 inches
Item Weight	8.8 ounces (0.25 Kilograms)
Model Number	KLIM Nomad
Batteries	1 Lithium Metal battery (included)
Battery Life	Up to 14 Hours
Connectivity Technology	Aux
Compatible Devices	Headphones, External Speakers

Feature	Detail
Supported Disc Formats	CD, CD-R, HDCD, WMA, MP3 (via CDs and TF cards)
Manufacturer	KLIM
Country of Origin	China

WARRANTY AND SUPPORT

The KLIM Discman is backed by a generous **5-year assurance**, guaranteeing reliable performance over time. This commitment reflects the quality and durability of the product's components.

If you encounter any issues or require assistance, please do not hesitate to contact KLIM customer support. Our team of specialists aims to answer within 24 hours.

Contact Us: www.klimtechs.com/contact-us



Image: An illustration detailing KLIM's 5-year protection promise and information on how to contact their customer quality service.

© 2024 KLIM Technologies. All rights reserved.

Documents - KLIM – KLIM Nomad



[\[pdf\]](#) User Manual

MAN Nomad manual all versions 20231011 v18 cdr Luis Manuale KLIM Lettore CD Portatile portatile con Bluetooth Technologies klim nomad cd player v 1697072200cdn shopify s files 1 0710 0101 4551 ||| Earphone power output Earphone impedance 64 In TF card mode, long press the button to enter th ... ice . The CD player does not connect to my car s bluetooth system External devices including the KLIM Nomad cannot be guaranteed to work with all car manufacturers infotainment system. Car system...

lang:fr score:46 filesize: 17.57 M page_count: 34 document date: 2023-10-11



[pdf] User Manual Instructions Troubleshooting Guide Diagram

MAN Nomad manual 20211013 v18 cdr Luis KLIM MULTI klimtechs 2021 12 |||

USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE

UTENTE MANUAL DEL USUARIO NOMAD High-Fide ... NTACT AND

TROUBLESHOOTING Please refer to page 7 for common issues and solutions when operating the KLIM Nomad. In case you require additional assistance or have any questions, please write us directl...

lang:en score:35 filesize: 12.05 M page_count: 34 document date: 2021-10-13



[pdf] User Manual Instructions Troubleshooting Guide Diagram

MAN Nomad manual 20220321 v2 WIP cdr Luis KLIM MULTI klimtechs 2022 03 |||

USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE

UTENTE MANUAL DEL USUARIO NOMAD High-Fide ... NTACT AND

TROUBLESHOOTING Please refer to page 7 for common issues and solutions when operating the KLIM Nomad. In case you require additional assistance or have any questions, please write us directl...

lang:en score:33 filesize: 12.11 M page_count: 34 document date: 2022-03-23



[pdf] User Manual Instructions Troubleshooting Guide Diagram

MAN Nomad manual 20220321 v2 WIP cdr Luis Manuale utente KLIM Lettore cd portatile Batteria a


Lunga Durata Include Auricolari Fusion Compatibile con CD R RW MP3 SD Radio FM Bluetooth Ideale per Auto Hi Fi Nuovo 2022 Amazon it Elettronica C1twup1z4zL m media amazon images I |||

USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE

UTENTE MANUAL DEL USUARIO NOMAD High-Fide ... NTACT AND

TROUBLESHOOTING Please refer to page 7 for common issues and solutions when operating the KLIM Nomad. In case you require additional assistance or have any questions, please write us directl...

lang:en score:29 filesize: 5.47 M page_count: 34 document date: 2022-03-24

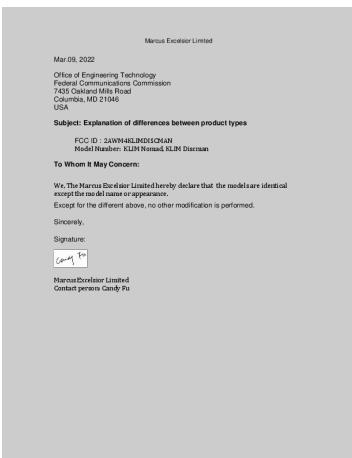

[pdf]

Date gretchen Difference Description Marcus Excelsior Limited KLIMDISCMAN KLIM CD Players

2AWM4KLIMDISCMAN klimdiscman

Marcus Excelsior Limited Mar.09, 2022 Office of Engineering Technology Federal

Communications Commission 7435 Oakland Mills Road Columbia, MD 21046 USA

Subject: Explanation of differences between product types FCC ID :

2AWM4KLIMDISCMAN Model Number: KLIM Nomad, KLIM Discman To Whom It May Concern: W...

lang:en score:24 filesize: 114.32 K page_count: 1 document date: 2022-03-09

Marcus Excelsior Limited

Agent Authorization

Company: Marcus Excelsior Limited
Address: 2512, Langham Place Office Tower, 8 Argyle Street, Mongkok, Kowloon, HONG KONG
Product Name: KLIM CD Players
Model Number(s): KLIM Nomad, KLIM Discman
Product Description: KLIM CD Players

We authorize MiCOM Labs Inc., 575 Boulder Court, Pleasanton, California 94566, USA, to act on our behalf on all matters concerning the certification of above named KLIM products.

We declare that MiCOM Labs Inc. is deemed to possess all information related to the approval and certification of equipment in the regulatory agencies, as required and to discuss any issues concerning the approval application. Any and all acts carried out by MiCOM Labs Inc. on our behalf shall have the same effect as acts of our own.

Signature:  Date: 2022-03-09
Name: Candy Yu
Company: Marcus Excelsior Limited

[\[pdf\]](#) Agent Authorization

PLEASE PRINT ON COMPANY LETTERHEAD MiCOM Labs Inc QMS Agent Authorization Rev 1 0

Marcus Excelsior Limited KLIMDISCMAN KLIM CD Players 2AWM4KLIMDISCMAN klimdismanc

Marcus Excelsior Limited Agent Authorization Company: Marcus Excelsior Limited

Address: 2512, Langham Place Office Tower, 8 Argyle Street, Mongkok, Kowloon,

HONG KONG Product Name: KLIM CD Players Model Number s : KLIM Nomad,

KLIM Discman Product Description: KLIM CD Players We authorize MiCOM Labs...

lang:en score:24 filesize: 109.83 K page_count: 1 document date: 2022-03-09



[\[pdf\]](#) User Manual Instructions Troubleshooting Guide Diagram

MAN Speaker 20220929 v18 cdr Luis KLIM Portable CD Player with Speakers New 2023 Walkman

Rechargeable Battery Headphones SD TF Card AUX Ideal Car User Manual B1P 2hM1TbL m media amazon images I |||

USER MANUAL MANUEL D UTILISATION BENUTZERHANDBUCH MANUALE

UTENTE MANUAL DEL USUARIO Speaker High-Fi ... euillez vous rfrer la page 13 pour les problmes courants pouvant survenir lorsque vous utilisez le KLIM Nomad et leurs solutions. Au cas o vous auriez la moindre question ou besoin d assistance suppl...

lang:en score:22 filesize: 3.31 M page_count: 34 document date: 2023-02-21