

[Manuals.plus](#) /

› [XVEFAT](#) /

› XVEFAT Remote Control User Manual for Element LCD TVs (Models ELST3216H, E4SFT551)

XVEFAT ELST3216H E4SFT551

XVEFAT Remote Control User Manual

For Element LCD TVs (Models ELST3216H, E4SFT551)

1. INTRODUCTION

This manual provides comprehensive instructions for the XVEFAT replacement remote control, designed for use with specific Element LCD TV models, including ELST3216H and E4SFT551. Please read this manual carefully to ensure proper setup and operation of your remote control.

2. PRODUCT OVERVIEW

The XVEFAT remote control offers a full range of functions for your Element LCD TV, including dedicated shortcut keys for popular streaming services. Its ergonomic design ensures comfortable handling.



Figure 1: Front view of the XVEFAT remote control, showing all buttons including dedicated shortcut keys for YouTube, VUDU, Netflix, and Pandora.

Key Features:

- Direct compatibility with Element LCD TV models ELST3216H and E4SFT551.
- Dedicated shortcut buttons for YouTube, VUDU, Netflix, and Pandora.

- Standard TV control functions including power, volume, channel, and menu navigation.
- Infrared (IR) connectivity for reliable operation.

3. SETUP

3.1. Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to remove it.
3. Insert two (2) 1.5V AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 2: Back view of the XVEFAT remote control, showing the open battery compartment for AAA batteries.

3.2. Compatibility

This remote control is compatible with the following Element LCD TV models:

- E4SFT551
- ELST3216H

No programming is required. The remote should function immediately after battery installation with compatible TV models.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control to effectively operate your Element TV.

4.1. Basic TV Functions

- **POWER:** Turns the TV on or off.
- **MUTE:** Mutes or unmutes the TV audio.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes the TV channel up or down.
- **Number Buttons (0-9):** Directly select TV channels.

4.2. Navigation and Menu Control

- **MENU:** Accesses the TV's main menu.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **Directional Pad (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms selections in menus.
- **RETURN:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.

4.3. Shortcut Keys

Dedicated buttons provide quick access to popular streaming applications:

- **YouTube:** Launches the YouTube application.
- **VUDU:** Launches the VUDU application.
- **Netflix:** Launches the Netflix application.
- **Pandora:** Launches the Pandora application.

4.4. Media Playback and Other Functions

- **USB:** Switches to USB input mode.
- **REPEAT:** Repeats current media playback.
- **Rewind, Play/Pause, Fast Forward:** Controls media playback.
- **Previous Track, Stop, Next Track:** Controls media track selection.
- **INFO:** Displays information about the current program or input.
- **FREEZE:** Freezes the current image on screen.
- **FAV:** Accesses favorite channels.
- **CH.LIST:** Displays the channel list.
- **P.MODE:** Cycles through picture modes.
- **S.MODE:** Cycles through sound modes.
- **V-CHIP:** Accesses V-Chip settings for parental controls.
- **GO:** Function varies by TV model, often used for quick access or confirmation.
- **MTS:** Selects Multi-channel Television Sound options.
- **ASPECT:** Changes the screen aspect ratio.
- **SLEEP:** Sets the sleep timer.
- **AUTO:** Automatic picture adjustment (for PC input).
- **HDMI:** Switches to HDMI input.
- **VGA:** Switches to VGA input.
- **TV:** Switches to TV tuner input.

5. MAINTENANCE

5.1. Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

5.2. Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries simultaneously with new 1.5V AAA alkaline batteries. Do not mix old and new batteries or different types of batteries.

5.3. Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the device.

6. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are correctly installed with proper polarity (+/-).
- Replace old batteries with new 1.5V AAA alkaline batteries.
- Check for any obstructions between the remote and the TV's IR sensor.
- Ensure you are within the effective operating range and pointing the remote directly at the TV.

- **Specific buttons not working:**

- Clean the remote control surface, especially around the non-responsive buttons, to remove any dirt or debris.
- If only certain shortcut buttons (e.g., Netflix) are not working, ensure your TV is connected to the internet and the respective application is installed and functional on your TV.

- **Intermittent operation:**

- This often indicates low battery power. Replace the batteries.
- Minimize strong light sources (like direct sunlight or bright fluorescent lights) that might interfere with the IR signal.

7. SPECIFICATIONS

Brand	XVEFAT
Compatible TV Models	Element E4SFT551, Element ELST3216H
Power Supply	2 x 1.5V AAA Alkaline Batteries
Connectivity Technology	Infrared (IR)
Special Feature	Ergonomic Design, Shortcut Keys (YouTube, VUDU, Netflix, Pandora)
Number of Buttons	Approximately 40-50 (including numeric and function keys)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the original purchase documentation or contact the manufacturer, XVEFAT, directly through their official support channels. Keep your purchase receipt as proof of purchase.