

Casio DW-5610SU-3

Casio G-Shock DW-5610SU-3 Digital Watch User Manual

Model: DW-5610SU-3

INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio G-Shock DW-5610SU-3 digital watch. Designed for durability and functionality, this watch features shock resistance, 200-meter water resistance, an electro-luminescent backlight, and various timekeeping functions.





Image: Front view of the Casio G-Shock DW-5610SU-3 digital watch, showcasing its square case and digital display.

BUTTON FUNCTIONS

Your G-Shock watch has four buttons, typically labeled as follows:

- **ADJUST (Top Left):** Used to enter and exit setting modes, and to confirm settings.
- **MODE (Bottom Left):** Used to cycle through the watch's various modes (Timekeeping, Stopwatch, Countdown Timer, Alarm).
- **LIGHT (Top Right):** Activates the electro-luminescent backlight.
- **START/STOP (Bottom Right):** Used to start/stop stopwatch operations, change selections in setting modes, and activate the flash alert.



Image: Side view of the watch, highlighting the top left (ADJUST) and bottom left (MODE) buttons.



Image: Opposite side view of the watch, showing the top right (LIGHT) and bottom right (START/STOP) buttons.

SETUP: SETTING TIME AND DATE

1. In Timekeeping Mode, press and hold the **ADJUST** button until the city code starts to flash, indicating the setting screen.
2. Use the **START/STOP** button to cycle through the settings (City Code, DST, 12/24-hour format, Seconds, Hour, Minute, Year, Month, Day).
3. Use the **LIGHT** button to increase a value or the **START/STOP** button to decrease a value (for time/date settings).
4. Once all settings are configured, press the **ADJUST** button to exit the setting mode.

OPERATING INSTRUCTIONS

Navigating Modes

Press the **MODE** button to cycle through the following modes:

- Timekeeping Mode (current time, date, day)
- Stopwatch Mode
- Countdown Timer Mode
- Alarm Mode
- Hourly Time Signal Mode

Using the Stopwatch

1. Enter Stopwatch Mode by pressing the **MODE** button.
2. Press the **START/STOP** button to start the stopwatch.
3. Press the **START/STOP** button again to stop it.
4. Press the **ADJUST** button to reset the stopwatch to zero.
5. The stopwatch measures up to 23 hours, 59 minutes, 59.99 seconds.

Using the Countdown Timer

1. Enter Countdown Timer Mode by pressing the **MODE** button.
2. Press and hold the **ADJUST** button until the hour setting flashes.
3. Use the **LIGHT** and **START/STOP** buttons to set the desired countdown time (up to 24 hours).
4. Press **ADJUST** to confirm and exit the setting mode.
5. Press **START/STOP** to start the countdown.
6. Press **START/STOP** again to pause/resume.
7. When the countdown reaches zero, an alarm will sound. Press any button to stop the alarm.

Setting Alarms

1. Enter Alarm Mode by pressing the **MODE** button.
2. Press and hold the **ADJUST** button until the hour setting flashes.
3. Use the **LIGHT** and **START/STOP** buttons to set the alarm hour and minute.
4. Press **ADJUST** to confirm and exit the setting mode.
5. Press the **START/STOP** button to toggle the alarm ON/OFF. An indicator will show when the alarm is active.

Electro-luminescent Backlight

Press the **LIGHT** button to illuminate the display for easy viewing in low-light conditions. The backlight duration is typically a few seconds.



Image: Close-up of the watch display showing the electro-luminescent backlight active, illuminating the time and date.

MAINTENANCE

Cleaning

Wipe the watch with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid using volatile agents like thinner or benzine.

Water Resistance

This watch is water resistant to 200 meters. It is suitable for showering, swimming, and shallow diving. Do not operate buttons while the watch is wet or submerged to prevent water ingress.



Image: The Casio G-Shock DW-5610SU-3 watch partially submerged in water, illustrating its 200-meter water resistance.

Battery Replacement

The watch uses one CR2016 battery with an approximate life of 2 years. When the display becomes dim or functions malfunction, it may be time for a battery replacement. It is recommended to have the battery replaced by an authorized service center to ensure water resistance is maintained.

TROUBLESHOOTING

- Display is blank or dim:** The battery may be low. Replace the battery.
- Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, though this model typically doesn't have a lock). If issues persist, a full reset might be needed (consult service center).
- Time is inaccurate:** Re-set the time and date as per the "Setting Time and Date" section. If inaccuracy continues, the watch may require servicing.
- Water inside the watch:** Immediately take the watch to an authorized service center. Do not attempt to open it yourself.

SPECIFICATIONS

Feature	Specification
Model Number	DW-5610SU-3
Case/Bezel Material	Resin
Band Material	Resin
Glass Type	Mineral Glass
Water Resistance	200 meters (20 BAR)
Shock Resistance	Yes
Backlight	Electro-luminescent backlight with Afterglow
Stopwatch	1/100-second, measuring capacity 23:59'59.99"
Countdown Timer	Measuring unit 1 second, range 24 hours, auto-repeat

Feature	Specification
Alarm	Multi-function alarm, Hourly time signal
Calendar	Full auto-calendar (to year 2099)
Time Format	12/24-hour format
Accuracy	±15 seconds per month
Battery Type	CR2016
Approx. Battery Life	2 years
Case Dimensions (H×W×D)	48.9 × 43.8 × 13.5 mm
Total Weight	52 g



Image: Diagram showing the dimensions of the Casio G-Shock DW-5610SU-3 watch, with a credit card for scale, indicating a case height

of 48.9 mm and width of 43.8 mm.

WARRANTY AND SUPPORT

Your Casio G-Shock DW-5610SU-3 watch comes with a Limited Warranty. For warranty claims, service, or technical support, please contact Casio India Co Pvt Ltd.

Manufacturer/Importer Contact:

Casio India Co Pvt Ltd

A-41, 1st Floor, MCIE, Mathura Road,

New Delhi-110044, India

For additional information and support, please visit the official Casio website or an authorized service center.

© 2024 Casio. All rights reserved. This manual is for informational purposes only.