

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Hisense](#) /

› [Hisense 7 Kg 1200 RPM Front Load Washing Machine, Silver - WFKV7012T User Manual](#)

## Hisense WFKV7012T

# Hisense 7 Kg 1200 RPM Front Load Washing Machine

Model: WFKV7012T

## INTRODUCTION

---

This instruction manual provides essential information for the safe and efficient operation of your new Hisense Front Load Washing Machine. Please read this manual thoroughly before using the appliance and keep it for future reference.



Front view of the Hisense 7 Kg 1200 RPM Front Load Washing Machine, showcasing its silver finish and control panel.

## SAFETY INFORMATION

---

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- Ensure the appliance is properly grounded.
- Do not allow children to play on or in the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not wash items that have been pre-treated with flammable liquids.
- Keep the area around the washing machine clear of obstructions.

## **SETUP AND INSTALLATION**

---

### **Unpacking and Placement**

Carefully remove all packaging materials. Place the washing machine on a firm, level surface. Ensure there is adequate space around the appliance for ventilation and access.



The washing machine with its dimensions: 850mm height, 595mm width, and 460mm depth, indicating space requirements for installation.

### Removing Transit Screws

Before first use, it is crucial to remove the four transit screws located at the back of the machine. These screws secure the drum during transport and must be removed to prevent excessive vibration and noise during operation. After removal, insert the plastic caps provided into the holes.

### Leveling the Appliance

Adjust the four screw-legs at the bottom of the machine to ensure it is perfectly level and stable on the floor. This will prevent wobbling and reduce noise during spin cycles.

### Water and Power Connections

Connect the water inlet hose to a cold water tap and the washing machine. Ensure all connections are tight to prevent

leaks. Plug the power cord into a grounded electrical outlet. The appliance operates on 240 Volts.

## OPERATING INSTRUCTIONS

---

### Control Panel Overview

The washing machine features a wide-control touch panel for easy visibility and convenient use. The central dial allows for program selection, while the digital display shows cycle information and time remaining.

# Enjoy Easier Laundry



A detailed view of the control panel, showing the program selection dial, digital display, and touch buttons for various options.

### Program Selection

Your Hisense washing machine offers 16 automatic programs to optimize washing for each fabric type. Turn the program selection dial to choose the desired cycle.

# 16 automatic programs



A hand turning the program selection dial, highlighting the 16 automatic programs available for different fabric types.

Available programs include:

- Cotton
- Cotton Eco
- Synthetics
- Wool
- Quick 15'
- Mix
- Rinse+Spin
- Spin
- Skin Care
- Baby Care
- Shirts
- Dark Wash

- Sportswear
- Duvet
- Silk/Delicates
- Drum Clean

## Loading Laundry

Open the front load door and place your laundry inside the drum. Do not overload the machine to ensure optimal washing performance and prevent damage.



The Hisense washing machine with its front door open, revealing the spacious drum for loading laundry.

## Detergent Dispensing

Add the appropriate amount of detergent and fabric softener to their respective compartments in the dispenser drawer. Refer to your detergent's instructions for dosage.

## Special Features

- **6-Motion DD Technology:** This feature optimizes the washing program for each fabric type, providing a thorough

and gentle clean.

- **Turbo Wash 3D:** Enhances speed and efficiency of the wash cycle.
- **Smart Diagnosis:** Troubleshoots and resolves issues with ease, saving the need for expert supervision for basic diagnostics.
- **Child Lock Function:** Prevents accidental changes to settings during operation, ensuring safety around children.


## Child Lock function



The Hisense washing machine with a visual representation of the child lock function, showing a padlock icon on the drum.

- **High Temperature Washing:** Offers wash cycles at temperatures between 60-95°C for enhanced hygiene and removal of tough stains.

# High Temperature Washing

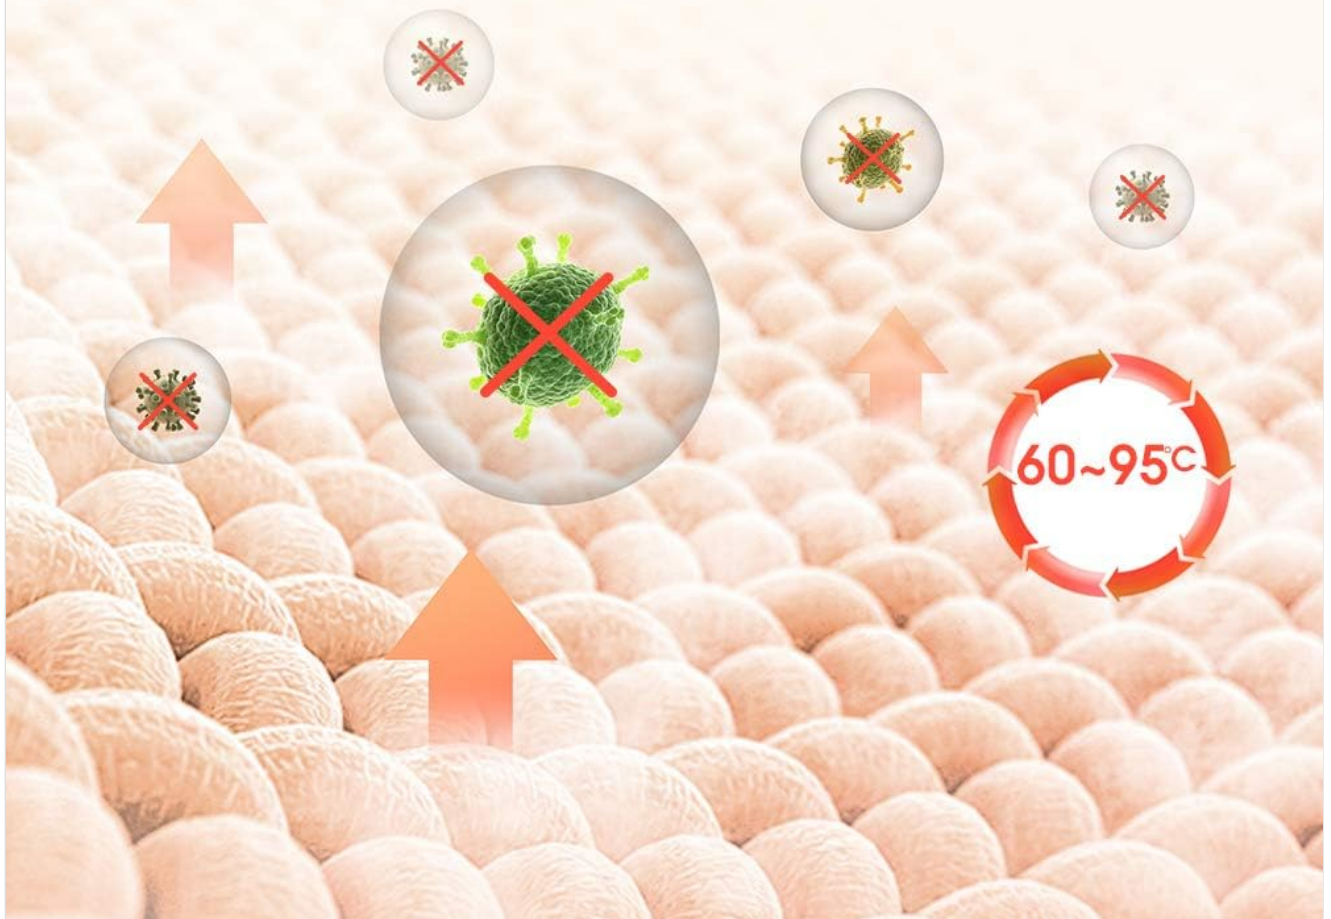

An illustration depicting the high temperature washing feature, showing heat waves and symbols of germs being eliminated at 60-95°C.

- **24 Hour Delay Wash:** Allows you to set the washing machine to start at a later time, up to 24 hours in advance, for convenience.

# 24 Hour Delay Wash



An illustration demonstrating the 24 Hour Delay Wash feature, showing a clock icon and a person sleeping, indicating the ability to schedule wash cycles.

## Starting a Wash Cycle

After selecting the program and adding detergent, press the Start/Pause button to begin the wash cycle.

## MAINTENANCE

---

### Drum Clean Program

Regularly use the 'Drum Clean' program to maintain the hygiene of the washing machine drum and prevent odors. This program runs a high-temperature cycle to clean the interior.

### General Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Clean the detergent dispenser drawer regularly to prevent residue buildup. Do not use abrasive cleaners or solvents.

### Filter Cleaning

Periodically check and clean the drain pump filter, usually located at the bottom front of the machine. This helps prevent blockages and ensures efficient drainage.

## TROUBLESHOOTING

---

If you encounter any issues with your washing machine, refer to the following common problems and solutions. For more complex issues, utilize the Smart Diagnosis feature or contact customer support.

- **Excessive Vibration/Noise:** Ensure the transit screws have been removed and the machine is properly leveled.
- **Error Code F-01:** This indicates an issue with the water inlet. Check the water supply and hose connections. If the problem persists, it may indicate a hardware issue.
- **Machine Not Starting:** Check if the power cord is securely plugged in and the door is fully closed.
- **Poor Washing Results:** Ensure you are using the correct program for the fabric type and not overloading the machine. Check detergent dosage.

## SPECIFICATIONS

---

Feature	Specification
Brand Name	Hisense
Model Info	WFKV7012T
Product Dimensions (L x W x H)	60 x 60 x 85 cm
Item Weight	55 kg
Capacity	7 Kilograms
Max Spin Speed	1200 RPM
Installation Type	Freestanding
Color	Silver
Control Console	Touch
Access Location	Front Load
Voltage	240 Volts
Material Type	ABS
Special Features	7kg capacity, 1200 RPM

## WARRANTY AND SUPPORT

---

Your Hisense 7 Kg 1200 RPM Front Load Washing Machine (Model WFKV7012T) comes with a **One Year Full Warranty** from the manufacturer. For warranty claims, technical support, or service inquiries, please refer to the contact information provided in your Guideline Books included with the product. Installation is the customer's responsibility.

