

[Manuals.plus](#) /

> [SHARDOR](#) /

> SHARDOR Conical Burr Coffee Grinder User Manual

## SHARDOR CG845B

# SHARDOR Conical Burr Coffee Grinder User Manual

Model: CG845B

## 1. INTRODUCTION

Thank you for choosing the SHARDOR Conical Burr Coffee Grinder. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee grinder. Please read it thoroughly before first use and retain it for future reference.

### Important Safety Instructions

- Read all instructions before using the appliance.
- Do not immerse the motor base in water or other liquids.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contact with moving parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock, or injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Ensure bean hopper and grind container are securely in place before operating.
- Do not remove the bean hopper or grind container until the burr has completely stopped.

## 2. PRODUCT COMPONENTS

Familiarize yourself with the parts of your SHARDOR Conical Burr Coffee Grinder:





**Figure 2.1:** Overview of the SHARDOR Conical Burr Coffee Grinder. This image displays the main unit, including the bean hopper, grind container, and control panel.

1. Bean Hopper Lid
2. Bean Hopper (with grind setting markings)
3. Upper Burr Mill (removable for cleaning)
4. Lower Burr Mill (fixed)
5. Grind Selection Dial
6. Power Button / Start-Stop Button
7. Cup Selection Dial (2-12 cups)
8. Motor Base
9. Grind Container Lid
10. Grind Container
11. Cleaning Brush

# ADVANCED CONICAL BURR

Uniform grinding for full coffee flavor



**Figure 2.2:** Detailed view of the advanced conical burr mechanism, designed for uniform grinding to enhance coffee flavor.

## 3. SETUP

Before first use, follow these steps to set up your coffee grinder:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash the bean hopper lid, bean hopper, grind container lid, and grind container in warm, soapy water. Rinse

thoroughly and dry completely. The motor base should be wiped with a damp cloth. Do not immerse the motor base in water.

### 3. **Assemble:**

- Place the grind container with its lid onto the motor base, ensuring it is securely seated.
- Align the bean hopper with the motor base and twist it clockwise until it locks into place. Ensure the arrows align for proper seating. If not correctly seated, the grinder will not operate.
- Place the bean hopper lid on top of the bean hopper.

4. **Position:** Place the assembled grinder on a stable, flat, and dry surface.

5. **Connect:** Plug the power cord into a standard electrical outlet.

## 4. **OPERATING INSTRUCTIONS**

---

Follow these steps to grind your coffee beans:

1. **Add Coffee Beans:** Open the bean hopper lid and pour whole roasted coffee beans into the bean hopper. Do not fill past the MAX line.
2. **Select Grind Setting:** Rotate the grind selection dial to choose your desired grind fineness. Refer to Section 5 for guidance on grind settings.
3. **Select Cup Quantity:** Rotate the cup selection dial to choose the number of cups you wish to grind (from 2 to 12 cups).
4. **Start Grinding:** Press the Power Button / Start-Stop Button to begin grinding. The grinder will automatically stop once the selected quantity has been ground.
5. **Collect Ground Coffee:** Once grinding is complete, carefully remove the grind container from the base. Remove the lid and pour the ground coffee into your brewing device.



**2-12 CUPS OPTIONAL**  
Large capacity meets all your needs

**Figure 4.1:** The cup selection dial allows you to choose the desired quantity of ground coffee, from 2 to 12 cups, located on the front panel of the grinder.

## 5. GRIND SETTINGS GUIDE

The SHARDOR Conical Burr Coffee Grinder offers 14 precise grind settings, allowing you to achieve the optimal grind for various brewing methods. The settings range from "Coarser" (14) to "Finer" (1).

Recommended Grind Settings

| Brewing Method | Grind Setting Range  | Description                                                                          |
|----------------|----------------------|--------------------------------------------------------------------------------------|
| French Press   | 12-14 (Coarse)       | Large, distinct particles, similar to sea salt. Prevents over-extraction and sludge. |
| Pour Over      | 8-11 (Medium-Coarse) | Resembles rough sand. Allows for proper water flow and extraction time.              |
| Drip Coffee    | 5-7 (Medium)         | Similar to regular sand. Ideal for automatic drip coffee makers.                     |
| Espresso       | 1-4 (Fine)           | Very fine, like powdered sugar or flour. Essential for proper espresso extraction.   |

**Note:** These are general recommendations. Adjust the grind setting based on your personal preference, coffee bean type, and specific brewing equipment to achieve your desired taste.

# 14 GRIND SETTINGS

For different brewing methods



French Press



Pour Over



Drip Coffe



Espresso



**Figure 5.1:** Visual representation of the 14 grind settings and their suitability for various brewing methods, including French Press, Pour Over, Drip Coffee, and Espresso, indicated on the bean hopper.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your grinder. Always unplug the grinder before cleaning.

## Cleaning the Burr Mill

1. **Unplug:** Ensure the grinder is unplugged from the power outlet.
2. **Remove Bean Hopper:** Twist the bean hopper counter-clockwise to unlock and lift it off the motor base. Empty any remaining coffee beans.
3. **Remove Upper Burr:** Grasp the metal handle of the upper burr mill and twist it counter-clockwise to unlock. Lift the upper burr out of the grinder.
4. **Clean Burrs:** Use the provided cleaning brush to remove any ground coffee particles from both the upper and lower burr mills. You can also use a soft, dry cloth. Do not wash the burr mills with water.
5. **Clean Grind Chute:** Use the brush to clean the grind chute where the ground coffee exits the burr chamber.
6. **Reassemble:** Place the upper burr back into position, aligning the tabs, and twist clockwise to lock it. Reattach the bean hopper by aligning the arrows and twisting clockwise until it locks.

## Cleaning Other Parts

- **Bean Hopper & Grind Container:** These can be washed in warm, soapy water. Rinse thoroughly and dry completely before reassembling.
- **Motor Base:** Wipe the exterior of the motor base with a soft, damp cloth. Do not immerse the motor base in water.

# EASY TO CLEAN

Removable upper burr mill



**Figure 6.1:** The removable upper burr mill and included cleaning brush facilitate easy and thorough cleaning of the grinding mechanism, as demonstrated by a hand removing the burr.

## 7. TROUBLESHOOTING

If you encounter issues with your SHARDOR coffee grinder, refer to the following table for common problems and solutions:

## Troubleshooting Guide

| Problem                                        | Possible Cause                                                     | Solution                                                                                                         |
|------------------------------------------------|--------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------|
| Grinder does not start / Power button flashes. | Bean hopper or grind container not properly seated.                | Ensure both the bean hopper and grind container are securely locked into place. Align arrows on the bean hopper. |
| Grinder stops unexpectedly during operation.   | Overheating due to continuous use or motor overload.               | Unplug the grinder and let it cool down for at least 30 minutes before attempting to use it again.               |
| Inconsistent grind or no grinding.             | Burr mills are clogged with coffee residue or foreign objects.     | Unplug the grinder and clean the burr mills thoroughly as described in Section 6. Check for any obstructions.    |
| Excessive static cling of ground coffee.       | Environmental factors (low humidity) or certain coffee bean types. | Lightly dampen the inside of the grind container lid before grinding. Some static is normal.                     |
| Grinder is unusually loud.                     | Foreign object in the burr mill or improper assembly.              | Unplug and inspect the burr mills for foreign objects. Ensure all parts are correctly assembled.                 |

If the problem persists after attempting these solutions, please contact SHARDOR customer support.

## 8. SPECIFICATIONS

### Product Specifications

| Feature            | Detail                               |
|--------------------|--------------------------------------|
| Model Number       | CG845B                               |
| Brand              | SHARDOR                              |
| Type               | Conical Burr Coffee Grinder          |
| Grind Settings     | 14 Precise Settings (Coarse to Fine) |
| Cup Capacity       | 2-12 Cups                            |
| Color              | Black                                |
| Product Dimensions | 8.98 x 6.46 x 12.48 inches           |
| Item Weight        | 3.7 pounds                           |
| Voltage            | 220 Volts                            |
| UPC                | 782905380936                         |

## 9. WARRANTY AND SUPPORT

SHARDOR provides a warranty for this product. Please refer to the warranty card included in your product packaging for specific terms and conditions. For any questions, technical support, or warranty claims, please contact SHARDOR customer service.

**Customer Support:**

- Refer to the contact information provided in your product's manual booklet or on the official SHARDOR website.
- If you have any questions about our products, we will reply within 24 hours.

For more information, visit the official [SHARDOR Store](#).

© 2024 SHARDOR. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B088FKT586>

More documents and user manuals: <https://manuals.plus/>