

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Foloda](#) /
- › [Foloda Bluetooth Number Pad User Manual](#)

Foloda BT-Numeric-Keypad-Foloda

Foloda Bluetooth Number Pad User Manual

Model: BT-Numeric-Keypad-Foloda

1. INTRODUCTION

Thank you for choosing the Foloda Bluetooth Number Pad. This wireless numeric keypad is designed to enhance your productivity, offering a comfortable and precise input experience for laptops and desktop computers. Its compact design and Bluetooth connectivity provide a cable-free and clutter-free workspace. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance of your device.



Image 1.1: The Foloda Bluetooth Number Pad, a compact and wireless numeric keypad.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Bluetooth Wireless Numeric Keypad
- User Manual (this document)

3. SPECIFICATIONS

Refer to the following specifications for your Foloda Bluetooth Number Pad:

Feature	Description
Model Number	BT-Numeric-Keypad-Foloda

Feature	Description
Brand	Foloda
Product Dimensions	4.92"L x 3.74"W x 0.98"H (12.5 cm x 9.5 cm x 2.5 cm)
Item Weight	4 ounces (113 grams)
Connectivity Technology	Bluetooth 3.0
Compatible Devices	PC, Laptop, Desktop computers with Windows 2000 / XP / Vista / 7 / 8 / 10 systems
Power Supply	2 x AAA Batteries (not included)
Special Features	Wireless, Bluetooth, Auto Sleep Function
Color	Black
Style	Modern

PRODUCT SIZE



Image 3.1: Diagram illustrating the dimensions of the Foloda Bluetooth Number Pad.

4. SETUP

4.1. Battery Installation

1. Locate the battery compartment cover on the back of the number pad.
2. Gently slide or lift the cover to open the compartment.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring correct polarity (+/-).
4. Replace the battery compartment cover securely.

The light is controlled by Num Lock.
ON: Working mode,
you can input numbers



OFF: Sleep mode (without
operation for 10 minutes)
press any keys
(except num lock)
to wake up.

If you press the num lock to
wake up, number keys will
switch to arrow keys. You
need press it once more to
switch.

Image 4.1: View of the battery compartment, showing where to insert two AAA batteries.

4.2. Bluetooth Pairing

Follow these steps to connect your number pad via Bluetooth:

1. Ensure the number pad is powered on. There is typically an ON/OFF switch near the battery compartment.
2. On your computer or laptop, navigate to the Bluetooth settings.
3. Enable Bluetooth and search for new devices.
4. The Foloda Number Pad should appear in the list of available devices (it might be named something like "Bluetooth Number Pad" or similar).
5. Select the number pad to initiate the pairing process. Your computer may prompt you to enter a code on the number pad, or it may connect automatically.
6. Once successfully paired, the number pad is ready for use.

Reliable Bluetooth Connection



Eliminate Cable Clutter Signal Reaches Up to 30 FT Pass-Free Code Connection. Stable, Reliable and Portable

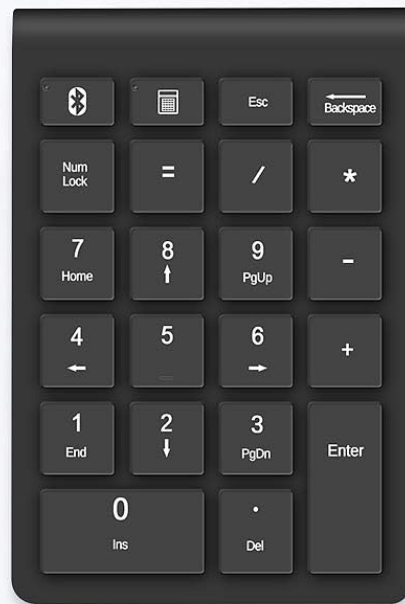


Image 4.2: The number pad connected wirelessly to a laptop via Bluetooth, illustrating a reliable connection.

5. OPERATING INSTRUCTIONS

5.1. Basic Keypad Functions

The Foloda Bluetooth Number Pad functions as a standard 10-key numeric keypad, providing numerical input and basic arithmetic operations. Keys include 0-9, decimal point, Enter, +, -, *, /, Num Lock, Esc, and Backspace.

5.2. Sleep Mode and Wake-up

To conserve battery life, the number pad is equipped with an automatic sleep function. After approximately 10 minutes of inactivity, the keypad will enter sleep mode, indicated by the lights turning off.

- **To wake up the keypad:** Press any key *except* the NUM LOCK key. The keypad will reactivate and be ready for use.
- **Important Note on NUM LOCK:** If you press the NUM LOCK key to wake the device, the number keys will temporarily function as arrow keys (Home, End, PgUp, PgDn, arrows). To restore normal numeric input, press the NUM LOCK key again.

KEY FEATURES: QUIET, COMFORTABLE, DURABLE



Image 5.1: Illustration of the Num Lock indicator light and explanation of sleep mode and wake-up behavior.

5.3. Key Features

The keypad features an X-type scissors foot structure for quiet, comfortable, and durable key presses, ensuring a responsive typing experience.



Image 5.2: Detailed view of the key mechanism, highlighting the X-type scissors foot structure for quiet and comfortable operation.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Foloda Bluetooth Number Pad, please follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the number pad. For stubborn dirt, a slightly damp cloth with mild soap can be used, followed by immediate drying. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture.
- **Storage:** When not in use for extended periods, store the number pad in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** Replace batteries promptly when performance degrades or the device stops responding to prevent potential battery leakage.
- **Avoid Drops:** Protect the device from drops and impacts, which can damage internal components.

7. TROUBLESHOOTING

If you encounter issues with your Foloda Bluetooth Number Pad, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Number pad does not turn on.	Batteries are dead or incorrectly inserted.	Check battery polarity. Replace with fresh AAA batteries. Ensure the ON/OFF switch is in the 'ON' position.
Cannot pair the number pad via Bluetooth.	Bluetooth on computer is off; number pad is not in pairing mode; interference; previously paired device conflict.	Ensure Bluetooth is enabled on your computer. Turn the number pad off and on again. Remove any previous pairings of the number pad from your computer's Bluetooth settings and try pairing again. Move closer to the computer.
Number pad frequently disconnects or stops responding.	Low battery; out of range; interference; sleep mode.	Replace batteries. Ensure the number pad is within 30 feet (9 meters) of your computer. Minimize interference from other wireless devices. If in sleep mode, press any key (except Num Lock) to wake it. If issues persist, try re-pairing.
Number keys input symbols or move cursor instead of numbers.	NUM LOCK is off.	Press the NUM LOCK key once to activate numeric input. The Num Lock indicator light should be on.
Keys are unresponsive or sticky.	Dirt or debris under keys; physical damage.	Clean the keypad surface. Avoid spilling liquids. If physical damage is suspected, contact customer support.

8. WARRANTY AND SUPPORT

Foloda is committed to providing quality products and excellent customer service. While specific warranty details are not provided in this manual, we encourage you to contact us if you have any questions or experience issues with your product.

For support, please refer to the contact information provided with your purchase or visit the official Foloda website.