

Vivitar PG-6000-ORG

Vivitar Hair & Beard Clipping Kit

MODEL: PG-6000-ORG INSTRUCTION MANUAL

1. IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Read all instructions before using this appliance.
- **DANGER:** To reduce the risk of electric shock: Do not reach for an appliance that has fallen into water. Unplug immediately. Do not use while bathing or in a shower. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- **WARNING:** To reduce the risk of burns, electric shock, fire, or injury to persons: Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Contact customer service for examination and repair.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
- Do not place the appliance on any surface while it is operating.
- Do not use this appliance with a damaged or broken comb or blade, as injury may occur.
- Always store this appliance and cord in a moisture-free area.

2. PACKAGE CONTENTS

Verify that all items are present in your Vivitar Hair & Beard Clipping Kit package:

- Clipper Unit

- Four Guide Attachments (various lengths)
- Scissors
- Comb
- Lubrication Oil
- Protective Cap
- Cleaning Brush
- User Manual (this document)
- 1 Year Warranty Card

3. PRODUCT OVERVIEW

The Vivitar Hair & Beard Clipping Kit features precision blades for irritation-free trimming, cutting, and grooming. Its ergonomic grip ensures comfortable handling during use.



Image 1: Vivitar Hair & Beard Clipping Kit showing the clipper, guide combs, scissors, and comb.

4. SETUP

4.1 Initial Charging

Before first use, ensure the clipper is fully charged. Connect the charging cable to the clipper and a suitable power outlet. The charging indicator (if present) will show the charging status. A full charge typically takes several hours.

4.2 Attaching Guide Combs

Select the desired guide attachment for your preferred hair or beard length. Align the guide comb with the clipper blade and press firmly until it clicks into place. To remove, gently pull the comb away from the blade.

4.3 Initial Lubrication

Before the first use, apply a few drops of the provided lubricating oil to the blades. Turn the clipper on for a few seconds to

distribute the oil evenly. This ensures smooth operation and prolongs blade life.

5. OPERATING INSTRUCTIONS

5.1 Turning On/Off

Locate the power switch on the clipper. Slide it to the 'ON' position to start the clipper and to the 'OFF' position to turn it off.

5.2 Hair Clipping

For hair clipping, ensure hair is clean and dry. Start with a longer guide comb and gradually switch to shorter ones if a closer cut is desired. Hold the clipper flat against the head and move it slowly against the direction of hair growth. Use the comb and scissors for detailing and blending.

5.3 Beard Trimming

For beard trimming, ensure the beard is clean and dry. Use the appropriate guide comb for your desired beard length. Trim in the direction of hair growth for a smoother finish. Use the clipper without a guide comb for precise edging around the neckline and cheekbones.

6. MAINTENANCE

6.1 Cleaning the Blades

After each use, turn off and unplug the clipper. Use the provided cleaning brush to remove any loose hairs from the blades. For a more thorough cleaning, the blades can often be detached (refer to specific instructions if provided on the clipper itself) and rinsed under running water, ensuring they are completely dry before reattaching.

6.2 Lubricating the Blades

Regular lubrication is crucial for optimal performance and blade longevity. After cleaning, apply 1-2 drops of the lubricating oil to the blades. Turn the clipper on for a few seconds to allow the oil to spread. This should be done after every few uses or when the clipper feels less smooth.

6.3 Storage

Store the clipper and all accessories in a dry, safe place, away from children. Always place the protective cap over the blades when not in use to prevent damage and ensure safety.

7. TROUBLESHOOTING

- **Clipper does not turn on:** Ensure the clipper is fully charged. Check if the power switch is in the 'ON' position.
- **Poor cutting performance:** Clean the blades thoroughly to remove any hair buildup. Apply lubricating oil to the blades. Ensure the guide comb is correctly attached.
- **Excessive noise or vibration:** Clean and lubricate the blades. If the issue persists, contact customer support.

8. SPECIFICATIONS

Model Number	PG-6000-ORG
Blade Material	Stainless Steel

Power Source	1 Lithium Ion battery (rechargeable)
Package Dimensions	11.81 x 5.83 x 2.32 inches
Weight	1.2 Pounds
Included Components	Clipper, 4 Guide Attachments, Scissors, Comb, Lubrication Oil, Protective Cap, Cleaning Brush

9. WARRANTY AND SUPPORT

This product comes with a 1-year warranty. Please refer to the included Warranty Card for detailed terms and conditions. For technical support, troubleshooting assistance, or warranty claims, please contact Vivitar customer service. Keep your proof of purchase for warranty validation.

© 2023 Vivitar. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question