



[Manuals.plus](#) /

› [UpStart Components](#) /

› UpStart Components 240363701 Refrigerator Door Shelf Bin Instruction Manual

UpStart Components AP-240363701-2PK-DL419

UpStart Components 240363701 Refrigerator Door Shelf Bin Instruction Manual

[Contents](#) [Compatibility](#) [Installation](#) [Usage](#) [Introduction](#) [Safety Information](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty](#) [Package](#) [& Support](#)

1. INTRODUCTION

This instruction manual provides important information regarding the installation, proper usage, and maintenance of your new UpStart Components 240363701 Refrigerator Door Shelf Bin. Please read this manual thoroughly before installation and retain it for future reference.



Image 1.1: Front view of the UpStart Components 240363701 Refrigerator Door Shelf Bin. This image shows the overall shape and design of the replacement bin.

2. SAFETY INFORMATION

Always prioritize safety when handling and installing appliance parts. Follow these general safety guidelines:

- Ensure the refrigerator is unplugged from the power outlet before attempting any installation or removal of parts.
- Wear appropriate personal protective equipment, such as gloves, if necessary.
- Handle the shelf bin carefully to avoid dropping it or causing damage to the refrigerator door.
- Keep small parts away from children.

3. PACKAGE CONTENTS

Your package should contain the following items:

- **2x** UpStart Components 240363701 Refrigerator Door Shelf Bins



Image 3.1: An example of the two refrigerator door shelf bins included in the package.

4. COMPATIBILITY

This UpStart Components 240363701 Refrigerator Door Shelf Bin is designed as a replacement part for various refrigerator models. It is compatible with:

- Frigidaire FFHS2313LS3 Refrigerator
- Original Part Number: 240363701
- Compatible with AP2116105 Door Shelf
- Also replaces part numbers: 240363707, 891286, PS430206

Before installation, please verify that your original part number matches one of the compatible numbers listed above to ensure proper fitment.

5. INSTALLATION INSTRUCTIONS

The installation of the refrigerator door shelf bin is designed to be straightforward. Follow these steps:

1. **Prepare the Refrigerator:** Unplug the refrigerator from the electrical outlet to prevent accidental power surges or injury.
2. **Remove Old Shelf (if applicable):** If replacing an existing shelf, carefully lift the old shelf bin upwards and then pull it out from the door liner. Note how it was seated.
3. **Clean the Area:** Wipe down the area where the new shelf will be installed to ensure it is clean and free of debris.
4. **Install New Shelf:** Align the new UpStart Components shelf bin with the designated slots or supports on the refrigerator door liner. Gently push the shelf downwards until it clicks securely into place. Ensure both sides are evenly seated.
5. **Test Fit:** Lightly tug on the installed shelf to confirm it is firmly in position and does not wobble.
6. **Restore Power:** Once the shelf is securely installed, plug the refrigerator back into the electrical outlet.

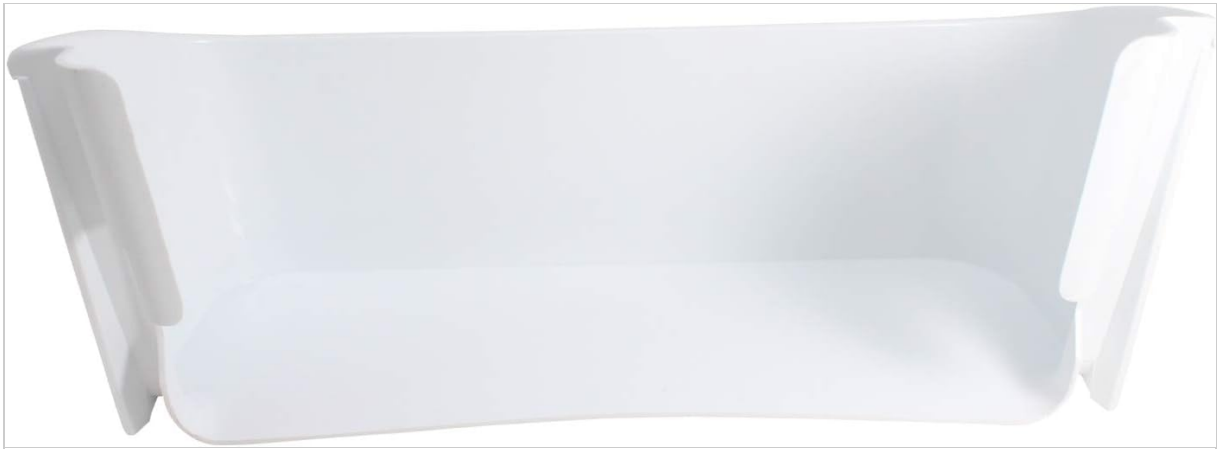


Image 5.1: Side view of the shelf bin, highlighting the mounting tabs that slide into the refrigerator door liner.

6. USAGE

The door shelf bin is designed to hold various food and beverage items within your refrigerator door. To ensure longevity and proper function:

- Distribute weight evenly within the bin to prevent stress on the mounting points.
- Avoid overloading the shelf with excessively heavy items.
- Do not use the shelf as a step or apply excessive force to it.



Image 6.1: Top-down view of the shelf bin, illustrating its capacity for storing items.

7. MAINTENANCE AND CLEANING

Regular cleaning will help maintain the appearance and hygiene of your refrigerator door shelf bin.

- **Cleaning:** Remove the shelf bin from the refrigerator door. Wash it with warm, soapy water using a soft cloth or sponge.
- **Rinsing:** Rinse thoroughly with clean water to remove all soap residue.
- **Drying:** Allow the shelf bin to air dry completely or wipe it dry with a clean, soft cloth before reinstalling it.
- **Avoid:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can scratch or damage the plastic surface.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Shelf does not fit or is loose.	Incorrect part number or improper installation.	Verify the part number against your original shelf and the compatibility list in Section 4. Ensure the shelf is properly aligned with the door slots and pushed down firmly until it locks into place.
Shelf cracks or breaks prematurely.	Overloading or impact damage.	Avoid placing excessively heavy items in the shelf bin. Handle the shelf with care to prevent impacts.

9. SPECIFICATIONS

Feature	Detail
Product Name	Refrigerator Door Shelf Bin
Brand	UpStart Components
Model Number	AP-240363701-2PK-DL419
Compatible Part Numbers	240363701, AP2116105, 240363707, 891286, PS430206
Quantity	2-Pack
Material	Durable Plastic
Date First Available	May 11, 2020

10. WARRANTY AND SUPPORT

This product is a replacement part manufactured by UpStart Components. It is not an OEM (Original Equipment Manufacturer) product and is not covered under any warranties offered by the original appliance manufacturers.

Any warranties for this product are offered solely by UpStart Components. For specific warranty details or support inquiries, please contact UpStart Components directly through their official channels. Please refer to your purchase documentation for contact information.

For customer support, please visit the UpStart Components website or contact their customer service department.