

Qlima FSM 40 E

Qlima FSM 40 Mist Fan User Manual

Model: FSM 40 E

PRODUCT OVERVIEW

The Qlima FSM 40 Touch Mist Fan is an innovative appliance that combines the functionality of a fan with a humidifier. It is designed to provide comfortable ventilation and a refreshing mist, creating a more pleasant indoor environment. The mist function offers an immediate and natural cooling sensation.

Key features of the Qlima FSM 40 Touch include:

- Integrated mist function for enhanced cooling and humidification.
- Equipped with wheels for easy mobility and convenient placement.
- Three distinct ventilation modes: Sleep, Natural, and Normal.
- User-friendly touch panel for intuitive operation.
- Three adjustable mist spray positions.

SAFETY INSTRUCTIONS

Please read all safety instructions carefully before using the Qlima FSM 40 Mist Fan. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always ensure the fan is placed on a stable, level surface to prevent tipping.
- Do not operate the fan with a damaged cord or plug. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- Unplug the fan from the power outlet before cleaning, performing maintenance, or when not in use.
- Do not insert fingers or foreign objects into the fan grill or any openings.
- Keep the fan away from water and other liquids. Do not immerse the fan in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Use only clean, distilled, or demineralized water in the water tank to prevent mineral buildup and ensure optimal misting performance.
- Do not use the fan in areas where flammable liquids or gases are stored.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and in good condition:

- Qlima FSM 40 Mist Fan Main Unit
- User Manual (this document)
- Power Cord (integrated)

If any items are missing or damaged, please contact your retailer or Qlima customer support.

PRODUCT COMPONENTS

Familiarize yourself with the different parts of your Qlima FSM 40 Mist Fan:



Figure 1: Overall view of the Qlima FSM 40 Mist Fan, showing the fan head, main body with control panel, and wheeled base.



Figure 2: Detailed view of the touch control panel on the Klima FSM 40, displaying various function icons such as power, speed, mode, timer, oscillation, and mist.



Figure 3: Close-up of the fan grill and blades of the Qlima FSM 40, showing the protective mesh and the Qlima branding on the central hub.

Key components include:

- **Fan Head:** Contains the fan blades and protective grill.
- **Mist Nozzle:** Located near the fan head, disperses water mist.
- **Control Panel:** Touch-sensitive interface for all functions (refer to Figure 2).
- **Water Tank:** Reservoir for water used by the mist function.
- **Base with Wheels:** Provides stability and allows for easy movement.

SETUP

Follow these steps to set up your Qlima FSM 40 Mist Fan:

1. **Unpacking:** Carefully remove all packaging materials and ensure no parts are left inside the box. Retain packaging

for future storage or transport.

2. **Placement:** Position the fan on a firm, level surface, ensuring there is adequate space around it for air circulation. Avoid placing it directly against walls or furniture.
3. **Fill Water Tank:** Locate the water tank (usually at the base or rear of the unit). Remove the cap and fill the tank with clean, distilled, or demineralized water. Do not exceed the maximum fill line. Securely replace the cap.
4. **Power Connection:** Insert the power plug firmly into a standard electrical outlet. Ensure the voltage matches the specifications of the fan.

Note: For initial use, it may take a few minutes for the mist function to begin as the water system primes.

OPERATING INSTRUCTIONS

The Qlima FSM 40 features a touch control panel for easy operation. Refer to Figure 2 for button layout.

- **Power On/Off (ON/OFF):** Touch this icon to turn the fan on or off.
- **Fan Speed (SPEED):** Touch this icon repeatedly to cycle through the fan speed settings: Low, Medium, High.
- **Mode (MODE):** Touch this icon to select different ventilation modes:
 - *Normal:* Constant airflow at the selected speed.
 - *Natural:* Simulates natural breeze with varying fan speeds.
 - *Sleep:* Operates at a lower, quieter speed for undisturbed rest.
- **Timer (TIMER):** Touch this icon to set an automatic shut-off timer. Each touch adds an hour, typically up to 7 or 8 hours. The indicator lights will show the selected duration.
- **Oscillation (OSC):** Touch this icon to activate or deactivate the oscillation function, which allows the fan head to swing from side to side, distributing air over a wider area.
- **Mist Function (MIST):** Touch this icon to turn the mist function on or off. Repeated touches may cycle through different mist intensity levels (e.g., low, medium, high mist output).

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Qlima FSM 40 Mist Fan.

Cleaning the Fan

- Always unplug the fan before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- For the fan blades and grill, use a vacuum cleaner with a brush attachment or a soft, dry cloth to remove dust. The front grill may be removable for deeper cleaning (consult specific product instructions if applicable).

Water Tank and Mist System Maintenance

- Empty and rinse the water tank regularly, especially if the fan is not used for an extended period.
- To prevent mineral buildup, clean the water tank and mist components (e.g., transducer) with a mixture of white vinegar and water. Let it soak for 30 minutes, then rinse thoroughly.
- Always use clean, distilled, or demineralized water to minimize mineral deposits.

Storage

When storing the fan for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging, to protect it from dust and damage.

TROUBLESHOOTING

If you encounter issues with your Qlima FSM 40 Mist Fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not turn on.	No power supply; Power button not pressed.	Check if the power cord is securely plugged into a working outlet. Press the ON/OFF button.
No mist is produced.	Water tank empty; Mineral buildup; Mist function not activated.	Fill the water tank. Clean the water tank and mist components. Ensure the MIST button is pressed.
Weak airflow.	Fan speed set too low; Air intake/outlet blocked.	Increase fan speed using the SPEED button. Clear any obstructions from the fan's intake or outlet.
Unusual noise.	Fan not on a level surface; Foreign object in fan grill.	Place the fan on a stable, level surface. Unplug and check for any foreign objects in the fan grill.

If the problem persists after trying these solutions, please contact Qlima customer support for assistance.

SPECIFICATIONS

Brand	Qlima
Model Number	FSM 40 E
Manufacturer Article Number	10026000
Product Dimensions	10.1 x 10.1 x 11.9 cm
Power Source	Corded Electric
Fan Design	Floor Fan
Control Method	Touch
Number of Blades	5
Special Feature	Portable

WARRANTY AND SUPPORT

Qlima products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Qlima website.

If you require technical assistance, have questions about your product, or need to report a defect, please contact Qlima customer support. Have your model number (FSM 40 E) and purchase details ready when contacting support.

For the most up-to-date contact information, please visit the official Qlima website or refer to your purchase documentation.

© 2023 Qlima. All rights reserved. Information in this manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question