

[Manuals.plus](#) /

› [Bose](#) /

› Bose TV Speaker - Soundbar for TV with Bluetooth and HDMI-ARC Connectivity, Black, Includes Remote Control

Bose 838309-1100

Bose TV Speaker Instruction Manual

Model: 838309-1100

Brand: Bose

PRODUCT OVERVIEW

The Bose TV Speaker is a compact soundbar designed to significantly improve TV audio, clarifying speech and enhancing overall sound quality. It features two angled full-range drivers for spacious sound and a dedicated center tweeter for elevated vocals. Built-in Dolby decoding further refines the listening experience.

Its simple setup requires only a single connection to your TV, either via the included optical audio cable or an HDMI cable (sold separately). Standing just over 2 inches tall, it fits discreetly in front of most TVs or can be wall-mounted (brackets sold separately).

The soundbar includes a remote control for easy access to features like "dialogue mode" for clearer speech and a "bass" button for added depth. Bluetooth connectivity allows for wireless streaming of music and podcasts from your devices.

PACKAGE CONTENTS

- Bose TV Speaker
- Remote control with pre-installed battery
- Optical cable
- Power cord
- Quick start guide

SETUP GUIDE

Placement

Place the Bose TV Speaker directly in front of your TV, ensuring it does not block the TV's remote sensor. Its compact design allows for placement just over 2 inches tall.



Image: The Bose TV Speaker positioned neatly on a TV stand, directly below a television screen.

Connections

The Bose TV Speaker offers multiple connectivity options for your television.



Image: A close-up of the rear panel of the Bose TV Speaker, highlighting its various input ports.

Optical Audio Connection (Recommended)

Connect one end of the included optical audio cable to the OPTICAL IN port on the soundbar and the other end to the optical output port on your TV.

HDMI ARC Connection (Optional)

If your TV supports HDMI ARC (Audio Return Channel), you can connect an HDMI cable (sold separately) from the HDMI ARC port on the soundbar to the HDMI ARC port on your TV. This allows for TV remote control of the soundbar volume.

Power Connection

Connect the power cord to the POWER port on the soundbar and then plug the other end into a wall outlet.

OPERATING YOUR BOSE TV SPEAKER

Remote Control

The included compact remote control provides full command over your soundbar's functions.



Image: The sleek black remote control for the Bose TV Speaker, showing its intuitive button layout.

- **Power Button:** Turns the soundbar on or off.
- **Volume (+/-):** Adjusts the sound volume.
- **Mute Button:** Mutes or unmutes the sound.
- **Bluetooth Button:** Initiates Bluetooth pairing mode.
- **Bass Button:** Toggles bass boost on or off for deeper low-end sound.
- **Dialogue Mode Button:** Enhances vocal clarity, making speech easier to understand.

Bluetooth Pairing

To pair a new Bluetooth device, press and hold the Bluetooth button on the remote control until the Bluetooth indicator

light on the soundbar blinks blue. Select "Bose TV Speaker" from your device's Bluetooth settings.

Automatic Power On/Off

If connected via HDMI-CEC, the soundbar will automatically turn on when your TV is powered on and turn off when the TV is turned off.

CARE AND MAINTENANCE

Cleaning

- Clean the surface of the soundbar with a soft, dry cloth.
- Do not use any sprays near the soundbar or allow liquids to spill into any openings.
- Do not use any solvents, chemicals, or cleaning solutions containing alcohol, ammonia, or abrasives.

General Care

- Avoid placing the soundbar in direct sunlight or near heat sources.
- Ensure proper ventilation around the soundbar.
- Do not expose the soundbar to water or moisture.

TROUBLESHOOTING

No Sound

- Ensure all cables are securely connected to both the soundbar and the TV.
- Verify the correct input source is selected on your TV.
- Check the volume levels on both the soundbar and the TV.
- If using optical connection, ensure your TV's audio output is set to PCM.

Remote Control Not Working

- Check the battery in the remote control and replace if necessary.
- Ensure there are no obstructions between the remote and the soundbar.

Poor Audio Quality

- Adjust the bass boost setting using the remote control.
- Activate "dialogue mode" for improved vocal clarity.
- Ensure the soundbar is placed on a stable surface and not vibrating.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	838309-1100
Dimensions (H x W x D)	2.21" x 23.38" x 4.02"
Item Weight	0.01 Ounces

Feature	Detail
Connectivity	HDMI ARC, Optical In, AUX In, Bluetooth 4.2
Speaker Type	Soundbar
Color	Black
Material	Wood
UPC	017817808675

WARRANTY AND SUPPORT

The Bose TV Speaker comes with a limited warranty. For detailed warranty information and support, please refer to the official User Manual (PDF) provided by Bose.

You can download the full user manual[here](#).

Protection Plans

Extended protection plans are available for purchase:

- 2-Year Protection Plan
- 3-Year Protection Plan
- Complete Protect: One plan covers all eligible past and future purchases

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

