

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PLAY](#) /

› [PlayGo Kids Electric Educational Phone Model 2670 User Manual](#)

PLAY 2670

PlayGo Kids Electric Educational Phone

MODEL 2670 USER MANUAL

1. Introduction

The PlayGo Kids Electric Educational Phone, Model 2670, is designed to provide an engaging and educational experience for young children. This musical mobile toy features various sounds, lights, and interactive buttons to stimulate a child's senses and encourage early learning through play. It is suitable for children aged 18 months to 4 years.

2. Package Contents

- 1 x PlayGo Kids Electric Educational Phone (Model 2670)



Image 1: The PlayGo Kids Electric Educational Phone, Model 2670, shown in its original retail packaging. The packaging highlights the product's features and recommended age range.

3. Product Features

- **Interactive Buttons:** Features three main keys for call, communication, and sound effects.

- **Musical Melodies:** Plays various musical tunes to entertain and engage children.
- **Sound Effects:** Includes realistic smartphone sounds and other engaging effects.
- **Educational Benefits:** Aids in developing hand-eye coordination, fine motor skills, and auditory senses.
- **Durable Design:** Constructed from child-safe, non-toxic plastic with rounded edges for safety.
- **Compact Size:** Perfectly sized for small hands, making it easy for toddlers to hold and operate.

4. Setup

4.1 Battery Installation

The PlayGo Kids Electric Educational Phone requires **2 x AAA batteries** (not included) for operation.

1. Locate the battery compartment on the back of the phone.
2. Using a small screwdriver (not included), unscrew the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Replace the battery compartment cover and secure it with the screw.

Important: Always use new batteries and dispose of old batteries responsibly. Do not mix old and new batteries or different types of batteries.

5. Operating Instructions



Image 2: Front view of the PlayGo Kids Electric Educational Phone, displaying its colorful screen with app icons and the three interactive buttons at the bottom.

5.1 Power On/Off

- To turn the phone **ON**, locate the power switch on the side of the device and slide it to the 'ON' position.
- To turn the phone **OFF**, slide the power switch to the 'OFF' position.

5.2 Using the Interactive Buttons

The phone features three main buttons at the bottom of the screen:

- **Green Call Button (Left):** Press this button to activate calling sounds and phrases, simulating a phone call.
- **Star Button (Center):** Press this button to activate various sound effects and musical melodies.
- **Red Hang Up Button (Right):** Press this button to end simulated calls or change sound sequences.

The screen also features various icons that light up and interact with the button presses, enhancing the play experience.

6. Care and Maintenance

- **Cleaning:** Wipe the toy with a soft, damp cloth. Do not immerse the toy in water or use harsh cleaning agents.
- **Storage:** Store the toy in a cool, dry place away from direct sunlight when not in use.
- **Battery Care:** Remove batteries if the toy will not be used for an extended period to prevent leakage.

7. Troubleshooting

- **No Sound/Lights:**
 - Ensure the power switch is in the 'ON' position.
 - Check if the batteries are correctly installed with the proper polarity.
 - Replace old batteries with new AAA batteries.

8. Specifications

Feature	Detail
Model Number	2670
Product Dimensions (W x H x L)	6.8 x 1.5 x 11.5 cm (approximately 2.68 x 0.59 x 4.53 inches)
Item Weight	4.6 ounces (approximately 130 grams)
Material	Durable, non-toxic plastic
Battery Type	2 x AAA (not included)
Recommended Age	18 months - 4 years
Manufacturer	PLAY

9. Safety Information

While no specific safety information was provided, please observe the following general safety guidelines for children's toys:

- Always supervise young children during play.
- Inspect the toy regularly for any damage or loose parts. Discontinue use if damaged.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- This toy is not intended for use in water.

10. Warranty and Support

For warranty information or customer support regarding your PlayGo Kids Electric Educational Phone, Model 2670, please refer to the contact information provided on the product packaging or contact the manufacturer directly.