

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Lorell](#) /

> [Lorell LLR83293 SOHO Mesh Mid-Back Task Chair User Manual](#)

## Lorell LLR83293

# Lorell LLR83293 SOHO Mesh Mid-Back Task Chair User Manual

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your Lorell LLR83293 SOHO Mesh Mid-Back Task Chair. Designed for comfort and functionality in small office or home office environments, this chair features a breathable mesh back and seat, along with multiple adjustment options to customize your seating experience. Please read these instructions carefully before assembly and use to ensure proper function and longevity of your chair.

## SAFETY INFORMATION

---

Always prioritize safety during assembly and use. Failure to follow these guidelines may result in injury or damage to the product.

- Consider the weight capacity of the chair. Do not exceed the recommended weight limit to prevent structural failure.
- Use adjustable features with caution. Ensure all locking mechanisms are engaged before applying full weight or force.
- Keep small parts away from children during assembly.
- Ensure all screws and bolts are tightened securely before use. Periodically check and re-tighten as necessary.
- Do not stand on the chair or use it as a step stool.

## PACKAGE CONTENTS

---

Before beginning assembly, verify that all components are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Chair Backrest
- Seat Cushion

- Armrests (2)
- Gas Lift Cylinder
- Star Base
- Casters (5)
- Mechanism Plate
- Hardware Pack (screws, washers, Allen wrench)

## SETUP AND ASSEMBLY

---

Assembly is required for this chair. Please follow the included assembly instructions carefully. A general overview of the assembly process is provided below.

1. **Attach Casters to Base:** Insert each of the five casters into the holes at the end of each leg of the star base until they click securely into place.
2. **Insert Gas Lift:** Place the gas lift cylinder into the center hole of the assembled star base.
3. **Attach Mechanism to Seat:** Secure the mechanism plate to the underside of the seat cushion using the provided screws. Ensure the front of the mechanism aligns with the front of the seat.
4. **Attach Armrests:** Fasten the armrests to the seat cushion using the designated screws. Do not fully tighten until the backrest is attached.
5. **Attach Backrest:** Connect the backrest to the seat and armrests using the remaining screws. Once all connections are made, fully tighten all screws on the armrests and backrest.
6. **Connect Seat to Gas Lift:** Carefully place the assembled seat onto the gas lift cylinder, ensuring it is centered.




Figure 1: Detailed dimensions and component overview of the Lorell LLR83293 SOHO Mesh Mid-Back Task Chair.



Figure 2: Overall dimensions of the assembled Lorell LLR83293 SOHO Mesh Mid-Back Task Chair.

## OPERATING INSTRUCTIONS

Your Lorell SOHO Mesh Mid-Back Task Chair offers several adjustment features to enhance your comfort and support.



Figure 3: Key adjustable features of the chair.

## Seat Height Adjustment

To adjust the seat height, locate the lever on the right side, beneath the seat. While seated, pull the lever up to lower the seat. To raise the seat, stand up slightly and pull the lever up. Release the lever at the desired height to lock it in place.

## Arm Height Adjustment

The armrests are adjustable. Locate the button or lever on the side of each armrest. Press or lift it to unlock the armrest, then move the armrest up or down to your preferred height. Release the button/lever to lock the armrest in position.

## Synchro Tilt and Tilt Lock

This chair features a dual-action synchro tilt mechanism, allowing the backrest to recline at a 2-to-1 ratio to the seat angle, keeping the seat relatively level. To activate the tilt, pull out the lever on the left side, beneath the seat. To lock the chair in an upright position, push the lever in. To recline, ensure the lever is pulled out, then lean back. To lock the tilt at a specific angle, push the lever in at the desired recline.

## Tilt Tension Adjustment

Adjust the resistance of the chair's recline by turning the round knob located at the front, under the seat. Turn clockwise to increase tension (making it harder to recline) or counter-clockwise to decrease tension (making it easier to recline).

## 360-Degree Swivel

The chair is equipped with a 360-degree swivel function, allowing for easy rotation without moving the base.

## MAINTENANCE

Proper care and maintenance will extend the life of your chair.

- **Cleaning:** Spot clean the mesh and fabric surfaces with a mild detergent and a damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically inspect all bolts and screws to ensure they are tight. Re-tighten as needed to maintain stability and safety.
- **Casters:** Keep casters free of debris (hair, dust, etc.) to ensure smooth rolling.

## TROUBLESHOOTING

If you encounter issues with your chair, refer to the following common problems and solutions.

- **Chair Sinks or Won't Stay Up:** This usually indicates an issue with the gas lift cylinder. Ensure the height adjustment lever is fully engaged. If the problem persists, the gas lift may need replacement.
- **Chair Wobbles:** Check all assembly screws and bolts, especially those connecting the seat to the mechanism and the base. Tighten any loose fasteners. Ensure the casters are fully inserted into the base.
- **Casters Not Rolling Smoothly:** Inspect casters for trapped debris (hair, lint, etc.) and clean them thoroughly.
- **Difficulty Reclining or Locking Tilt:** Verify that the tilt tension knob is not overtightened. Adjust the tilt tension to a comfortable level. Ensure the tilt lock lever is functioning correctly.

For issues not covered here, please contact Lorell customer support.

## SPECIFICATIONS

Feature	Specification
Model Number	LLR83293
Brand	Lorell
Color	Black
Material	Mesh (Back), Foam (Fill)
Product Dimensions (D x W x H)	27"D x 27.8"W x 42.9"H
Seat Depth	15 inches
Back Style	Mid Back
Special Features	360° Swivel, Synchro Tilt, Tilt, Tilt Tension, Adjustable Arms
Item Weight	39.2 pounds
Recommended Use	Office

## WARRANTY AND SUPPORT

Your Lorell LLR83293 SOHO Mesh Mid-Back Task Chair is covered by a **Lorell Limited 5-Year Warranty**. This warranty covers defects in materials and workmanship under normal use.

For warranty claims, technical assistance, or to order replacement parts, please contact Lorell customer support. Refer to the contact information provided with your purchase documentation or visit the official Lorell website for support details.

**Online Support:** [www.lorellfurniture.com](http://www.lorellfurniture.com)

