

Haier JW-C55D-N

Haier 5.5kg Fully Automatic Washing Machine

MODEL: JW-C55D-N

1. Introduction

This instruction manual provides essential information for the safe and efficient operation, installation, and maintenance of your Haier JW-C55D-N 5.5kg fully automatic washing machine. Please read this manual thoroughly before using the appliance and retain it for future reference.

Safety Information

Always follow basic safety precautions to reduce the risk of fire, electric shock, or injury. Ensure the appliance is properly grounded. Do not operate the machine if it is damaged or malfunctioning. Keep children and pets away from the appliance during operation.

2. Product Overview

The Haier JW-C55D-N is a top-loading, fully automatic washing machine designed for household use. It features a 5.5kg capacity, suitable for small to medium laundry loads.



Figure 2.1: Haier JW-C55D-N 5.5kg Fully Automatic Washing Machine. This image shows an overhead view of the washing machine, highlighting its gold-colored top lid and the control panel with various buttons and a central dial.

Control Panel

The control panel is located on the top front of the machine and includes buttons for power, program selection, start/pause, and other functions. A central dial allows for easy selection of wash cycles.

3. Setup and Installation

Unpacking

Carefully remove all packaging materials, including any protective films or foam inserts, from the washing machine and its accessories. Retain packaging for potential future transport.

Location

Place the washing machine on a firm, level surface to prevent vibration and noise during operation. Ensure there is adequate space around the machine for ventilation and maintenance. Avoid direct sunlight and areas with high humidity.

Water Supply Connection

1. Connect the water inlet hose to the water tap. Ensure a tight connection to prevent leaks.
2. Connect the other end of the inlet hose to the water inlet valve on the back of the washing machine.
3. Open the water tap fully and check for any leaks.

Drainage

Position the drain hose correctly to allow for proper water discharge. The drain hose should be securely placed in a drain pipe or sink, ensuring it is not kinked or blocked. The height of the drain hose should be between 60 cm and 90 cm from the floor.

Power Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency of your power supply match the

specifications of the washing machine.

4. Operating Instructions

Loading Laundry

Open the top lid and place laundry loosely into the tub. Do not overload the machine; ensure there is enough space for the clothes to move freely during washing. Close the lid securely.

Adding Detergent and Softener

Add the appropriate amount of detergent and fabric softener to their respective dispensers. Refer to the detergent packaging for recommended quantities based on load size and water hardness.

Selecting a Wash Program

Press the **Power** button to turn on the machine. Use the program selection dial or buttons to choose the desired wash program. Available programs may include:

- **Standard:** For daily cotton and mixed fabrics.
- **Speed Wash:** For lightly soiled items or when a quick wash is needed.
- Other specialized programs as indicated on the control panel.

Starting the Wash Cycle

After selecting the program, press the **Start/Pause** button to begin the wash cycle. The machine will automatically fill with water, wash, rinse, and spin.

Ending the Wash Cycle

The machine will emit an audible signal when the wash cycle is complete. Open the lid and remove your laundry promptly to prevent wrinkles.

5. Maintenance and Cleaning

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

Exterior Cleaning

Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these can damage the surface.

Tub Cleaning

Periodically run a tub clean cycle (if available) or a hot wash cycle with a washing machine cleaner to remove detergent residue and prevent odors.

Lint Filter Cleaning

Locate the lint filter (usually inside the tub or agitator) and remove any accumulated lint or debris after every few washes. Rinse the filter under running water and reinsert it.

Water Inlet Filter Cleaning

If water filling is slow, the water inlet filter may be clogged. Turn off the water supply, disconnect the inlet hose, and clean the filter screen with a brush. Reconnect the hose and turn on the water supply.

6. Troubleshooting

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
Machine does not start	No power; Lid not closed; Program not selected	Check power cord; Close lid securely; Select a program and press Start
Water not filling	Water tap closed; Water inlet hose kinked; Inlet filter clogged	Open water tap; Straighten hose; Clean inlet filter
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged	Straighten hose; Clean drain pump filter (refer to detailed manual)
Excessive vibration/noise	Machine not level; Laundry unbalanced; Transit bolts not removed	Adjust leveling feet; Redistribute laundry; Remove transit bolts (if applicable)

7. Specifications

Feature	Detail
Brand	Haier
Model	JW-C55D-N
Capacity	5.5 Kilograms
Color	Gold
Operation Panel Type	Push Button
Standard Wash Programs	5
Door Position	Top Load
Item Weight	25.9 Kilograms
Cycle Options	Speed Wash

8. Warranty and Support

For warranty information and customer support, please refer to the warranty card included with your product or visit the official Haier website. Keep your purchase receipt as proof of purchase for warranty claims.

	<p>Haier HWM120-M826 Fully Automatic Top Load Washing Machine Owner's Manual</p> <p>This manual provides comprehensive instructions for the Haier HWM120-M826 fully automatic top load washing machine, covering installation, operation, safety precautions, maintenance, and troubleshooting.</p>
	<p>Haier HWM140-1826T Top Load Fully Automatic Washing Machine Owner's Manual</p> <p>This owner's manual provides comprehensive guidance for operating and maintaining the Haier HWM140-1826T top load fully automatic washing machine. It includes detailed instructions on installation, usage, safety precautions, cleaning, and troubleshooting to ensure optimal performance and longevity.</p>
	<p>Haier JW-U45B/JW-U55B/JW-U61C</p> <p>Haier () JW-U45B, JW-U55B, JW-U61C</p>
	<p>Haier HWM120-1678ES5 Top Load Fully Automatic Washing Machine User Manual</p> <p>Comprehensive user manual for the Haier HWM120-1678ES5 top load fully automatic washing machine. Includes installation, operation, maintenance, safety precautions, and troubleshooting guides.</p>
	<p>Haier Washing Machine Owner's Manual: HWM110-B2178S8, HWM120-B2178S8, HWM130-B2178S8</p> <p>Comprehensive owner's manual for Haier Top Load Fully Automatic Washing Machines, covering installation, operation, safety, maintenance, and troubleshooting for models HWM110-B2178S8, HWM120-B2178S8, and HWM130-B2178S8.</p>
	<p>Haier Top Load Fully Automatic Washing Machine Owner's Manual</p> <p>This owner's manual provides comprehensive guidance for Haier Top Load Fully Automatic Washing Machines, models HWM200-BD2178S8 and HWM180-BD2178S8. It covers installation, safety, operation, maintenance, and troubleshooting to ensure efficient and safe use.</p>

