

[Manuals.plus](#) /

> [vidaXL](#) /

> vidaXL Party Tent with Side Walls 2x2 m White Instruction Manual

vidaXL 48516

vidaXL Party Tent with Side Walls 2x2 m White

Model: 48516

IMPORTANT SAFETY WARNINGS

WARNING: This product should NEVER be used in bad weather conditions, such as strong wind, heavy rain, snow, or storms. Failure to adhere to this warning may result in product damage, property damage, or personal injury.

Always ensure the tent is securely anchored to the ground. Do not use near open flames or heat sources. Keep children and pets away from the tent during assembly and disassembly.

PRODUCT OVERVIEW

The vidaXL Party Tent is designed to provide a comfortable and sheltered space for outdoor gatherings. Its robust construction and thoughtful design make it suitable for various events, offering protection from sun and light elements.



Image: The vidaXL Party Tent, showcasing its white canopy and side walls, with the front opening providing easy access. This tent is ideal for outdoor events, offering a sheltered space.

Key Features:

- **Versatile Outdoor Shelter:** An excellent place to entertain family and friends at any kind of outdoor parties and gatherings.
- **Durable Material:** The garden marquee is made of UV and water-resistant polyethylene, perfectly suited for outdoor use.
- **Sturdy Frame:** The frame is constructed from rust-resistant steel, ensuring the tent is stable and durable.
- **Functional Design:** Features side panels with decorative windows and a zippered door panel for easy entry.
- **Easy Assembly:** The garden gazebo is designed for straightforward assembly.

PACKAGE CONTENTS

Please verify that all components are present before beginning assembly.

- Tent Canopy (Polyethylene)
- Side Panels with Windows (Polyethylene)

- Door Panel with Zipper (Polyethylene)
- Steel Frame Poles (Various lengths and types)
- Connectors (Plastic/Metal)
- Ground Stakes/Anchors
- Ropes (for additional stability)
- Assembly Manual (This document)



Image: A close-up view of the tent's frame connection point, showing the sturdy joint where multiple poles meet to form the structure.

SETUP INSTRUCTIONS

Follow these steps carefully to assemble your vidaXL Party Tent. It is recommended that at least two people are involved in the assembly process.

1. **Prepare the Area:** Choose a flat, level surface for assembly. Clear any debris or sharp objects that could damage the tent material.

2. **Unpack Components:** Lay out all frame poles, connectors, and fabric parts. Refer to the package contents list to ensure everything is present.
3. **Assemble the Base Frame:** Connect the bottom poles using the appropriate connectors to form the tent's base rectangle (2x2 meters).
4. **Erect Vertical Poles:** Insert the vertical poles into the base frame connectors.
5. **Assemble the Roof Frame:** Connect the roof poles and ridge poles to form the top structure. Lift and attach this to the top of the vertical poles.
6. **Drape the Canopy:** Carefully drape the main tent canopy over the assembled roof frame. Ensure it is centered and covers the entire frame.
7. **Attach Side Panels:** Secure the side panels to the frame using the integrated fasteners (e.g., Velcro straps, ties). Ensure the decorative windows are facing outwards.
8. **Install Door Panel:** Attach the door panel, ensuring the zipper functions correctly for easy entry and exit.
9. **Secure the Tent:** Use the provided ground stakes and ropes to firmly anchor the tent to the ground. This is crucial for stability, especially in light winds.

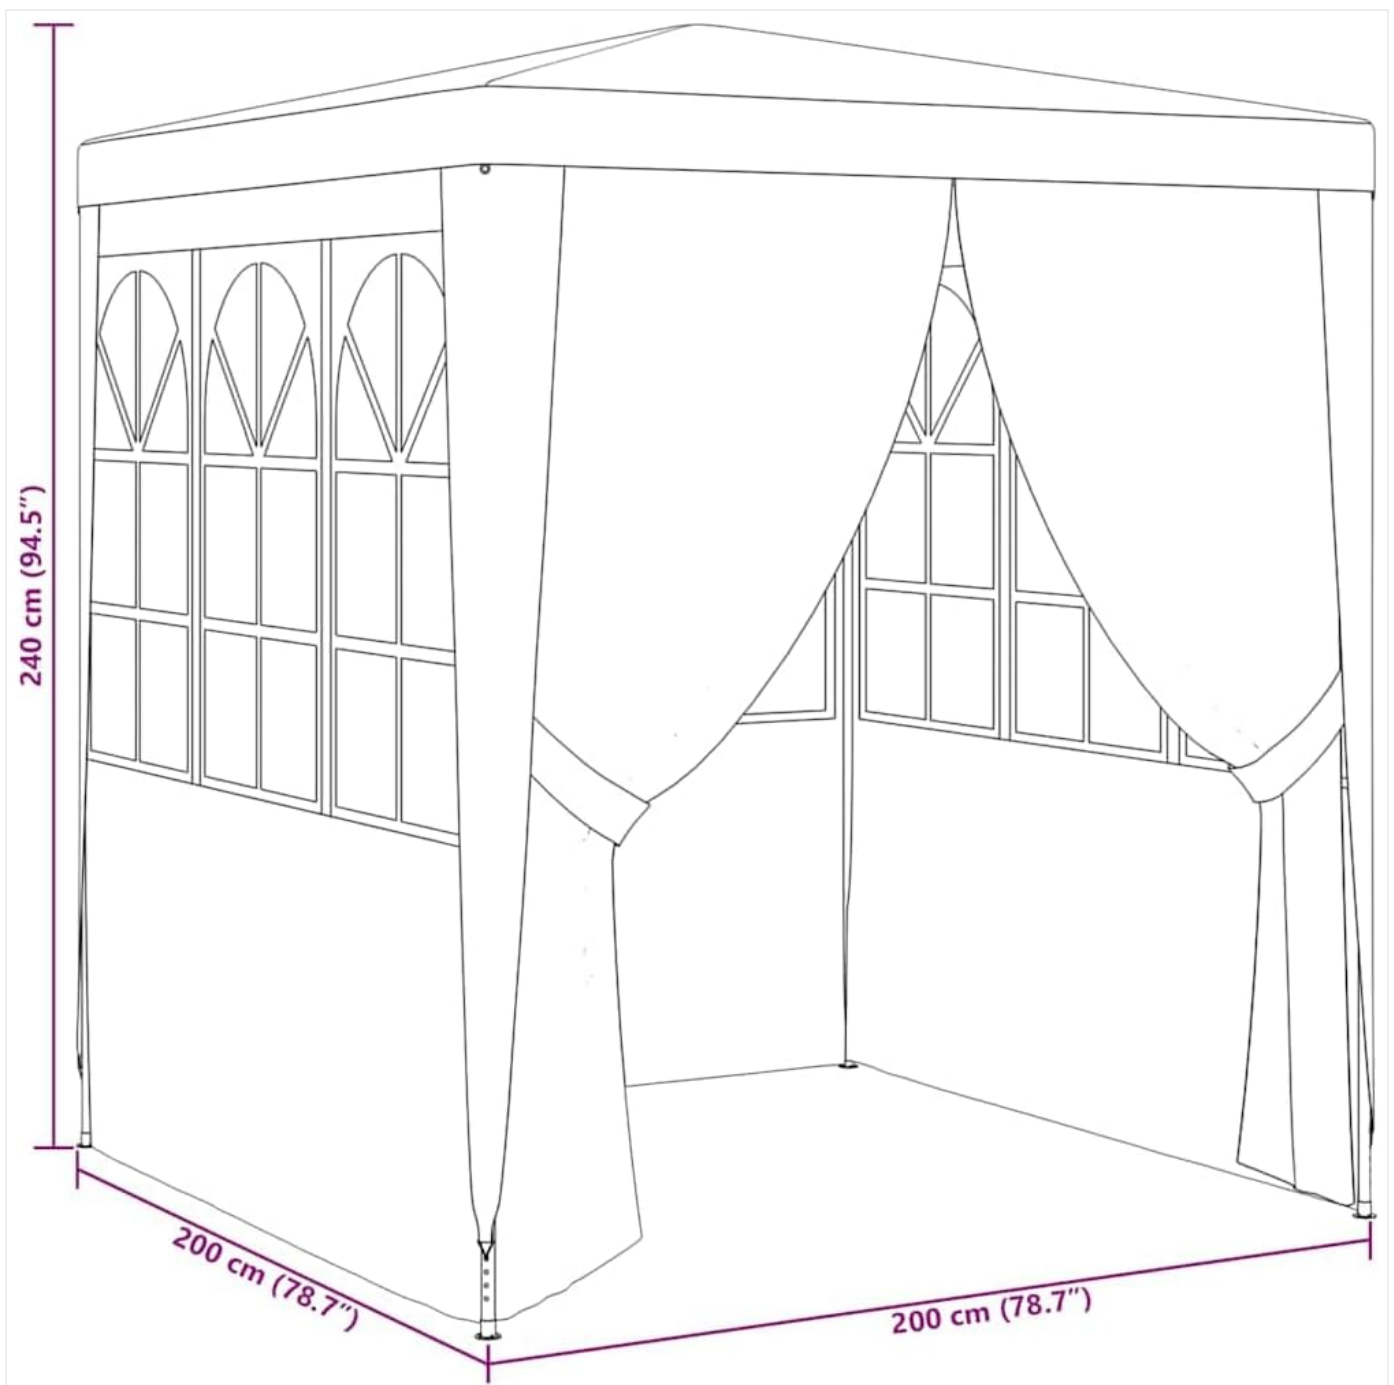


Image: A technical diagram illustrating the dimensions of the tent, including its 200 cm (78.7") width and depth, and 240 cm (94.5") height, providing a clear guide for setup.

OPERATING INSTRUCTIONS

Once assembled, the vidaXL Party Tent is ready for use.

- **Entry and Exit:** Use the zippered door panel for convenient access.
- **Ventilation:** If desired, side panels can be partially opened or removed (if design allows) for increased airflow.
- **Weather Monitoring:** Continuously monitor weather conditions. If strong winds, heavy rain, or storms are forecast, disassemble the tent immediately to prevent damage.
- **Securing Side Panels:** The side panels can be tied back to create open entrances or fully closed for privacy and protection.



Image: The front view of the party tent, showing the entrance curtains neatly tied back, creating an inviting open space for guests.

MAINTENANCE

Proper maintenance will extend the lifespan of your party tent.

- **Cleaning:** Clean the polyethylene fabric with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Inspection:** Regularly inspect the steel frame for any signs of rust, bending, or damage. Replace damaged parts immediately.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.

- **Zipper Care:** Keep zippers clean and lubricated with a silicone-based spray to ensure smooth operation.



Image: A detailed close-up of the tent's zipper, highlighting its robust construction for secure closure of the side panels and door.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable or wobbly.	Improper anchoring; uneven ground; loose frame connections.	Ensure all ground stakes are firmly in place and ropes are taut. Move to a level surface. Check and tighten all frame connections.
Water pooling on the roof.	Canopy not taut enough; incorrect roof frame assembly.	Re-adjust the canopy to ensure it is stretched tightly over the frame. Verify roof frame poles are correctly assembled and connected.
Zipper is stuck or difficult to move.	Dirt or debris in zipper teeth; lack of lubrication.	Clean zipper teeth with a small brush. Apply a silicone-based lubricant to the zipper.

Problem	Possible Cause	Solution
Side panels do not fit correctly.	Panels are misaligned or incorrect panel used for a specific side.	Ensure each panel is oriented correctly and attached to the corresponding side. Check for any twists in the fabric.

SPECIFICATIONS

Brand	vidaXL
Model Number	48516
Color	White
Dimensions (L x W x H)	200 x 200 x 240 cm (approx. 78.7 x 78.7 x 94.5 inches)
Item Weight	5.62 Kilograms (approx. 12.39 lbs)
Material	Polyethylene (PE) fabric, Alloy Steel frame
UV Protection	Yes
Water Resistance Level	Waterproof
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the retailer's return policy or contact vidaXL directly through their official website.

Retailer Return Policy: This product is subject to the retailer's return policy, which typically allows for returns within 30 days of purchase. Please check the specific terms and conditions of your purchase.

Manufacturer Support: Visit the official vidaXL website for product support, FAQs, and contact information www.vidaxl.com

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for this specific model.

