

[Manuals.plus](#) /

› [MUSIC HERO](#) /

› Music Hero TWS Beat True Wireless Stereo Earbuds Instruction Manual

MUSIC HERO TWS Beat

Music Hero TWS Beat True Wireless Stereo Earbuds Instruction Manual

Model: TWS Beat (V9)

INTRODUCTION

Thank you for choosing the Music Hero TWS Beat True Wireless Stereo Earbuds. These earbuds offer a seamless audio experience with true wireless connectivity, a built-in microphone, and intuitive call control. This manual will guide you through the setup, operation, and maintenance of your new earbuds to ensure optimal performance.

PACKAGE CONTENTS

Please check the box for the following items:

- Music Hero TWS Beat Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual



Image: Package contents showing the user manual, charging base, charging cable, and the earphones.

PRODUCT OVERVIEW

Familiarize yourself with the key components of your Music Hero TWS Beat Earbuds:



Image: Earbud features including the touch button, LED indicator, and magnetic charging points.

- **Touch Answer/End Button:** Used for music playback control (play/pause) and managing calls.
- **LED Charge Indicator:** Displays the charging status and connection status of the earbud.
- **Magnetic Charging Contacts:** For secure and efficient charging within the case.

SETUP

1. Charging the Earbuds and Case

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into their respective slots in the charging case.
2. Connect the USB charging cable to the charging port on the case and to a power source (e.g., USB wall adapter, computer USB port).
3. The LED indicators on the earbuds and case will show the charging status.
4. A full charge takes approximately 1 hour for the earbuds and 2.5 hours for the case.



CHARGING CASE

300 mAh

Image: Earbuds charging inside the case, showing LED indicators.



Image: Battery life and charging times for the earbuds and case.

2. Pairing with Your Device

1. Ensure the earbuds are charged.
2. Open the charging case. The earbuds will automatically power on and enter pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth.
4. Search for available Bluetooth devices and select "TWS Beat" from the list.
5. Once connected, you will hear an audible confirmation, and the LED indicators on the earbuds will change.

Note: The earbuds automatically power on when removed from the case and are ready for use.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Remove the earbuds from the charging case. They will automatically power on.
- **Power Off:** Place the earbuds back into the charging case. They will automatically power off and begin charging.

Music Playback

- **Play/Pause:** Tap the touch button on either earbud once.
- **Next Track:** Double-tap the touch button on the right earbud.
- **Previous Track:** Double-tap the touch button on the left earbud.
- **Volume Up:** Triple-tap the touch button on the right earbud.
- **Volume Down:** Triple-tap the touch button on the left earbud.

Call Management

- **Answer/End Call:** Tap the touch button on either earbud once.
- **Reject Call:** Press and hold the touch button on either earbud for 2 seconds.
- **Voice Assistant:** Press and hold the touch button on either earbud for 3 seconds to activate your device's voice assistant.
- **Redial Last Number:** Quadruple-tap the touch button on either earbud.

Wearing the Earbuds

Insert the earbuds gently into your ears. Adjust them for a comfortable and secure fit to ensure optimal sound quality.

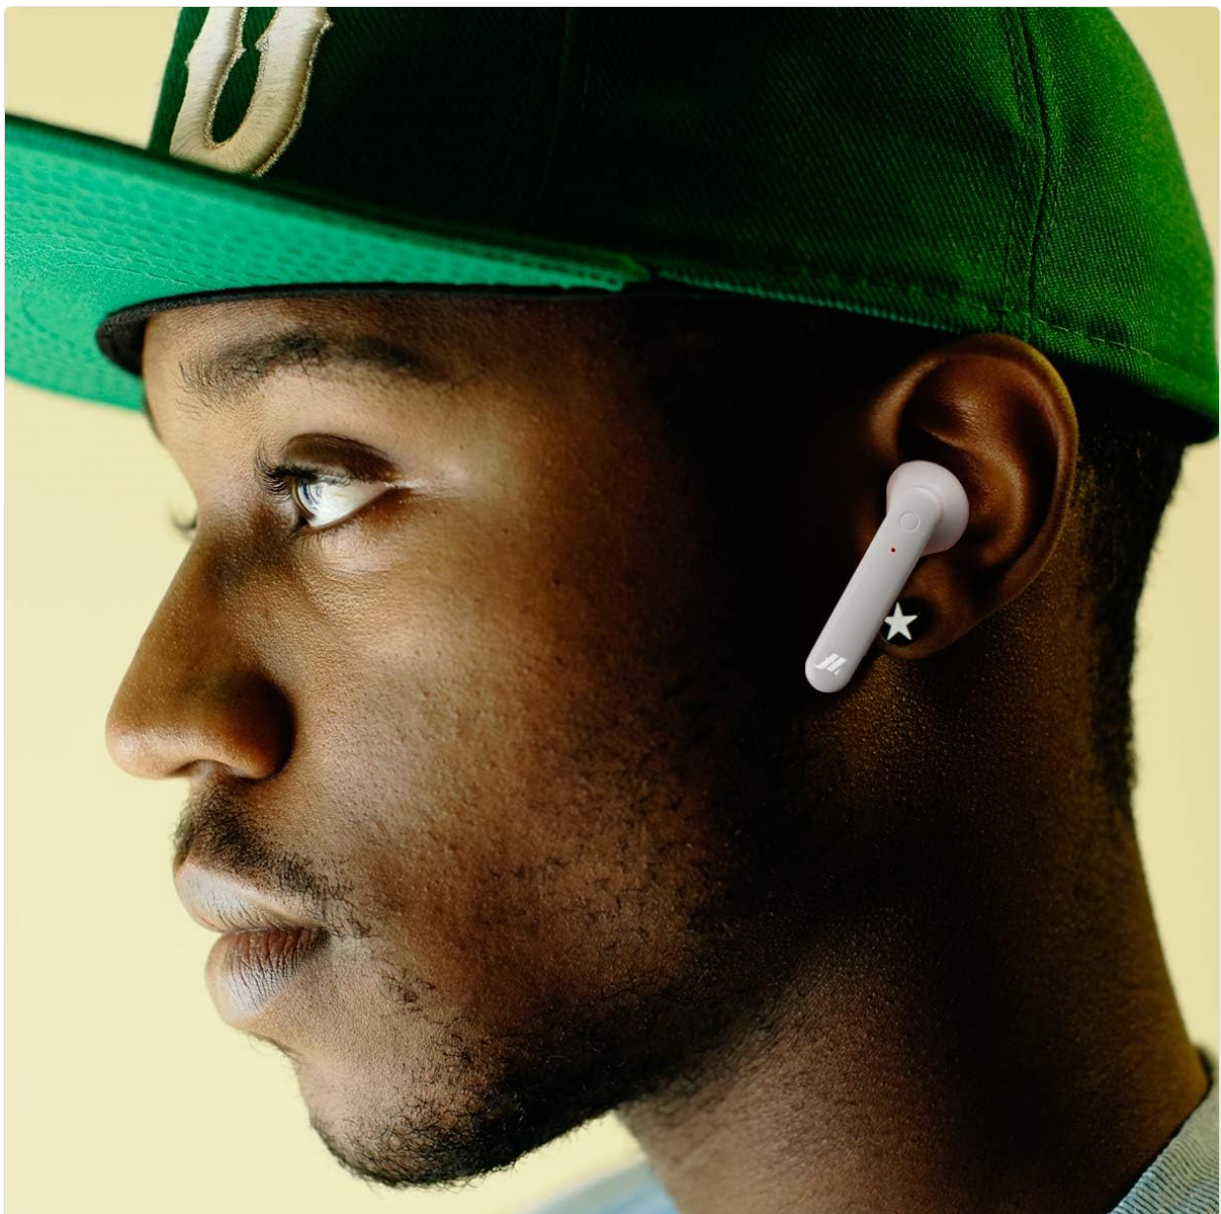


Image: Earbud worn in ear for proper fit.

MAINTENANCE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged.
- **Avoid Extreme Conditions:** Do not expose the earbuds to extreme temperatures, humidity, or direct sunlight. The earbuds are not water resistant.

TROUBLESHOOTING

Problem	Solution
Earbuds do not power on.	Ensure the earbuds and charging case are fully charged. Place earbuds in the case and then remove them.
Earbuds do not pair with device.	Make sure Bluetooth is enabled on your device. Ensure earbuds are in pairing mode (LED flashing). Forget "TWS Beat" from your device's Bluetooth list and try pairing again. Ensure earbuds are close to your device (within 10 meters).
Only one earbud is working.	Place both earbuds back into the charging case, close the lid, wait a few seconds, then remove them. Ensure both earbuds are charged. Try resetting the earbuds (refer to manufacturer's website if specific reset instructions are not in this manual).
Poor sound quality or disconnections.	Ensure earbuds are within Bluetooth range of your device. Check for interference from other wireless devices. Clean the earbuds, especially the speaker grilles.

SPECIFICATIONS

Brand:	MUSIC HERO
Model Name:	TWS Beat
Model Number:	V9
Color:	White
Ear Placement:	In-ear
Form Factor:	In-ear
Noise Control:	Passive Noise Cancellation
Connectivity Technology:	Wireless

Wireless Communication:	Bluetooth
Bluetooth Version:	5.3
Bluetooth Range:	Up to 10 meters
Control Method:	Touch
Battery Life (Earbuds):	Up to 2.5 hours (music playback)
Charging Time (Earbuds):	Approx. 1 hour
Charging Time (Case):	Approx. 2.5 hours
Standby Time:	Up to 100 hours
Frequency Range:	20 Hz - 20,000 Hz
Item Weight:	40 Grams
Material:	Plastic
Water Resistance:	Not water resistant
Compatible Devices:	Phones, laptops, tablets, car audio systems

WARRANTY AND SUPPORT

The Music Hero TWS Beat Earbuds come with a **2-year manufacturer's warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use.

For warranty claims, technical support, or further assistance, please contact your retailer or visit the official MUSIC HERO website for customer service information.

Please retain your proof of purchase for warranty validation.