

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Rowenta](#) /

› [Rowenta Compact Steam DG7664 Ironing Station User Manual](#)

## Rowenta DG7664

# Rowenta Compact Steam DG7664 Ironing Station User Manual

Model: DG7664

## INTRODUCTION

---

This manual provides essential instructions for the safe and efficient use of your Rowenta Compact Steam DG7664 Ironing Station. Please read it thoroughly before first use and keep it for future reference. This appliance is designed for ironing textiles, such as clothes or bedding, to remove wrinkles.

## IMPORTANT SAFETY INSTRUCTIONS

---

- Always unplug the appliance when filling with water, cleaning, or when not in use.
- Do not leave the appliance unattended while it is switched on.
- Keep out of reach of children and pets.
- Do not immerse the appliance in water or other liquids.
- Use only as directed in this manual and for its intended purpose.
- Ensure the power cord is not damaged and avoid placing it near hot surfaces.
- Do not touch the hot soleplate or steam with bare hands.

## PRODUCT OVERVIEW

---

The Rowenta Compact Steam DG7664 is a high-performance ironing station designed for efficient wrinkle removal with 6.5 bars of pressure. It features a powerful steam output and a compact design for easy storage.



Image of the Rowenta Compact Steam DG7664 Ironing Station, showing its compact design and steam generator unit.

## SETUP

---

1. **Unpacking:** Carefully remove all packaging materials. Ensure all components are present and undamaged.
2. **Positioning:** Place the ironing station on a stable, flat, and heat-resistant surface, such as an ironing board designed for steam generators.
3. **Filling the Water Tank:** Open the water tank cap and fill the tank with clean tap water up to the maximum level indicator. Do not overfill. Close the cap securely.
4. **Connecting Power:** Plug the power cord into a grounded electrical outlet. Ensure the voltage matches the appliance's requirements.

## OPERATING INSTRUCTIONS

---

### First Use

Before ironing garments for the first time, allow the iron to heat up for a few minutes. Press the steam trigger several times to prime the pump and release any condensation or impurities from the steam chamber. Iron an old cloth to ensure no residue is transferred to your garments.

### Ironing

1. **Power On:** Press the power button on the steam generator. The indicator light will illuminate, signaling that the appliance is heating up.
2. **Temperature Selection:** Adjust the temperature dial on the iron according to the fabric type you are ironing. Always check the garment's care label.
3. **Steam Activation:** Once the iron reaches the desired temperature (indicator light may change or stop flashing), press the steam trigger located on the iron handle for continuous steam. For a powerful steam boost, press the trigger multiple times or hold it down briefly.
4. **Vertical Steaming:** The iron can be used for vertical steaming of hanging garments, curtains, or drapes. Hold the iron a few centimeters away from the fabric and press the steam trigger.

### After Use

1. **Power Off:** Press the power button on the steam generator and then unplug the appliance from the electrical outlet.
2. **Cool Down:** Allow the iron and steam generator to cool completely before handling or storing. This may take up to an hour.

3. **Empty Water Tank:** Empty any remaining water from the tank to prevent limescale buildup and ensure hygiene.

## MAINTENANCE

---

### Cleaning the Soleplate

Clean the soleplate with a damp, non-abrasive cloth when the iron is completely cool. For stubborn marks, use a specialized soleplate cleaning stick according to its instructions. Do not use abrasive cleaners, metallic scouring pads, or sharp objects, as these can damage the soleplate.

### Descaling

Regular descaling is crucial for optimal performance and longevity of your ironing station, especially in areas with hard water. Refer to the specific descaling instructions provided in the full product manual or on the official Rowenta website for your model. Typically, this involves flushing the boiler or using a descaling solution.

### Storage

Store the ironing station in a dry, safe place, out of reach of children. Ensure the power cord and steam hose are neatly wrapped and secured to prevent damage. The compact design allows for convenient storage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
No steam output	Water tank empty; iron not hot enough; steam trigger not pressed; limescale buildup.	Fill water tank; wait for iron to reach operating temperature; press steam trigger; descale the appliance.
Water leaking from soleplate	Temperature too low for steam generation; overfilling water tank; iron held horizontally for too long without steam.	Increase temperature setting; do not overfill water tank; ensure iron is hot enough before using steam.
Iron not heating up	Appliance not plugged in; power button not pressed; electrical outlet malfunction.	Check power connection; press the power button; test the outlet with another appliance.
Steam generator making unusual noise	Normal operation of the pump; low water level.	This is often normal. If persistent or loud, check water level and refill if necessary.

## SPECIFICATIONS

---

**Brand:** Rowenta

**Model Name:** Compact Steam

**Model Number:** DG7664

**Power:** 2200 Watts

**Pressure:** 6.5 bars

**Color:** Black/Blue

**Special Feature:** Compact design

**Recommended Use:** Ironing textiles, such as clothes or bedding, to remove wrinkles.

## WARRANTY AND SUPPORT

---

For detailed warranty information, technical support, or to purchase spare parts and accessories, please refer to the official Rowenta website or contact their customer service department. Keep your proof of purchase for any warranty

claims.

You can visit the official Rowenta website for more information: [www.rowenta.com](http://www.rowenta.com)