

manuals.plus /

- › [Angrox](#) /
- › [Angrox Universal Remote Control for LG Smart TVs - Instruction Manual](#)

Angrox AH-5307

Angrox Universal Remote Control for LG Smart TVs

Model: AH-5307

1. PRODUCT OVERVIEW

This Angrox universal remote control is designed as a high-grade replacement for various LG LCD, LED, HDTV, and 3D Smart TV models. It offers stable performance and a farther transmitting distance compared to many standard remotes. Its compact design ensures comfortable handling and ease of use.



Image Description: A black Angrox universal remote control for LG Smart TVs, shown at an angle, highlighting its full button layout. A magnified inset shows the quick access buttons for volume, channel, Netflix, and Amazon Prime Video.

2. COMPATIBILITY

This remote control is compatible with a wide range of LG Smart Universal Control models, including but not limited to:

- AKB75095307
- AKB74475401
- AKB74475433
- AKB73975702
- AKB75055701
- AKB73975711

- AKB73715608
- AKB74475401
- AKB75375604
- AGF76631064
- AKB74915324
- AKB73715601
- AKB75095308

It is designed to replace damaged or old remotes and covers all functions of the original remote for LG LCD LED HDTV 3D Smart TVs.



Image Description: A hand holding the Angrox universal remote control in front of an LG Smart TV displaying a green field. Text overlay indicates "Universal Remote Control for LG Smart TV Remote."

3. FEATURES

- **High-Grade Construction:** Made from durable ABS and plastic materials for longevity.
- **Stable Performance:** Ensures reliable operation and consistent signal transmission.
- **Extended Range:** Offers a farther transmitting distance for flexible use.
- **Ergonomic Design:** Small and compact size for easy grip and comfortable handling.
- **No Programming Required:** Ready to use immediately after battery insertion.
- **Dedicated Quick Access Buttons:** Includes direct buttons for popular streaming services like Netflix and Amazon Prime Video.



Image Description: The Angrox remote control displayed with text overlays "Durable" and "Signal stability," emphasizing its robust build

and reliable performance.

4. SETUP GUIDE

4.1. Battery Installation

The Angrox remote control requires two (2) AAA batteries for operation. Batteries are not included and must be purchased separately.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image Description: The back of the Angrox remote control with the battery compartment open, showing the slots for two AAA batteries.

Text indicates "2*AAA Batteries" and "ABS & Plastic Material."

4.2. Initial Use (No Programming Required)

This remote control is designed for immediate use with compatible LG TVs. No programming, pairing, or complex setup is required. Once the batteries are correctly installed, the remote is ready to operate your television.



No Program
Or Setup Need



Image Description: The Angrox remote control shown with a text bubble stating "No Program Or Setup Need," indicating its plug-and-play functionality. Below, a family is shown watching TV, implying ease of use.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons and their functions for optimal control of your LG Smart TV.



 Turns the TV on and off.

LIST - Access the saved channels list

VOL+ - Adjusts the volume.

CH+ - Changes channels.

FAV- Access your favorite channel list.

MUTE - Cuts off the sound temporarily.

 Accesses the NETFLIX online service.

 Accesses the Amazon.

BACK - Return to the previous step.

EXIT - Exits the menu.

SLEEP - Accesses the sleep timer.

COLOR BUTTONS
(YELLOW/BLUE/RED/GREEN)

Image Description: A diagram of the Angrox remote control with labels pointing to various buttons and their corresponding functions, such as Power, Volume, Channel, Mute, Netflix, Amazon, Back, Exit, Sleep, and Color Buttons.

Button	Function
Power (Red Button)	Turns the TV on and off.
LIST	Accesses the saved channels list.
VOL+ / VOL-	Adjusts the volume up or down.
CH+ / CH-	Changes channels up or down.
FAV	Accesses your favorite channel list.
MUTE	Cuts off the sound temporarily.

Button	Function
Netflix (N Button)	Directly accesses the Netflix online service.
Amazon (P Button)	Directly accesses the Amazon Prime Video service.
BACK	Returns to the previous step or menu.
EXIT	Exits the current menu or application.
SLEEP	Accesses the sleep timer function.
Color Buttons (Yellow/Blue/Red/Green)	Perform various functions depending on the TV menu or application.
Navigation Pad (Up/Down/Left/Right/OK)	Navigates through menus and confirms selections.

6. MAINTENANCE

To ensure the longevity and optimal performance of your Angrox remote control, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** While durable, repeated drops can damage internal components. Handle the remote with care.
- **Liquid Exposure:** Keep the remote away from liquids. If liquid spills on the remote, remove batteries immediately and allow it to dry completely before reinserting them.

7. TROUBLESHOOTING

If you encounter issues with your remote control, try the following troubleshooting steps:

1. Remote Not Responding:

- Check if the batteries are inserted correctly with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Ensure there are no obstructions between the remote control and the TV's infrared receiver.
- Confirm you are within the effective operating range and have a clear line of sight to the TV.

2. Specific Buttons Not Working:

- Clean the remote control, especially around the non-functioning buttons, to remove any dirt or debris that might be preventing proper contact.
- Test other buttons to determine if the issue is isolated to specific buttons or the entire remote.

3. Intermittent Functionality:

- This could indicate low battery power. Replace the batteries.
- Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the infrared signal.

4. Remote Does Not Control TV:

- Verify that your TV model is listed as compatible with this remote control. While universal for many LG models, specific older or newer models might have different IR codes.

8. SPECIFICATIONS

Attribute	Detail
Brand	Angrox
Model Number	AH-5307
Product Dimensions	7.09 x 2.36 x 1.57 inches
Item Weight	2.08 ounces
Batteries Required	2 AAA batteries (not included)
Color	Black
Special Feature	Universal, Ergonomic, No Programming Required
Max Number of Supported Devices	1 (LG Television)
Manufacturer	Angror
Country of Origin	China
Date First Available	May 15, 2020








Image Description: Three views of the Angrox remote control (front, side, and back) with measurements indicating its dimensions: 6.69 inches in length, 1.77 inches in width, and 0.78 inches in thickness.

9. WARRANTY AND SUPPORT

For any product inquiries, technical support, or warranty information, please contact the manufacturer, Angrox. While specific warranty details are not provided in this manual, it is recommended to retain your purchase receipt for any potential warranty claims. You may also visit the [Angrox Store on Amazon](#) for additional product information and support resources.

Related Documents - AH-5307

	<p>Angrox Universal Remote Control for LG Smart TVs - User Guide</p> <p>Comprehensive user guide for the Angrox Universal Remote Control, compatible with all LG Smart TV models. Learn about specifications, setup, features, and FAQs.</p>
	<p>Sharp Split Type Room Air Conditioner Operation Manual</p> <p>This operation manual provides essential guidance for the proper use and maintenance of Sharp split type room air conditioners, covering operation, safety, parts, remote control, and troubleshooting.</p>
	<p>Sharp Split Type Room Air Conditioner Operation Manual</p> <p>This operation manual provides detailed instructions for using Sharp split type room air conditioners, covering basic operations, advanced features, safety precautions, and maintenance.</p>
	<p>Horing Lih Fire Alarm Systems and Detectors Catalog</p> <p>Explore Horing Lih's comprehensive range of fire alarm control panels, addressable and conventional detectors, sounders, beacons, manual call points, and suppression systems. This catalog provides detailed specifications and features for advanced fire safety solutions.</p>
	<p>Batribike TRIP Electric Bicycle Owner's Manual</p> <p>Comprehensive owner's manual for the Batribike TRIP electric bicycle, covering setup, operation, battery care, maintenance, troubleshooting, specifications, and warranty information. Learn how to use your e-bike safely and effectively.</p>



[CEAG Battery Cabinets: Mounting and Operating Instructions | Eaton](#)

Comprehensive guide to mounting, operating, and maintaining CEAG Battery Cabinets from Eaton. Covers technical specifications, safety, and installation for reliable power supply solutions.