

Airpro Slicer-parent

Airpro Slicer Shredder Attachment for Kitchenaid Stand Mixer User Manual

Model: Slicer-parent

INTRODUCTION

Thank you for choosing the Airpro Slicer Shredder Attachment for your Kitchenaid Stand Mixer. This attachment is designed to simplify your food preparation tasks, offering versatile slicing, shredding, and grating capabilities. Made from food-grade stainless steel and durable plastic, it features four interchangeable blades to handle a variety of ingredients efficiently.


This manual provides essential information on how to safely and effectively use and maintain your new attachment.

SETUP INSTRUCTIONS

Follow these steps to properly attach the slicer shredder to your Kitchenaid Stand Mixer:

1. Ensure your Kitchenaid Stand Mixer is turned off and unplugged.
2. Remove the attachment hub cover on the front of your stand mixer.
3. Insert the attachment housing into the power hub, ensuring the power shaft fits into the square socket.
4. Tighten the attachment hub knob clockwise until the attachment is securely fastened.
5. Select the desired blade and insert it into the housing, ensuring it clicks into place.
6. Place a bowl or container beneath the attachment to collect processed food.


SIMPLE INSTALLTION STEPS

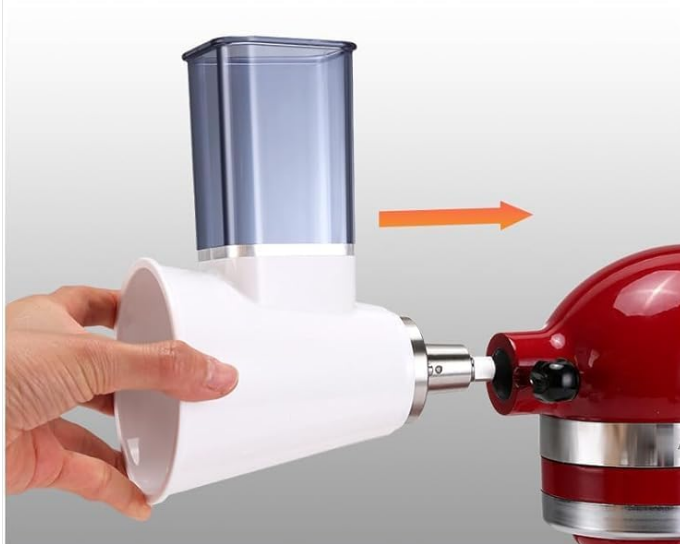

1 Insert the housing into hub



2 Tighten the attachment hub

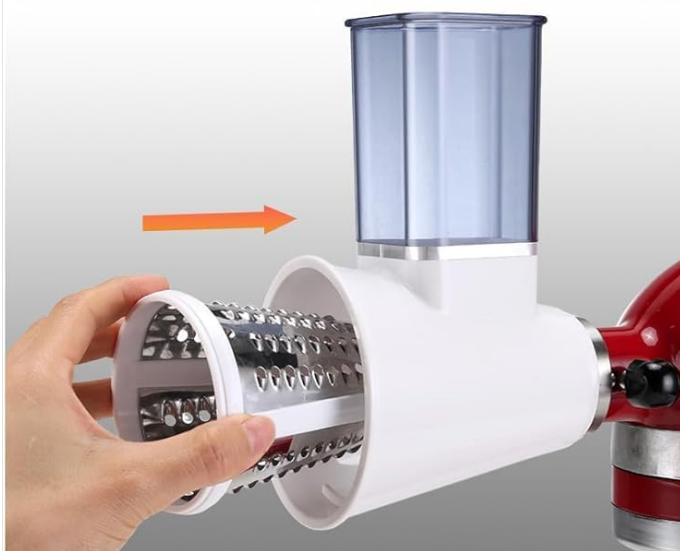

3 Install the blade into housing



4 Starting to process food

Image: Simple installation steps for the Airpro Slicer Shredder Attachment. Shows inserting the housing, tightening the hub, installing a blade, and starting to process food.

Your browser does not support the video tag.

Video: Demonstrates how to install the Airpro Shredder Attachment onto a Kitchenaid stand mixer. This video shows the process of attaching the main unit and inserting the blades.

OPERATING INSTRUCTIONS

Once the attachment is securely installed and a blade is in place, you can begin processing food:

1. Plug in your stand mixer and turn it to the recommended speed setting (usually low to medium for shredding/slicing).
2. Place food items into the food chute. For best results, cut larger items to fit the opening.
3. Use the food pusher to gently guide the food towards the rotating blade. **Never use your fingers or other utensils to push food into the chute.**
4. Processed food will exit through the front of the attachment into your collection bowl.

Blade Functions:

- **Slicing Blade:** Ideal for uniform slices of cucumbers, potatoes, carrots, and zucchini.
- **Fine Shredding Blade:** Perfect for finely shredded carrots, cabbage for coleslaw, or soft cheeses.
- **Coarse Shredding Blade:** Suitable for coarse shredding of hard cheeses, carrots, beets, and other firm vegetables.
- **Grinding Powder Blade:** Designed for grinding nuts, chocolate, or hard cheeses into a fine powder.



Image: Illustrates the four interchangeable blades (Grinding Powder, Slicing, Fine Shredding, Coarse Shredding) and examples of food processed by each, such as ground nuts, sliced cucumbers, shredded carrots, and grated cheese.



Image: Shows the main components of the attachment, including the housing, food pusher, and the four distinct blades (Grinding Powder, Coarse Grater, Slicing, Fine Blade).



It won't cut your hand



Image: Highlights the safety aspect of the attachment, showing it in use with cheese and cucumbers, with text indicating it prevents hand cuts.

Your browser does not support the video tag.

Video: Demonstrates cabbage slicing and shredding using the attachment, showcasing its efficiency for salad preparation.

Your browser does not support the video tag.

Video: Shows the slicer shredder attachment in action with a KitchenAid mixer, processing various ingredients.

Your browser does not support the video tag.

Video: A brief demonstration of the slicer shredder attachment's functionality.

CARE AND MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and performance of your Airpro Slicer Shredder Attachment.

Cleaning:

- All parts of this shredder attachment are dishwasher safe for convenient cleaning.
- The blades are designed with an inward-facing edge to minimize the risk of injury during cleaning.
- For hand washing, use warm, soapy water and a brush to remove any food residue. Ensure all parts are thoroughly dried after washing to prevent water spots or corrosion.

DISHWASHER SAFE



Image: The attachment and its blades are shown submerged in water, emphasizing that they are dishwasher safe.

Stain Removal:

- If carrot coloring or other food stains occur on the plastic components, apply a small amount of toothpaste to the stained area.
- Spread the toothpaste well and then scrub with a brush. Rinse thoroughly.

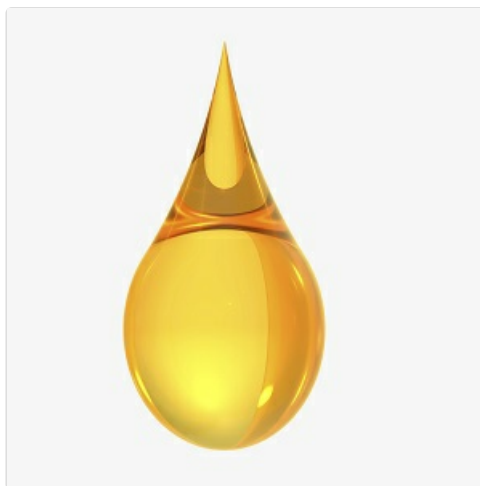


Image: Demonstrates how to clean a stained slicer shredder attachment using a drop of edible oil, which can help remove stubborn food coloring.

TROUBLESHOOTING

If you encounter any issues while using your Airpro Slicer Shredder Attachment, please refer to the following common solutions:

- **Attachment not fitting securely:** Ensure the attachment is fully inserted into the power hub and the hub knob is tightened completely. Check for any obstructions in the hub.
- **Food not processing efficiently:** Verify that the correct blade is installed for the type of food and desired cut. Ensure the stand mixer is set to an appropriate speed. Do not overload the chute; feed food gradually.
- **Food getting stuck:** Make sure food items are cut to a size that fits comfortably in the chute. Use the food pusher consistently and with gentle pressure.
- **Excessive vibration or noise:** Confirm the attachment is properly secured to the mixer. Reduce the speed setting if necessary.

If the problem persists, please contact customer service for further assistance.

PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Airpro
Model Number	Slicer-parent
Product Dimensions	5"L x 9"W x 10"H
Material	Stainless Steel, Plastic
Blade Material	Stainless Steel
Item Weight	1.7 pounds
Included Components	Housing, Food Pusher, 4 Interchangeable Blades
Care Instructions	Dishwasher Safe
UPC	718893614050

WARRANTY AND CUSTOMER SUPPORT

Airpro stands behind the quality of its products. Your Slicer Shredder Attachment comes with a **365-day warranty** from the date of purchase.

For any questions, concerns, or warranty claims, our customer service team is available **24 hours** to assist you. Please refer to the contact information provided with your product packaging or visit the official Airpro website for support details.

© 2026 Airpro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question