

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Casio](#) /

› [Casio CDP-S150 Compact Digital Piano User Manual](#)

## Casio CDP-S150

# Casio CDP-S150 Compact Digital Piano User Manual

Model: CDP-S150

## INTRODUCTION

The Casio CDP-S150 is a compact digital piano designed to offer a grand piano sound and feel in a small space. It features an 88-key Scaled Hammer Action keyboard, 64-note polyphony, and 10 high-quality built-in tones. This manual provides essential information for setting up, operating, and maintaining your instrument.

## WHAT'S IN THE Box

Upon unpacking your Casio CDP-S150, please ensure all the following items are present:

- Casio CDP-S150 Digital Piano
- Power Supply (AC Adaptor)
- Music Rest
- Sustain Pedal
- User Manual (this document)

## SETUP

### 1. Piano Placement

Place the digital piano on a stable, flat surface or a compatible keyboard stand. Ensure there is adequate space around the instrument for comfortable playing and access to connections.

### 2. Attaching the Music Rest

Insert the music rest into the designated slots on the top panel of the piano. Ensure it is securely in place to hold your sheet music or smart device.

### 3. Connecting the Sustain Pedal

Locate the sustain pedal jack on the rear panel of the piano. Insert the plug of the included sustain pedal firmly into this jack. The sustain pedal allows for expressive control over note decay.

### 4. Connecting Power

Connect the included AC adaptor to the DC 12V jack on the rear panel of the piano. Plug the other end of the AC adaptor into a standard wall outlet. The power indicator LED will illuminate when the piano is powered on.

## 5. Connecting Headphones (Optional)

For private practice, connect standard stereo headphones to the PHONES/OUTPUT jack on the rear panel. This will mute the internal speakers.

## 6. USB MIDI Connection (Optional)

The CDP-S150 features Class Compliant USB MIDI. Connect a USB cable (Type B to Type A, not included) from the piano's USB port to your computer. This allows the piano to function as a MIDI controller for music software.



Image: Casio CDP-S150 Digital Piano set up on a stand with the music rest attached.

# OPERATING THE PIANO

## 1. Power On/Off

Press and hold the **[POWER]** button located on the left side of the top panel to turn the piano on or off. The power indicator LED will show the status.

## 2. Adjusting Volume

Use the **[VOLUME]** knob on the top panel to adjust the overall output volume of the piano. Turn clockwise to increase volume, counter-clockwise to decrease.

## 3. Changing Tones

The CDP-S150 includes 10 built-in tones. To select a tone:

1. Press the **[FUNCTION]** button.
2. While holding **[FUNCTION]**, press one of the keys labeled with a tone name (e.g., GRAND PIANO, E.PIANO, ORGAN, STRINGS).

The selected tone will be active. Refer to the full manual for a complete list of tones and their corresponding keys.

## 4. Metronome Function

The built-in metronome is useful for practicing rhythm and timing.

- To turn the metronome on/off: Press the **[METRONOME]** button.
- To adjust tempo: While holding **[FUNCTION]**, use the **[TEMPO]** keys (usually +/- keys) to increase or decrease the tempo.
- To adjust beat: While holding **[FUNCTION]**, use the **[BEAT]** keys to change the time signature.

## 5. Using the Chordana Play App

The Casio CDP-S150 is compatible with the Chordana Play for Piano app. Connect your smart device via USB MIDI

to access various features, including:

- Piano Roll display for learning songs.
- MIDI recorder/player.
- Remote control of piano functions.

Download the Chordana Play for Piano app from your device's app store and follow the in-app instructions for connection and usage.

Your browser does not support the video tag.

Video: Casio MI demonstrates the performance capabilities of the CDP-S150 Digital Piano, showcasing its sound quality and key action.

Your browser does not support the video tag.

Video: A detailed demo and review of the Casio CDP-S150, highlighting its features and sound for potential users.

## MAINTENANCE

### 1. Cleaning

Wipe the piano's surface with a soft, dry cloth. For stubborn dirt, use a cloth lightly dampened with water and a mild, neutral detergent, then wipe dry immediately. Avoid using abrasive cleaners, solvents, or polishes as they can damage the finish.

### 2. Storage

When not in use, store the piano in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Covering the keyboard with a dust cover (not included) can help protect it from dust and debris.

### 3. General Care

Avoid placing heavy objects on the piano. Do not expose the instrument to excessive force or impact. Keep liquids away from the piano to prevent damage to internal components.

## TROUBLESHOOTING

If you encounter any issues with your Casio CDP-S150, please refer to the following common troubleshooting tips:

Problem	Possible Cause	Solution
No sound from speakers/headphones	Volume too low; headphones connected; AC adaptor not properly connected.	Increase volume; disconnect headphones; check AC adaptor connection.
Keys not responding or incorrect sound	Incorrect tone selected; MIDI settings interfering.	Select desired tone; check MIDI software settings if connected to a computer.
Metronome not working	Metronome turned off; volume too low.	Press [METRONOME] button; increase volume.

For more detailed troubleshooting or issues not listed here, please consult the comprehensive user manual provided with your product or contact Casio customer support.

## SPECIFICATIONS

Feature	Description
Model Name	CDP-S150
Number of Keys	88
Key Action	Scaled Hammer Action Keyboard
Polyphony	64 notes
Built-in Tones	10
Connectivity	USB (Type B), Headphones (Stereo Mini), Sustain Pedal
Supported Software	Chordana Play App for Piano
Power Source	AC Adaptor (included)
Dimensions (W x D x H)	52.05 x 9.13 x 3.9 inches
Item Weight	23.2 pounds
Color	Black

## WARRANTY AND SUPPORT

---

Your Casio CDP-S150 Digital Piano is covered by a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions.

For technical support, service, or additional product information, please visit the official Casio website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.