

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Bomann](#) /

› [Bomann GS7326-1 194L Upright Freezer User Manual](#)

Bomann GS7326-1

Bomann GS7326-1 194L Upright Freezer User Manual

Model: GS7326-1 | Brand: Bomann

[Introduction](#) [Safety Instructions](#) [Setup](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#)
[Specifications](#) [Warranty](#) [Support](#)

1. INTRODUCTION

Thank you for choosing the Bomann GS7326-1 194L Upright Freezer. This manual provides essential information for the safe and efficient use of your appliance. Please read it thoroughly before installation and operation, and keep it for future reference.

The Bomann GS7326-1 is a freestanding upright freezer with a generous 194-liter capacity, designed for optimal food preservation. It features Total No Frost technology, a MultiAirflow system for even cooling, an LED display for temperature control, and a door open alarm for enhanced safety and convenience.

2. SAFETY INSTRUCTIONS

General Safety:

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments unless they are of the type recommended by the manufacturer.
- Unplug the appliance before cleaning or maintenance.
- Keep ventilation openings clear of obstruction.
- This appliance is intended for household use only.

Children's Safety:

- Children should be supervised to ensure they do not play with the appliance.
- Keep packaging materials away from children.

3. SETUP AND INSTALLATION

3.1 Unpacking:

Carefully remove all packaging materials. Inspect the freezer for any damage incurred during transport. Report any damage to your retailer immediately.

3.2 Placement:

Place the freezer on a firm, level surface away from direct sunlight, heat sources (like ovens or radiators), and extreme cold. Ensure adequate ventilation around the appliance. The climate class N-ST indicates it is suitable for ambient temperatures between 16°C and 38°C.

Dimensions:

Depth: 61.4 cm

Width: 55 cm

Height: 169.1 cm



Image: The Bomann GS7326-1 freezer showing its dimensions (61.4 cm depth, 55 cm width, 169.1 cm height) and key features like MultiAirflow, Fast Freeze, and Acoustic Alarm.

3.3 Leveling:

Use the adjustable feet at the bottom of the appliance to ensure it is perfectly level. This is crucial for proper door sealing and to prevent resistance when opening or closing the door.

3.4 Door Reversibility:

The door hinge is reversible, allowing you to change the door opening direction from right to left, or vice versa, to

suit your kitchen layout. Refer to the detailed instructions in the full manual for this procedure.

WECHSELBARER TÜRANSCHLAG

für mehr Flexibilität und wenig Platzverbrauch



Image: A diagram demonstrating the reversible door hinge feature, showing the option to open the door from either the left or the right side.

3.5 Initial Power-On:

After positioning and leveling the freezer, wait at least 2-4 hours before plugging it into the power outlet. This allows the refrigerant to settle. Once plugged in, set the desired temperature using the control panel.

4. OPERATING INSTRUCTIONS

4.1 Temperature Control (LED Display):

The freezer is equipped with an LED display that allows you to monitor and adjust the internal temperature. Use the controls to set your desired freezing temperature. The recommended temperature for optimal food preservation is typically -18°C.



EFFIZIENT & NACHHALTIG

Image: The interior of the Bomann GS7326-1 freezer, highlighting the LED display for temperature and alarm, the No Frost feature, and its Energy Class E rating.

4.2 Total No Frost System:

This freezer features a Total No Frost system, which prevents ice buildup in the freezer compartment. A pulsating air system absorbs moisture, eliminating the need for manual defrosting. This saves time, effort, and energy.

4.3 MultiAirflow System:

Internal fans ensure optimal air circulation and uniform cooling throughout the freezer. This system maintains a consistent temperature across all compartments, ensuring your food is frozen evenly.

4.4 Fast Freeze Function:

Utilize the Fast Freeze function when adding a large quantity of fresh food to the freezer. This rapidly lowers the temperature to quickly freeze new items, preserving their quality and nutrients. The freezer has a freezing capacity of 15 kg per 24 hours.

4.5 Storage:

The freezer provides 194 liters of storage capacity, organized with 5 transparent drawers and a freezer flap. This flexible storage allows for easy organization and access to your frozen goods.



Image: The interior of the Bönnann GS7326-1 freezer with its door open, clearly showing the five transparent storage drawers for organizing frozen items.

4.6 Acoustic Door Alarm:

For added safety and energy efficiency, the freezer is equipped with an acoustic alarm that sounds if the door is left open for too long.

4.7 Quiet Operation:

The Bönnann GS7326-1 operates at a low noise level of 41 dB, comparable to a quiet residential street at night,

ensuring minimal disturbance in your home.



INKL. 5 GEFRIERSCHUBLADEN

und einer Gefrierfachklappe für eine flexible Lagerung



Image: An illustration emphasizing the quiet operation of the BOMANN GS7326-1 freezer, rated at 41 dB, and highlighting its 5 freezer drawers and 4-star rating.

5. MAINTENANCE AND CLEANING

5.1 Cleaning the Interior:

Before cleaning, always unplug the appliance. Clean the interior regularly with a soft cloth dampened with a solution of mild detergent and warm water. Rinse with clean water and dry thoroughly. Do not use abrasive cleaners or sharp objects.

5.2 Cleaning the Exterior:

Wipe the exterior surfaces with a soft, damp cloth. For stubborn marks, use a mild detergent. Ensure no water enters the electrical components.

5.3 Defrosting:

Thanks to the Total No Frost system, manual defrosting of the freezer compartment is not required. If ice does form due to prolonged door opening or high humidity, it will be automatically managed by the system.

5.4 Power Outage:

In the event of a power outage, the freezer can maintain the temperature for up to 11 hours, provided the door

remains closed. Avoid opening the door unnecessarily during a power failure to preserve the internal temperature.

6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues:

- Freezer not operating:** Check if the power cord is properly plugged in and if there is power to the outlet.
- Temperature is not cold enough:** Ensure the door is closed properly. Check if the temperature setting is too high. Avoid placing hot food directly into the freezer.
- Door open alarm sounds:** Close the door completely. Check for any obstructions preventing the door from sealing properly.
- Excessive noise:** Ensure the freezer is level and not touching any walls or other appliances.
- Water on the floor:** Check the drain pan (if applicable) and ensure it is correctly positioned and not overflowing.

If the problem persists after checking these points, please refer to the full user manual or contact customer support.

7. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Bomann
Model Number	GS7326-1 (773260)
Capacity	194 Liters
Annual Energy Consumption	219 kWh
Noise Level	41 dB
Dimensions (D x W x H)	61.4 x 55 x 169.1 cm
Weight	54 kg
Climate Class	N-ST (16°C to 38°C)
Star Rating	4-star
Power Outage Autonomy	11 hours
Freezing Capacity	15 kg/24 hours
Defrosting Type	Frost-free (Total No Frost)
Door Hinge	Reversible
Voltage	240 V
Wattage	100 W
Number of Drawers	5
Special Features	Door open safety alarm, adjustable feet, transport wheels, ice cube tray

8. WARRANTY INFORMATION

Your Bomann GS7326-1 freezer comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

For further assistance, technical support, or spare parts, please contact Bomann customer service. You can typically find contact information on the Bomann official website or in the full printed manual that came with your appliance.

Online Resources: Visit the official Bomann website for FAQs, product registration, and additional support documents.

© 2023 Bomann. All rights reserved. This manual is for informational purposes only.