



Manuals.plus /

- › **Beko** /
- › Beko HBA7608W Hand Blender User Manual

Beko HBA7608W

Beko HBA7608W Hand Blender User Manual

Model: HBA7608W

1. INTRODUCTION

Thank you for choosing the Beko HBA7608W Hand Blender. This versatile appliance is designed to simplify your kitchen tasks, offering powerful blending, chopping, and whisking capabilities. With its 700W motor, 12 adjustable speeds, and turbo function, it's perfect for preparing creamy purees, sauces, creams, minced meat, dried fruits, and various vegetables. Please read this manual carefully before use to ensure safe and optimal performance.



Figure 1: Beko HBA7608W Hand Blender and its accessories.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not immerse the motor unit in water or other liquids. Clean with a damp cloth only.
- Keep hands, hair, clothing, as well as spatulas and other utensils away from moving blades during operation to prevent injury and/or damage to the appliance.
- Blades are sharp. Handle with care.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- Use only attachments/accessories specified by the manufacturer.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon opening the package:

- Hand Blender Motor Unit (700W)
- Stainless Steel Blending Shaft with 4 blades
- Chopper Attachment with double blades
- Double Whisk Attachment
- Measuring Cup (900 ml plastic)
- Instruction Manual

4. SETUP AND ASSEMBLY

Before first use, clean all parts that will come into contact with food. Refer to the "Maintenance and Cleaning" section for detailed instructions.

4.1. Assembling the Blending Shaft

1. Align the blending shaft with the motor unit.
2. Twist the blending shaft clockwise until it locks securely into place.
3. To detach, twist counter-clockwise and pull apart.



Figure 2: Stainless steel blending shaft with 4 blades.

4.2. Assembling the Chopper Attachment

1. Place the double blade assembly onto the central pin inside the chopper bowl.
2. Place the chopper lid onto the chopper bowl, ensuring it fits snugly.
3. Attach the motor unit to the chopper lid by aligning and twisting clockwise until it locks.

4.3. Assembling the Whisk Attachment

1. Insert the double whisks into the whisk gear box.
2. Attach the whisk gear box to the motor unit by aligning and twisting clockwise until it locks.

5. OPERATING INSTRUCTIONS

Ensure the appliance is properly assembled and plugged into a suitable power outlet (220-240V, 50-60Hz).

5.1. Speed Control and Turbo Function

The Beko HBA7608W features 12 adjustable speeds and a turbo function for optimal control over your blending tasks.

- **Adjustable Speed:** Rotate the speed dial on the top of the motor unit to select your desired speed from 1 to 12.
- **Power Button:** Press and hold the main power button (marked with 'I') to operate the blender at the selected speed.
- **Turbo Function:** For maximum power and quick results, press and hold the "turbo" button. This will activate the highest speed regardless of the dial setting.





Figure 3: Power and Turbo buttons on the motor unit.



Figure 4: Speed dial and Turbo button detail.

5.2. Using the Hand Blender

1. Attach the blending shaft to the motor unit.
2. Immerse the blending shaft into the ingredients. Ensure the blades are fully submerged.
3. Press and hold the power button or turbo button to start blending.
4. Move the blender up and down gently to ensure even blending.
5. Release the button to stop.
6. **Note:** Do not operate continuously for more than 3 minutes. Allow the appliance to cool down before resuming.

5.3. Using the Chopper Attachment

1. Place ingredients into the chopper bowl. Do not overfill.
2. Assemble the chopper attachment as described in Section 4.2.
3. Press and hold the power button or turbo button in short pulses until desired consistency is achieved.
4. Release the button to stop.

5.4. Using the Whisk Attachment

1. Assemble the whisk attachment as described in Section 4.3.
2. Place the whisks into the ingredients (e.g., egg whites, cream).
3. Press and hold the power button or turbo button to start whisking.
4. Move the whisk gently to incorporate air.
5. Release the button to stop.

6. MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your appliance.

- Always unplug the appliance before cleaning.
- **Motor Unit:** Wipe the motor unit with a damp cloth. Never immerse it in water or any other liquid.
- **Blending Shaft, Chopper Blades, Whisk Attachment, Measuring Cup, Chopper Bowl:** These parts are detachable and can be washed in warm soapy water or placed in the dishwasher (top rack recommended for plastic parts).
- **Caution:** The blades are very sharp. Handle with extreme care during cleaning.
- Dry all parts thoroughly before storing.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; motor unit not properly attached to accessory.	Check power cord connection; test outlet with another appliance; ensure motor unit is securely locked onto the attachment.
Motor runs, but blades do not move.	Attachment not properly assembled or locked.	Re-assemble the attachment, ensuring it is securely locked into the motor unit.
Appliance stops during operation.	Overheating due to continuous use or processing too hard ingredients; food blockage.	Unplug and let cool for 15-20 minutes. Reduce load or cut ingredients into smaller pieces. Clear any blockages.
Poor blending/chopping results.	Too much or too little liquid; ingredients too large; dull blades.	Adjust liquid amount; cut ingredients smaller; ensure blades are clean and sharp.

8. SPECIFICATIONS

Feature	Detail
Brand	Beko
Model Number	HBA7608W
Power	700 W
Voltage	220-240 V
Frequency	50-60 Hz
Number of Speeds	12 (Adjustable)
Special Functions	Turbo function
Blending Shaft Material	Stainless Steel with 4 blades
Measuring Cup Capacity	900 ml (plastic)
Dimensions (Product)	7.5 x 7.5 x 42.2 cm (approx.)
Weight (Product)	3.74 kg (approx.)
Maximum Continuous Operation	3 minutes

9. WARRANTY AND SUPPORT

Beko products are manufactured to the highest standards and come with a manufacturer's warranty. For detailed warranty information, please refer to the warranty card included with your product or visit the official Beko website.

If you encounter any issues or require technical assistance, please contact Beko Customer Service. You can find contact details on the official Beko website or on your product's packaging.

- **Online Support:** Visit www.beko.com for FAQs, troubleshooting guides, and contact information.
- **Phone Support:** Refer to your local Beko website or warranty documentation for regional contact numbers.