

KODAK CAR-C210RY

KODAK Mini Shot 2 Retro 4PASS 2-in-1 Instant Digital Camera and Photo Printer Instruction Manual

Model: CAR-C210RY | Brand: KODAK

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your KODAK Mini Shot 2 Retro 4PASS 2-in-1 Instant Digital Camera and Photo Printer. Please read it thoroughly before using the device to ensure optimal performance and longevity.

1.1 Key Features

- **Instant Camera + Photo Printer:** The KODAK Mini Shot 2 Retro functions as both a digital camera and a built-in photo printer. You can capture images and choose to print them immediately or discard them.
- **Smartphone Connectivity:** Print 2.1x3.4 inch photos directly from your mobile device's gallery via Bluetooth. Compatible with Apple iPhone, iPad, and Android devices.
- **4PASS Technology:** Utilizes 4PASS technology for high-quality, laminated photos that are protected against fingerprints and water, designed to last over 100 years.
- **Two Photo Types:** Offers options to print both bordered and borderless pictures. Bordered photos allow space for notes, while borderless photos provide a larger image area.
- **KODAK Photo Printer Application:** Download the dedicated app for additional features such as filters, frames, and editing tools to enhance your photos before printing.

2. SETUP

2.1 What's in the Box

Verify that all components are present in your package:

- KODAK Mini Shot 2 Retro Camera

- Initial Photo Paper Cartridge (8 sheets)
- Additional Photo Paper Sheets (60 sheets)
- USB-C Type Charging Cable
- Wrist Strap
- User Guide



KODAK Mini Shot
(initial 8 sheets of Photo Paper)



Additional 30 sheets



KODAK Mini Shot
Get more with us

Image: Contents of the KODAK Mini Shot 2 Retro package.

2.2 Charging the Device

Before first use, fully charge your KODAK Mini Shot 2 Retro using the provided USB-C cable. Connect the cable to the device's charging port and a compatible USB power source. The charging indicator light will show the charging status.

2.3 Loading Photo Paper

To load photo paper into your device:

1. Open the paper cartridge compartment on the side of the camera.
2. Insert a new KODAK 2.1"x3.4" Instant Print Cartridge into the compartment. Ensure it clicks into place.
3. Close the compartment cover securely.

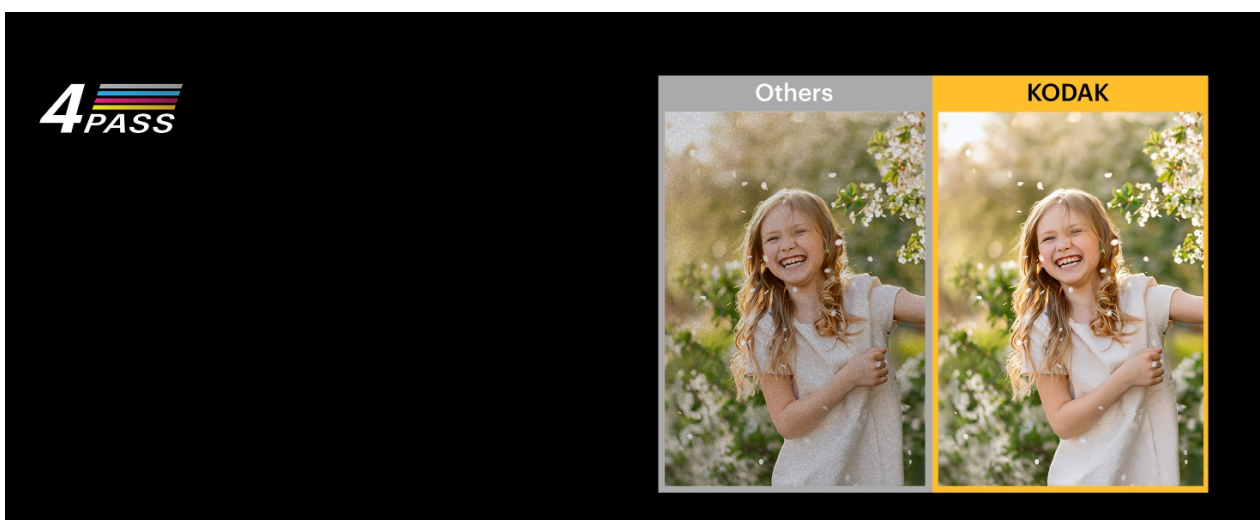


Image: Instructions for inserting the photo paper cartridge.

3. OPERATING INSTRUCTIONS

3.1 Taking Photos with the Camera

The KODAK Mini Shot 2 Retro allows you to capture digital images and preview them before printing.

1. Turn on the camera using the power button.
2. Frame your shot using the viewfinder or the small LCD screen on the back.
3. Press the shutter button to take a photo.
4. Review the image on the LCD screen. You can choose to print, delete, or retake the photo.



Image: Previewing a photo on the camera's screen before printing.

3.2 Printing Photos from the Camera

After capturing an image, you can print it directly from the camera:

1. After reviewing your photo on the LCD screen, select the print option.
2. The camera will use 4PASS technology to print the image in layers (Yellow, Magenta, Cyan, and a protective laminate).
3. The printed photo will emerge from the side slot.



Immagini dalla qualità superiore



Image: The 4PASS printing process in action.

3.3 Printing Photos from a Smartphone

You can also print photos stored on your smartphone using the KODAK Photo Printer application.

1. Download and install the KODAK Photo Printer app from your device's app store.
2. Ensure Bluetooth is enabled on your smartphone and the KODAK Mini Shot 2 Retro.
3. Open the app and connect to your camera via Bluetooth.
4. Select a photo from your phone's gallery within the app.
5. Use the app's editing features (filters, frames, etc.) if desired.
6. Initiate printing from the app. The photo will be sent to the camera and printed.



Image: Printing a photo from a smartphone using the KODAK Photo Printer app.

3.4 Photo Types: Bordered and Borderless

The camera supports two types of photo prints:

- **Bordered:** Prints with a white border around the image, ideal for writing notes or dates.
- **Borderless:** Prints the image to the edge of the paper, providing a larger visual area.

Due tipi di foto, doppio divertimento!

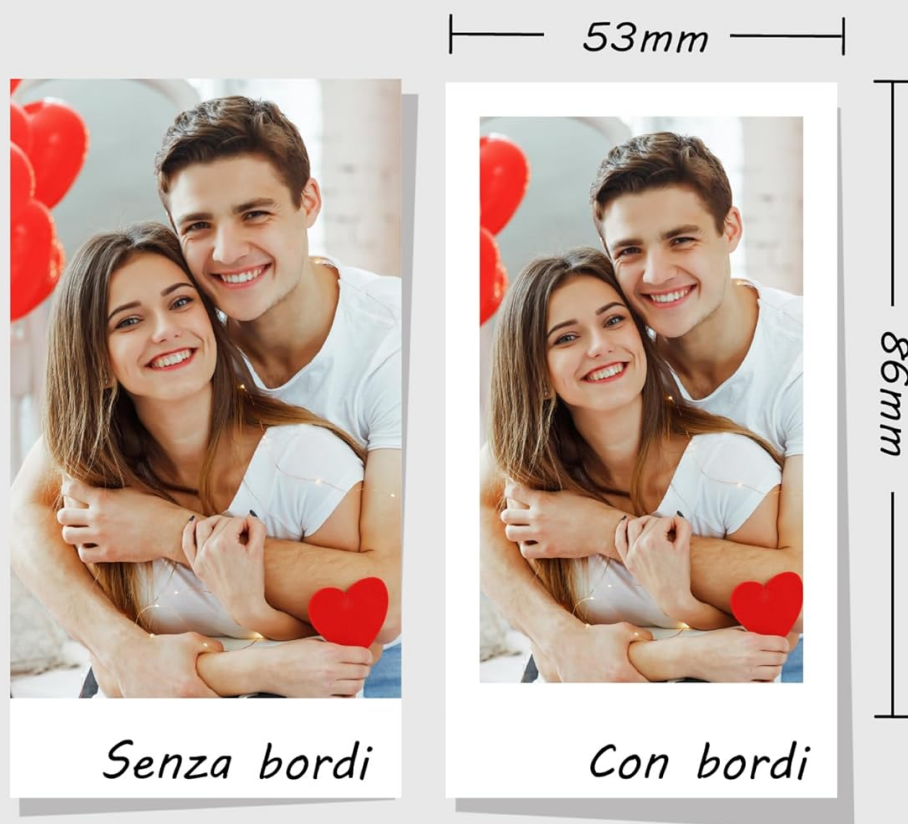


Image: Examples of bordered and borderless prints.

3.5 Official Product Videos

Your browser does not support the video tag.

Video: An overview of the KODAK Mini Shot 2 Retro camera and its features, including instant printing and smartphone connectivity.

Your browser does not support the video tag.

Video: A demonstration of the KODAK Mini Shot 2 Retro camera and printer in use, highlighting its instant photo capabilities.

4. MAINTENANCE

4.1 Cleaning the Device

To maintain optimal performance, keep your camera and printer clean. Use a soft, dry cloth to wipe the exterior. Avoid using liquid cleaners or solvents, as they may damage the device.

4.2 Storage

Store the KODAK Mini Shot 2 Retro in a cool, dry place away from direct sunlight and extreme temperatures.

When not in use for extended periods, ensure the device is fully charged before storage and periodically recharge it to preserve battery life.

5. TROUBLESHOOTING

If you encounter issues with your KODAK Mini Shot 2 Retro, refer to the following common solutions:

- **Device not turning on:** Ensure the battery is charged. Connect the device to a power source using the USB-C cable.
- **Photos not printing:** Check if the paper cartridge is correctly inserted and contains enough photo paper. Ensure the device is not low on battery.
- **Poor print quality:** Verify that you are using genuine KODAK 4PASS photo paper. Ensure the lens is clean and free of smudges.
- **Cannot connect to smartphone:** Make sure Bluetooth is enabled on both devices and that the KODAK Photo Printer app is open and attempting to connect. Restart both devices if necessary.
- **App not functioning correctly:** Ensure your KODAK Photo Printer app is updated to the latest version. Try restarting the app or reinstalling it.

For further assistance, consult the KODAK Photo Printer application or the official KODAK support website.






6. SPECIFICATIONS

Feature	Detail
Model Name	Kodak Mini Shot 2 Retro
Item Model Number	CAR-C210RY
Brand	KODAK
Manufacturer	Prinics Co., Ltd.
Product Dimensions	6.42 x 6.06 x 4.57 inches
Item Weight	1.54 pounds (700 Grams)
Batteries	1 Lithium Metal battery required (included)
Special Feature	Built-in Flash
Film Format Type	Instant (2.1 x 3.4 inches)
Compatible Devices	Smartphone
Max Shutter Speed	1s

7. WARRANTY AND SUPPORT

For detailed warranty information, please refer to the documentation included with your product or visit the official KODAK Photo Printer website. For technical support, troubleshooting, and frequently asked questions, utilize the KODAK Photo Printer application or contact KODAK customer service directly.

Related Documents - CAR-C210RY

	<p>Kodak Mini Shot 3 Retro Instant Camera and Photo Printer User Manual</p> <p>Comprehensive user manual for the Kodak Mini Shot 3 Retro and Mini Shot 2 Retro instant camera and photo printers, detailing features, operation, and troubleshooting.</p>
	<p>Kodak Mini Shot 3 Retro User Manual</p> <p>User manual for the Kodak Mini Shot 3 Retro 2-in-1 portable wireless instant camera and photo printer. Includes instructions on setup, printing, and maintenance.</p>
	<p>Kodak STEP Instant Mobile Photo Printer Quick Start Guide</p> <p>Get started quickly with your Kodak STEP Instant Mobile Photo Printer. This guide covers setup, pairing, charging, and safety precautions for seamless photo printing.</p>
	<p>Kodak Step Instant Mobile Photo Printer Quick Start Guide</p> <p>Get started quickly with the Kodak Step Instant Mobile Photo Printer. This guide covers setup, charging, app connection via Bluetooth, and safety precautions.</p>
	<p>KODAK Mini 2 Instant Photo Printer User Guide</p> <p>User guide for the KODAK Mini 2 Instant Photo Printer, covering smartphone app installation (Android and iOS), NFC and Bluetooth connection methods, printing process, important notes, troubleshooting, status indicators, and FCC compliance information.</p>



[KODAK Mini Shot 2 Era & Mini Shot 3 Era Instant Camera and Photo Printer MS200/MS300 User Guide](#)

User guide for the KODAK Mini Shot 2 Era and Mini Shot 3 Era instant camera and photo printers (MS200/MS300). This guide covers setup, Bluetooth connection, photo printing, and warranty information.