

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [KODAK](#) /

> [KODAK Dock Plus 4PASS Instant Photo Printer, 4x6 inches, 90 Sheets Bundle Printer + 90 Sheets](#)

KODAK CAR-PD460Y

KODAK Dock Plus 4PASS Instant Photo Printer User Manual

Model: CAR-PD460Y

INTRODUCTION

Welcome to the KODAK Dock Plus 4PASS Instant Photo Printer user manual. This guide provides essential information for setting up, operating, and maintaining your new photo printer. Designed for ease of use, the KODAK Dock Plus allows you to print high-quality 4x6 inch photos directly from your smartphone or tablet, preserving your memories with vibrant colors and lasting durability.



Image: KODAK Dock Plus printer in use, showcasing its compact design and direct printing capability.

SETUP

What's in the Box

Before you begin, ensure all components are present in the package:

- KODAK Dock Plus Photo Printer
- Paper Tray
- Initial Ink Cartridge + 10 sheets of photo paper
- Power Adapter
- Power Cord
- Lightning Adapter (for Apple devices)

KODAK

The **Essential** Cartridge Bundle for Your Kodak Moments



- | | | |
|---------------------------------------|---------------------|----------------------|
| ① 80 sheets
+ Ink Cartridge Refill | ③ Power Adapter | ⑥ Paper Tray |
| ② Initial Ink Cartridge + 10 sheets | ④ Power Cord | ⑦ Printer |
| | ⑤ Lightning Adapter | ⑧ Quick Start Manual |

Image: A visual representation of all items included in the KODAK Dock Plus package.

Loading Paper and Cartridge

1. Open the paper tray cover.
2. Insert the photo paper into the tray with the glossy side facing up. Ensure the KODAK logo on the back of the paper is facing down. You can load up to 20 sheets at a time.
3. Gently slide the paper tray into the printer until it clicks into place.
4. Open the cartridge cover on the side of the printer.
5. Insert the ink cartridge into the slot, ensuring it is oriented correctly, and push until it locks. Close the cartridge cover.

Connecting to Your Device

The KODAK Dock Plus offers both direct docking and Bluetooth connectivity.

- **Direct Docking:** For compatible Apple devices, simply connect your iPhone or iPad to the Lightning adapter on the printer's dock. This also charges your device while printing.
- **Bluetooth Connection:** For Android devices or wireless printing from Apple devices, ensure Bluetooth is enabled on your smartphone/tablet. Download the 'KODAK Photo Printer' app from your device's app store. Open the app and follow the on-screen instructions to pair with your printer.

Dock Printer

Bluetooth Printer

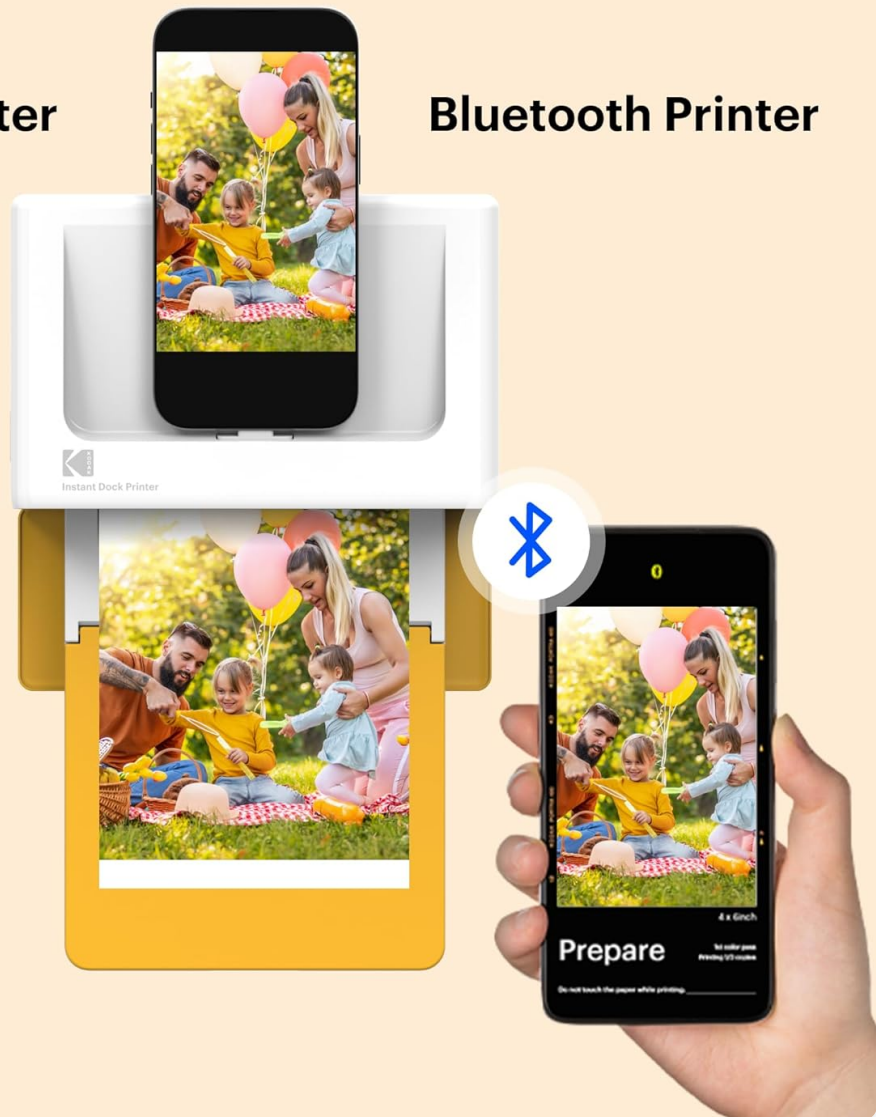


Image: Illustration of how to connect a smartphone via direct dock or Bluetooth to the printer.

OPERATING

Printing Process

Once your device is connected and paper/cartridge are loaded, you can begin printing:

1. Open the 'KODAK Photo Printer' app on your device.
2. Select the photo(s) you wish to print from your gallery.
3. Utilize the app's editing features to adjust your photo as desired (e.g., crop, filters).
4. Choose your preferred photo type: **Border** or **Borderless**.
5. Tap the 'Print' button. The printer will process the image and print it in multiple passes (Yellow, Magenta, Cyan, and a protective laminate layer). Do not touch the paper during this process.

Print memories, Save phone battery!



Image: The KODAK Dock Plus printer simultaneously charging a smartphone and printing a photo.

Photo Types and Quality

The KODAK Dock Plus uses 4PASS Dye Sublimation technology to ensure superior image quality. This process applies colors in layers (Yellow, Magenta, Cyan) and finishes with a protective laminate, making photos fingerprint-proof, water-resistant, and long-lasting.

- **Border Photos:** These prints include a white border, allowing space for notes or a classic look.
- **Borderless Photos:** These prints extend to the edge of the paper, maximizing the image area.



Image: Two 4x6 inch photos demonstrating the difference between borderless and bordered prints.

4 **PASS Superior Image Quality**



Image: A visual breakdown of the 4PASS printing process, showing individual color layers.

4PASS Superior Image Quality



Image: A comparison illustrating the enhanced clarity and color vibrancy of 4PASS prints.

MAINTENANCE

Cleaning

To ensure optimal print quality and prolong the life of your printer, regular cleaning is recommended:

- Gently wipe the exterior of the printer with a soft, dry cloth.
- Avoid using liquid cleaners or abrasive materials, as they may damage the surface.
- Periodically check the paper path for any dust or debris and carefully remove it.

Cartridge Replacement

The printer uses an integrated ink cartridge and paper system. When the ink or paper runs out, you will need to replace the cartridge. The KODAK Photo Printer app will notify you when a cartridge change is needed.

1. Open the cartridge cover on the side of the printer.
2. Carefully pull out the empty cartridge.
3. Unpack a new KODAK 4PASS Photo Printer cartridge.
4. Insert the new cartridge firmly into the slot until it clicks into place.

5. Close the cartridge cover.

TROUBLESHOOTING

If you encounter any issues with your KODAK Dock Plus printer, refer to the following common troubleshooting tips:

- **Printer Not Connecting:** Ensure Bluetooth is enabled on your device and the printer is powered on. Try restarting both the printer and your device. Verify the 'KODAK Photo Printer' app is up to date.
- **Poor Print Quality:** Check if the ink cartridge needs replacement. Ensure the photo paper is loaded correctly with the glossy side up. Clean the printer's paper path if there is any visible dust or debris.
- **Paper Jams:** Gently pull out the paper tray and remove any jammed paper. Ensure you are not overloading the paper tray (max 20 sheets).
- **Printer Overheating:** If the printer indicates overheating, allow it to cool down for a period before resuming printing. Avoid continuous large print jobs without breaks.

For more detailed troubleshooting or persistent issues, please refer to the official User Manual PDF linked in the Support section or contact KODAK customer support.

SPECIFICATIONS

Feature	Specification
Product Dimensions	4"D x 7"W x 3"H
Model Number	CAR-PD460Y
Controller Type	iOS, Android (via App)
Maximum Media Size	4x6 inches
Print Media	Glossy photo paper
Connectivity Technology	Wireless, Bluetooth, USB Type C
Printing Technology	4PASS Dye Sublimation
Maximum Color Print Resolution	1200 x 1200 dpi
Item Weight	4.4 pounds (2 Kilograms)
Manufacturer	Prinics Co., Ltd.

WARRANTY AND SUPPORT

The KODAK Dock Plus 4PASS Instant Photo Printer comes with a Limited Warranty. For specific details regarding warranty coverage, please refer to the documentation included with your product or contact KODAK customer support.

Official User Manual (PDF): For comprehensive instructions and detailed information, you can access the official user manual [here](#).

Protection Plans: Extended protection plans are available for purchase to cover your device beyond the standard warranty period. Options include 3-Year and 4-Year Protection Plans, as well as a Complete

Protect plan.

For customer support, please visit the official KODAK website or refer to the contact information provided in your product packaging.